


825A

Differential Voltmeter

Instruction Manual

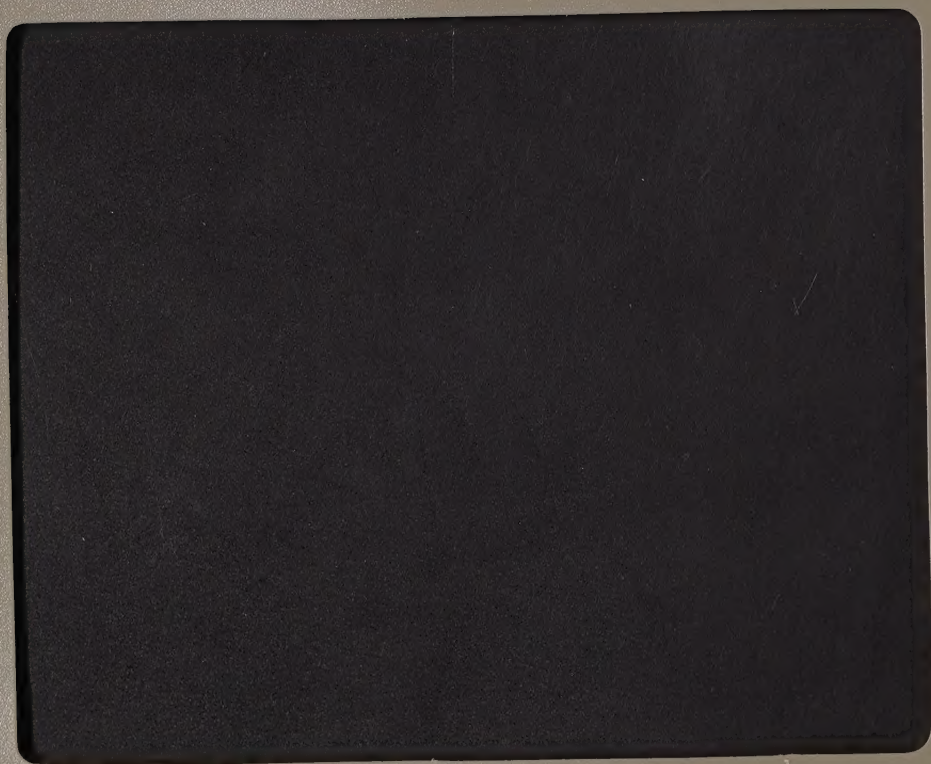



825A

Differential Voltmeter

Instruction Manual

P/N 294157
June 1962



WARRANTY

Notwithstanding any provision of any agreement the following warranty is exclusive:

The JOHN FLUKE MFG. CO., INC., warrants each instrument it manufactures to be free from defects in material and workmanship under normal use and service for the period of 1-year from date of purchase. This warranty extends only to the original purchaser. This warranty shall not apply to fuses, disposable batteries (rechargeable type batteries are warranted for 90-days), or any product or parts which have been subject to misuse, neglect, accident, or abnormal conditions of operations.

In the event of failure of a product covered by this warranty, John Fluke Mfg. Co., Inc., will repair and calibrate an instrument returned to an authorized Service Facility within 1 year of the original purchase; provided the warrantor's examination discloses to its satisfaction that the product was defective. The warrantor may, at its option, replace the product in lieu of repair. With regard to any instrument returned within 1 year of the original purchase, said repairs or replacement will be made without charge. If the failure has been caused by misuse, neglect, accident, or abnormal conditions of operations, repairs will be billed at a nominal cost. In such case, an estimate will be submitted before work is started, if requested.

THE FOREGOING WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS, OR ADEQUACY FOR ANY PARTICULAR PURPOSE OR USE. JOHN FLUKE MFG. CO., INC., SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT, OR OTHERWISE.

If any failure occurs, the following steps should be taken:

1. Notify the JOHN FLUKE MFG. CO., INC., or nearest Service facility, giving full details of the difficulty, and include the model number, type number, and serial number. On receipt of this information, service data, or shipping instructions will be forwarded to you.
2. On receipt of the shipping instructions, forward the instrument, transportation prepaid. Repairs will be made at the Service Facility and the instrument returned, transportation prepaid.

SHIPPING TO MANUFACTURER FOR REPAIR OR ADJUSTMENT

All shipments of JOHN FLUKE MFG. CO., INC., instruments should be made via United Parcel Service or "Best Way" prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid and of adequate size. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT TO ORIGINAL PURCHASER

The instrument should be thoroughly inspected immediately upon original delivery to purchaser. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument is damaged in any way, a claim should be filed with the carrier immediately. (To obtain a quotation to repair shipment damage, contact the nearest Fluke Technical Center.) Final claim and negotiations with the carrier must be completed by the customer.

The JOHN FLUKE MFG. CO., INC., will be happy to answer all applications or use questions, which will enhance your use of this instrument. Please address your requests or correspondence to: JOHN FLUKE MFG. CO., INC., P.O. BOX 43210, MOUNTLAKE TERRACE, WASHINGTON 98043, ATTN: Sales Dept. For European Customers: Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands.

*For European customers, Air Freight prepaid.

John Fluke Mfg. Co., Inc., P.O. Box 43210, Mountlake Terrace, Washington 98043

ADDENDUM
FLUKE MODELS

801B, 803B, 803D, 821A, 823A, and 825

The DC Differential Voltmeter Calibration procedure is ammended to employ the Fluke Model 332A DC Voltage Calibrator in lieu of the several instruments listed in section IV of the manual.

Procedures included in the manual call for the use of an Eppley standard cell, a galvanometer, two silver contact push-button switches, two resistors, a precision voltage divider and a power supply. The procedure is complex, requiring four expensive standards, and introduces error possibilities if considerable care is not exercised in assembling the set-up.

The Fluke Model 332A DC Voltage Calibrator provides, in one instrument, a reliable 0.003% accuracy over the entire range of DC input of the test instrument.

Generally, operation of the Model 332A DC Voltage Calibrator involves simply connecting the input of the instrument under test to the Model 332A output and dialing the desired voltage level on the Model 332A. As an example, consider calibration of the Model 803B on its 50 volt range.

- a. Set the VOLTAGE RANGE dials of the Model 332A to 50 volts.
- b. Connect the Model 803B INPUT to the Model 332A OUTPUT.
- c. Set the Model 803B as follows:

RANGE	50
NULL	0.01
voltage readout dials	49.99 <u>10</u>

- d. Set the POWER switch of the Model 332A to STANDBY/RESET and then to ON.
- e. Null the Model 803B by adjusting 50 V DC ADJ control R323.

For more detailed operation procedures consult the instruction manual for the Model 332A DC Voltage Calibrator and the manual for the instrument under test.

TABLE OF CONTENTS

Section	Title	Page
I	INTRODUCTION AND SPECIFICATIONS	1-1
	1-1. Introduction	1-1
	1-2. Damage in Shipment	1-1
	1-3. Specifications	1-1
II	OPERATING INSTRUCTIONS	2-1
	2-1. Controls, Terminals and Indicators	2-1
	2-2. Zeroing Instructions	2-2
	2-3. Preliminary Operation	2-3
	2-4. Operation as a DC Differential Voltmeter	2-3
	2-5. Operation as A Conventional VTVM	2-3
	2-6. Measurement of Voltage Excursions About A Nominal Value.	2-4
	2-7. Recording Voltage Excursions	2-4
	2-8. Measurement of High Resistances	2-5
	2-9. Notes on Measuring Voltages	2-5
III	THEORY OF OPERATION	3-1
	3-1. General.	3-1
	3-2. DC Vacuum Tube Voltmeter.	3-2
	3-3. 0 to 500 Volt Reference.	3-3
	3-4. Polarity Switch	3-4
IV	MAINTENANCE	4-1
	4-1. General.	4-1
	4-2. Preventative Maintenance	4-1
	4-3. Troubleshooting	4-2
	4-4. Calibration	4-5
V	LIST OF REPLACEABLE PARTS	5-1
	5-1. General.	5-1
	5-2. How to Obtain Parts	5-1
VI	ACCESSORIES	6-1
	6-1. Precision Voltage Dividers	6-1
	6-3. Isolation Amplifier.	6-2
	WARRANTY	
	CIRCUIT DIAGRAM	



Digitized by the Internet Archive
in 2025

https://archive.org/details/manualsplus_07574

LIST OF ILLUSTRATIONS

Figure	Title	Page
Frontispiece	825A Precision DC Differential Voltmeter	Page
2-1	Controls, Terminals, and Indicators (sheet 1 of 2)	2-1
2-1	Controls, Terminals, and Indicators (sheet 2 of 2)	2-2
2-2	Recommended Null Settings	2-3
2-3	VTVM Ranges	2-4
3-1	825A Differential Voltmeter Block Diagram	3-1
3-2	Function of Polarity Switch	3-4
4-1	Chopper Cleaning	4-1
4-2	Troubleshooting (sheet 1 of 2)	4-2
4-2	Troubleshooting (sheet 2 of 2)	4-3
4-3	Tube Voltage Chart	4-4
4-4	Transistor Voltage Chart	4-5
4-5	Calibration Equipment	4-6
4-6	Adjustment Locations (sheet 1 of 2)	4-6
4-6	Adjustment Locations (sheet 2 of 2)	4-7
5-1	Final Assembly	5-2
5-2	Front Panel Assembly (sheet 1 of 2)	5-4
5-2	Front Panel Assembly (sheet 2 of 2)	5-5
5-3	Reference Supply Printed Circuit Board Assembly	5-7
5-4	Null Detector Assembly (sheet 1 of 2)	5-10
5-4	Null Detector Assembly (sheet 2 of 2)	5-13
5-5	Range Resistor Board Assembly	5-15
5-6	Kelvin-Varley Resistor Board Assembly	5-16



825A & 825A/AG



825AR & 825AR/AG

SECTION I

INTRODUCTION AND SPECIFICATIONS

1-1. INTRODUCTION

a. This instruction manual is for use with the 825A series Differential DC Voltmeters. The 825A voltmeters are available with either a standard cell or a Zener diode as the reference element. Models containing the Zener diode option are denoted by a /AG in the model number. Both the standard cell option and the Zener diode option are available in a cabinet model or a model designed to fit a standard 19 inch rack. Rack models are denoted by an R immediately following the 825A part of the model number.

b. The high accuracy, portability, and compactness of the 825A make this instrument ideal for the precise measurement of almost any DC voltage. Ease of operation, inherent protection from accidental overload, and high reliability contribute to the outstanding performance that assures suitability for both production line testing and precision laboratory measurements. This instrument is capable of being used as a vacuum tube voltmeter, as a precision potentiometer, and as a megohmmeter for measurement of high resistance. It can also be used to measure the excursions of a voltage about some nominal value. One feature that should be emphasized is that no current is drawn from the unknown source when balance is attained. Thus the determination of the unknown potential is independent of its source resistance. The 825A is basically used for measurements of DC voltages from 0 to 500 volts. However, high accuracy measurements to 30,000 volts DC are possible with precision voltage dividers especially designed for use with the Fluke Model 800 Series Differential Voltmeters. As additional features, this instrument contains a polarity switch for equal convenience in measuring positive or negative voltages and an adjustable recorder output which makes the 825A particularly useful for monitoring the stability of almost any DC voltage. Furthermore, the 825A meter has taut-band suspension which eliminates problems due to meter stickiness.

c. When used as a differential voltmeter, the 825A operates on the potentiometric principal. An unknown voltage is measured by comparing it to a known adjustable reference voltage with the aid of a null detector. An accurate standard for measurements is obtained by setting the reference supply with a standard cell for the 825A and 825AR and with a Zener diode for the 825A/AG and 825AR/AG. The known adjustable reference voltage is provided by a 500 volt DC power supply and five Kelvin-Varley decade resistor strings that are set accurately by five voltage readout dials. In this way, the 500 volts can be precisely divided into increments as small as 10 microvolts. The unknown voltage is then simply read from the voltage dials. In the highest null

sensitivity range, potential differences between the unknown and the reference voltage of only 0.001 volts will cause full scale meter deflection.

d. The instrument is normally supplied ready for use on 115 volts. Upon request, instruments are supplied for 230 volts operation. If it becomes desirable to convert from one mode of operation to the other, refer to the instruction decal on the back of cabinet models or on the cover in rack models.

1-2. DAMAGE IN SHIPMENT

Immediately upon receipt, thoroughly inspect for any damage that may have occurred in transit. If any damage is noted, follow the instructions outlined on the warranty page at the back of this manual.

1-3. SPECIFICATIONS

AS A PRECISION POTENTIOMETER

ACCURACY: $\pm 0.02\%$ of input voltage from 0.1 volt to 500 volts. $\pm (0.02\% + 25 \text{ uv})$ below 0.1 volt.

RANGE

Input Voltage Range	Recommended Null Range*	Input Resistance per volt of input voltage	
		At Null	1% of Full Scale Off Null
50-500	10-0-10	Infinite	100 Meg
	1-0-1	Infinite	1,000 Meg
5-50	1-0-1	Infinite	1,000 Meg
	0.1-0-0.1	Infinite	10,000 Meg
0.5-5	0.1-0-0.1	Infinite	10,000 Meg
	0.01-0-0.01	Infinite	100,000 Meg
0-0.5	0.01-0-0.01	Infinite	100,000 Meg
	0.001-0-0.001	Infinite	100,000 Meg

*Any null range may be used with any input voltage range; recommended ranges are those most useful.

RESOLUTION: Voltage Readout Dial Resolution

Range Setting	Null Setting	Resolution
500	any	10 mv
50	any	1 mv
5	any	0.1 mv
0.5	any	0.01 mv

Meter Resolution
(1/4 of a small scale meter division)

Range Setting	Null Setting	Resolution
any	10	50 mv
any	1	5 mv
any	0.1	0.5 mv
any	0.01	0.05 mv
any	0.001	0.005 mv

AS A VACUUM TUBE VOLTMETER

ACCURACY: 3% on all ranges

RANGE:

Voltage Ranges	Input Resistance
500-0-500	50 Meg
50-0-50	50 Meg
5-0-5	50 Meg
0.5-0-0.5	50 Meg
10-0-10*	10 Meg
1-0-1*	10 Meg
0.1-0-0.1*	10 Meg
0.01-0-0.01*	10 Meg
0.001-0-0.001*	1 Meg

*These ranges are obtained by using Null ranges with all five voltage readout dials set to 0.

GENERAL SPECIFICATIONS

REGULATION AND STABILITY OF 500 VOLT SUPPLY:

±0.0025% for a ±10% line change.
±0.005% per hour after 30 min. warmup.

STABILITY OF METER ZERO:

±0.25% of full scale for a ±10% line change.

OPERATING TEMPERATURE RANGE:

Model 825A and 825AR (Standard cell reference element). Within DC accuracy specifications from 55°F to 95°F, derated at 0.001%/°F outside these limits to 35°F and 110°F.

Model 825A/AG and 825AR/AG (Zener diode reference element). Within DC accuracy specifications from 55°F to 95°F, derated at 0.001%/°F outside these limits to 0°F and 125°F.

RELATIVE HUMIDITY:

Within specifications from 0 to 80% relative humidity.

SHOCK AND VIBRATION:

Meets requirements of MIL-T-945A.

INPUT POWER:

115/230 VAC ±10%, 50 - 440 cps, approximately 60 watts.

DIMENSIONS:

Cabinet Model - 13" high, 9-3/4" wide, 14" deep.
Rack Model - 7" high, 19" wide, 14" deep.

WEIGHT:

Cabinet Model - 22 lbs.
Rack Model - 19 lbs.

SECTION II

OPERATING INSTRUCTIONS

2-1. CONTROLS, TERMINALS, AND INDICATORS

The location, circuit symbol, and a functional description of external controls, terminals, and indicators on

the 825A Precision Differential DC Voltmeter may be found in figure 2-1.

CONTROLS TERMINALS AND INDICATORS	LOCATION	CIRCUIT SYMBOL	FUNCTIONAL DESCRIPTION
Input terminals	Front panel	J1, J3	Provided for connecting DC voltage to be measured.
Chassis ground terminal	Front panel	J2	Provided for grounding purposes. A 0.47 uf capacitor is connected from the lower input binding post to the chassis ground post. The upper input post should never be connected to the chassis ground post. Since the instrument is equipped with a three-wire line cord with the third wire fastened to the chassis, the external circuit should be checked for conflicts in grounding before connecting lower input binding post (middle post) to the chassis post.
Power toggle switch	Front panel	S1	Applies AC line voltage to the primary circuit of the power transformer.
OPERATE-CALIBRATE switch	Front panel	S4	Remains in the OPERATE position at all times except when it is necessary to calibrate the internal 500 volt DC reference supply. When held in the CALIBRATE position, a representative sample of the reference voltage is compared to the voltage of an internal standard cell, or Zener diode for the /AG models, and any difference is indicated on the meter.
CALIBRATE control	Front panel	R2	Varies the output of the 500 volt DC reference supply. When the OPERATE-CALIBRATE switch is held in the CALIBRATE position, the reference supply is accurately set by adjusting the CALIBRATE control for zero meter deflection.
RANGE switch	Front panel	S2	Selects desired voltage range. Full scale voltage ranges of 500, 50, 5, and 0.5 volts are available.

Figure 2-1. CONTROLS, TERMINALS, AND INDICATORS. (Sheet 1 of 2)

CONTROLS TERMINALS AND INDICATORS	LOCATION	CIRCUIT SYMBOL	FUNCTIONAL DESCRIPTION
NULL switch	Front panel	S3	Set to VTVM for determining the approximate value of unknown voltage prior to differential measurements. Five null voltage ranges of 10, 1, 0.1, 0.01, and 0.001 volts are used for differential measurements. These ranges represent full scale differences between the unknown voltage and the amount of precision internal reference voltage that is set on the voltage readout dials.
A, B, C, D, and E voltage readout dials	Front panel	S6, S7, S8, S9, S10	Provide an in- line readout of the amount of internal reference voltage necessary to null the unknown voltage.
Decimal lights	Front panel	DS1, DS2, DS3, DS4	Serve as decimal points for the voltage readout dials. A different light illuminates for each position of the RANGE switch.
Polarity switch	Front panel	S5	Changes polarity of 825A to match polarity of unknown voltage. With this switch in the positive position, the polarity of the upper input binding post is positive with respect to the lower input binding post (middle post).
Output terminals	Rear panel	J4, J5	Provided for attaching a recorder to monitor voltage excursions.
Output level control	Rear panel	R1	Varies the output level of the output binding post from 0 to approximately 20 millivolts full scale deflection.
Meter	Front panel	M1	Indicates approximate voltage when 825A is in VTVM mode and difference between unknown and internal reference voltage when 825A is in differential mode. The upper scale, 500-0-500, is used when the NULL switch is set to VTVM. At all other times, the lower scale, 1-0-1, is used.
Mechanical zero control	Meter case	None	Sets meter to zero mechanically. This adjustment should be used only after instrument has been turned off for at least three minutes or when the meter terminals have been shorted.
Fuse	Rear panel of 825A, front panel of 825AR	F1	Fuse holder protrudes from instrument to provide easy access to the fuse.

Figure 2-1. CONTROLS, TERMINALS, AND INDICATORS. (Sheet 2 of 2)

2-2. ZEROING INSTRUCTIONS

From time to time, it may be necessary to adjust the internal meter zero control. This will normally be done at somewhat more frequent intervals than regular

calibration for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628. For later instruments, it should only be necessary to adjust the internal meter zero control during regular calibration. Proceed as follows:

a. Mechanically zero the meter with the adjustment screw on the front of the meter case. If the instrument is in the case, it must be shut off for at least three minutes prior to this adjustment. If out of case, another method would be to short out the meter terminals prior to zeroing.

b. Set power switch to ON and allow a 20 minute warmup period.

c. Set RANGE switch to 5 or 0.5 volts, voltage readout dials to zero, and NULL switch to 0.001 volt.

d. Adjust R212 (R232 for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628), VTVM ZERO ADJ, for zero meter deflection. This control may be reached through the ventilation holes in the cabinet model (see figure 4-6). In the rack model, an identified access hole is provided on the rear panel. If the meter cannot be zeroed for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628, clean chopper as outlined in paragraph 4-2d.

2-3. PRELIMINARY OPERATION

The following procedure prepares the voltmeter for operation.

a. Connect power plug to a 115 volt AC power source. If instrument has been wired for 230 volt operation, connect to 230 volts AC.

NOTE

The round pin on polarized three-prong plug connects instrument case to power system ground. Use a three-to-two pin adapter when connecting to a two-contact receptacle. For personnel safety, connect short lead to suitable ground.

b. Set controls on 825A voltmeter as follows:

RANGE	500 volts
NULL	VTVM
polarity	+ (positive)
all voltage readout dials	0 (zero)
power	ON

c. After a warmup period of at least ten minutes, advance OPERATE-CALIBRATE switch against spring tension to CALIBRATE, and adjust internal 500 volt DC reference supply with CALIBRATE control for zero meter deflection. Release OPERATE-CALIBRATE switch.

2-4. OPERATION AS A DC DIFFERENTIAL VOLT-METER

a. After completing preliminary operation, connect unknown voltage to input binding posts. If one side is grounded, always connect it to the lower input post (middle post).

b. Turn RANGE switch to lowest range that will allow an on-scale reading and note approximate value of un-

known voltage as indicated on upper meter scale.

c. If meter reads to the left, turn polarity switch to the negative position. The meter needle will deflect to the right. This is because polarity of unknown voltage is negative.

d. Noting the position of illuminated decimal light, set five voltage readout dials to approximate voltage determined in step b. For example, if approximate voltage is 35 volts, the decimal light between the B and C voltage readout dials will be illuminated. Therefore, set A dial to 3, B dial to 5, and C, D, and E dials to 0.

e. Set NULL switch to successively more sensitive null ranges, as indicated in figure 2-2, and adjust voltage readout dials for zero meter deflection in each null position. When the meter needle indicates to the right, the voltage under measurement is greater than the voltage set on the voltage readout dials. When the indication is to the left, the voltage is less than that set on the readout dials.

INPUT VOLTAGE RANGE	*RECOMMENDED NULL SETTING
50-500	10 then 1 (then 0.1 for voltages from 50 to 100 volts)
5-50	1 then 0.1 (then 0.01 for voltages from 5 to 10 volts)
0.5-5	0.1 then 0.01 (then 0.001 for voltages from 0.5 to 1 volt)
0-0.5	0.01 then 0.001
*Any null range may be used with any input voltage range; recommended settings are those most useful.	

Figure 2-2. RECOMMENDED NULL SETTINGS

f. Read unknown voltage directly from the five voltage readout dials.

2-5. OPERATION AS A CONVENTIONAL VTVM

If it is desired to use the instrument as a VTVM only, additional ranges can be made available by converting the NULL ranges to VTVM ranges. This is made possible by setting the voltage readout dials to zero. Proceed as follows:

a. Perform preliminary operation procedures as stated in paragraph 2-3.

b. Consult figure 2-3, and select full scale voltage deflection desired. If the approximate value of the voltage to be measured is unknown, select the 500 volt range initially.

c. Set RANGE switch, NULL switch, and voltage dials as indicated for the range selected.

d. Connect voltage to be measured to input binding posts. Deflection to the right indicates that unknown DC voltage is of positive polarity.

e. Read voltage from upper or lower scale as listed in figure 2-3.

FULL-SCALE DEFLECTION	RANGE SWITCH	NULL SWITCH	VOLTAGE DIALS	METER SCALE	
DC	500-0-500	500	VTVM	No effect	Upper
	50-0-50	50	VTVM	No effect	Upper
	5-0-5	5	VTVM	No effect	Upper
	0.5-0-0.5	0.5	VTVM	No effect	Upper
	10-0-10	No effect	10	All zero	Lower
	1-0-1	No effect	1	All zero	Lower
	0.1-0-0.1	No effect	0.1	All zero	Lower
	0.01-0-0.01	No effect	0.01	All zero	Lower
	0.001-0-0.001	No effect	0.001	All zero	Lower

Figure 2-3. VTVM RANGES

2-6. MEASUREMENT OF VOLTAGE EXCURSIONS ABOUT A NOMINAL VALUE

- a. Perform preliminary operation as stated in paragraph 2-3.
- b. Connect voltage to be observed to input binding posts. If meter reads to the left, the voltage being measured is negative; set polarity switch to the negative position in this case. This will cause meter pointer to deflect to the right.
- c. Set RANGE switch to lowest range which will give an on-scale meter indication and note nominal value of voltage indicated.
- d. Set the five voltage readout dials to nominal voltage.
- e. Turn NULL switch to lowest position that will allow voltage excursions to remain on scale.
- f. Read voltage excursions from meter. Note that full scale right and left meter deflections are equal to the NULL voltage setting. Meter deflection to the right indicates that the voltage under observation has increased above the nominal value while deflection to the left indicates it has decreased.

2-7. RECORDING VOLTAGE EXCURSIONS

- a. GENERAL. Recorder output binding posts and an output level control are provided on the 825A for monitoring the excursions of an unknown voltage from the voltage indicated by the voltage readout dial settings. If the leakage resistance between the recorder and ground is less than 10,000 megohms, the accuracy of the voltmeter will be impaired. Therefore, the FLUKE Model A88 Isolation Amplifier is recommended for this application. The A88 will allow the use of a wide range of strip chart recorders for recording the voltmeter reading without regard to the input isolation characteristics of the recorder.

- b. USE OF 825A WITH A88 AND A RECORDER. To use the A88 Isolation Amplifier and a recorder with the

825A, proceed as follows:

- (1) Set A88 POWER switch to ON.
- (2) When batteries are being used as a power source for A88, measure voltage at BATT TEST jacks. If voltage is between 11.7 and 14 volts DC, the batteries are satisfactory for use. However, if battery voltage is below 12.8 volts, batteries are approaching end of their useful life and should be replaced.
- (3) Connect output terminals of differential voltmeter to INPUT terminals of isolation amplifier with teflon leads.
- (4) Connect OUTPUT terminals of isolation amplifier to recorder input terminals.
- (5) Perform preliminary operation as stated in paragraph 2-3.
- (6) Short input terminals of 825A and set switches as follows:

polarity	+ (positive)
RANGE	50
NULL	10
voltage readout dials	10.000

The 825A meter will indicate full scale. This provides up to a maximum of at least 18 millivolts at the output terminals depending on setting of the output level control.

- (7) Turn on recorder and set recorder gain so that a recorder input of either ± 2 volts or near maximum if maximum is below ± 2 volts will cause recorder deflection desired for full scale deflection of differential voltmeter.
- (8) Adjust output level control on differential voltmeter until recorder deflection obtained is that desired to correspond to full scale deflection of the differential voltmeter.

- (9) Remove short from input terminals of the 825A. The voltmeter and recorder are now ready for recording the measurement of voltage excursions about a nominal value. Proceed as instructed under paragraph 2-6.

- c. USE OF 825A WITH A RECORDER. To use a

recorder with the 825A, proceed as follows:

- (1) Connect 825A output terminals to input terminals of recorder with teflon leads.

CAUTION

Do not ground either of the 825A recorder output terminals or either of the recorder input terminals. If any of these terminals are grounded, current will be drawn from the 825A Kelvin-Varley voltage divider and the 825A will no longer be accurate.

- (2) After connecting the recorder, perform preliminary operation as stated in paragraph 2-3.

- (3) Check for excessive leakage as follows:

(a) Connect a DC voltage to the input of the 825A and differentially measure its potential in a recommended null range.

(b) Alternately connect and disconnect the recorder leads from the output terminals of the 825A while noting the meter needle deflection. More than one-quarter of a small scale division deflection indicates that excessive leakage has been introduced by the recorder. This will impair the accuracy of the 825A voltmeter.

- (c) Disconnect the voltage.

(4) After the leakage test has been successfully completed, short input terminals of 825A.

- (5) Set switched on 825A voltmeter as follows:

polarity	+ (positive)
RANGE	50
NULL	10
voltage readout dials	10.000

The 825A meter will indicate full scale deflection. This provides up to at least 18 millivolts at the output terminals depending on the setting of the output level control.

(6) Turn output level control until recorder deflection obtained is that desired to correspond to full scale deflection of 825A.

(7) Remove short from input terminals of 825A. The 825A and recorder are now ready for combined use. Proceed as instructed under paragraph 2-6.

2-8. MEASUREMENT OF HIGH RESISTANCES

One of the important features of the 825A voltmeter is its ability to be used as a megohmmeter for rapidly measuring high resistances from 1 megohm to 250,000 megohms. The following equation may be used to compute the resistance in megohms of an unknown connected to the input binding posts:

$$R_x = 10 \left(\frac{E}{E_m} - 1 \right) \text{ megohms,}$$

where:

- R_x = unknown resistance in megohms
 E = voltage indicated by voltage readout dials
 E_m = voltage indicated on meter
 10 = megohms of input resistance of VTVM circuit on 10, 1, and 0.1 null range.

When connecting the unknown resistance to the input terminals, use short isolated leads to prevent measuring leakage resistance between the leads.

a. FROM 1 MEGOHM TO 490 MEGOHMS. For rapid measurement of resistances from 1 megohm to 490 megohms, proceed as follows:

- (1) Perform preliminary procedure as stated in paragraph 2-3.

- (2) Set RANGE switch to 500 and NULL switch to 10.

- (3) Connect unknown resistance between input terminals.

- (4) Adjust voltage readout dials for full scale meter deflection.

- (5) Subtract 10.00 from the amount set on the voltage readout dials to find the resistance of the unknown in megohms.

b. FROM 490 MEGOHMS TO 5000 MEGOHMS. For rapid measurements, of resistances from 490 to 5000 megohms, proceed as follows:

- (1) Perform preliminary procedure as stated in paragraph 2-3.

- (2) Set RANGE switch to 500 and NULL switch to 1.

- (3) Connect unknown resistance between input terminals.

- (4) Adjust voltage readout dials for full scale meter deflection.

- (5) Subtract 1.00 from the amount set on the voltage readout dials and multiply the result by 10 to find the resistance of the unknown in megohms.

c. FROM 5,000 MEGOHMS TO 50,000 MEGOHMS. For rapid measurements, of resistances from 5,000 to 50,000 megohms, proceed as follows:

- (1) Perform preliminary procedure as stated in paragraph 2-3.

- (2) Set RANGE switch to 500 and NULL switch to 0.1.

- (3) Connect unknown resistance between input terminals.

- (4) Adjust voltage readout dials for full scale meter deflection.

- (5) Multiply the amount set on the voltage readout dials by 100 to find the resistance of the unknown in megohms.

d. FROM 50,000 MEGOHMS to 250,000 MEGOHMS. To determine the value of an unknown resistance between 50,000 megohms and 250,000 megohms, proceed as follows:

- (1) Perform preliminary procedure as stated in paragraph 2-3.

- (2) Set RANGE switch to 500 and NULL switch to 0.1.

- (3) Connect unknown resistance between input terminals.

- (4) Adjust voltage readout dials for a convenient meter deflection.

- (5) The resistance in megohms may be calculated by substituting the meter reading in volts (E_m , 0 to 0.1 volt on bottom scale) and the voltage readout dial setting (E) into the following equation:

$$R_x = 10 \frac{E}{E_m} \text{ megohms}$$

2-9. NOTES ON MEASURING VOLTAGES

a. ADJUSTMENT OF 500 VOLT SUPPLY. The 500 volt DC reference supply may be adjusted (paragraph 2-3, step c) at any time deemed necessary without heed to the position of the switches and without removing any

input or output connections. However, until the instrument has warmed up to an equilibrium temperature (about 1/2 hour), it should be adjusted prior to each specific measurement for best accuracy. When making prolonged measurements, allow one hour warmup time to insure that 500 volt reference supply does not shift during the final warmup phase.

b. **GROUND LOOP PRECAUTIONS.** Ground loop currents should be avoided to assure accuracy when making measurements. Potential differences are often found at different points on power system grounds. When this is the case, current may flow from the power system ground through the 825A and the equipment under measurement and back to the power system ground. To avoid this when system being measured is grounded, do not connect 825A input binding posts to chassis ground post.

c. **USE OF SHORTING LINK.** A 0.47 uf capacitor (C1) is connected from the lower input binding post to the chassis ground post to reduce the effect of circulating AC currents from the transformer. In some cases, it is possible for C1 to acquire a charge. For example, C1 will become charged through leakage resistance over a period of time, if there is no external connection to the input terminals and the controls are set as follows: range to 500, null to any null range, polarity to +, and voltage readout dials to several hundred volts. This condition may cause an error on low level measurements (under 5 volts) due to C1 discharging through the Kelvin-Varley divider. Connecting the shorting link from the lower input post to the ground post will discharge C1 and thus prevent an inaccurate indication.

d. **RECOMMENDED NULL RANGES.** Certain null ranges are recommended for use with each setting of the RANGE switch for the following reasons. With the RANGE switch at 500 volts, the last voltage readout dial (E) changes the reference voltage in steps of 0.01 volt. Therefore, the unknown voltage would have to be an exact multiple of 0.01 volt if a null is to be obtained on the 0.1, 0.01, or 0.001 volt NULL range. Furthermore, it is unlikely that an unknown voltage of a few hundred volts will be stable within 10 millivolts. Finally, the regulation of the reference supply is approximately 0.0025%, or ± 0.0125 volt for a 10% change in line voltage. Although this is more than adequate when the instrument is used in the recommended way, a badly fluctuating line voltage may cause the 825A to meter

the regulation of its own 500 volt reference supply. For example, when measuring 500 volts, a line change of 10% may cause the 500 volt reference supply to change as much as 12.5 mv. Although this is small, the 825A will indicate full scale for a change as little as 100 mv, 10 mv, or 1 mv if attempting to use the 0.1, 0.01, or 0.001 null ranges.

e. **EFFECT OF AC COMPONENTS.** An AC component of several times the unknown DC may be present on the unknown and the 825A will always indicate well within the specifications for frequencies over a few hundred cycles. An AC component may have an adverse effect if it is of a low frequency or if it has a frequency that is a multiple or submultiple of the chopper frequency. A double section low pass filter (R201, C201, R202, and C202) is used at the input of the null detector to reduce any AC present on the DC being measured. At lower frequencies, this low pass filter is less effective and the magnitude of the AC component is more significant. If this frequency is below 100 cycles, the accuracy may no longer be with specifications. For example, a 60 cycle AC voltage that is 10% of the input voltage will cause an error of approximately 0.001% which is well within the specifications. Also, since the input attenuation is less for the more sensitive null settings, the accuracy may be affected only on the more sensitive null settings. When the frequency is very close to a multiple or submultiple of the chopper frequency (approximately 94 cycles), the meter needle will oscillate at the difference frequency. If AC components that affect the accuracy are ever encountered, additional filtering will be required. For an AC of a single frequency, a twin-T filter is effective and has the advantage of low total series resistance. For an AC variable frequency, an ordinary low pass filter may be used. In either case, high quality capacitors of high leakage resistance should be used.

f. **MEASUREMENT OF NEGATIVE VOLTAGES.** Because of a polarity switch, voltages which are negative with respect to ground as well as the more commonly encountered positive voltages may be measured with equal facility. If the upper input post is connected to the metal case, either at the 825A or at the source under measurement, the accuracy of the voltmeter may be reduced. However, with the polarity switch, the upper input post never has to be connected to ground. If the unknown voltage is grounded, always connect the grounded side to the lower input post (middle post) and use the polarity switch to obtain the proper result.

SECTION III

THEORY OF OPERATION

3-1. GENERAL

a. Figure 3-1 shows the block diagram for the 825A Differential Voltmeter. As seen in this figure, the circuit is mainly composed of a sophisticated DC vacuum tube voltmeter (vtvm) and an extremely accurate 0 to 500 volt reference. The vtvm uses a null detector, an input attenuator, and a meter to obtain high sensitivity. The 0 to 500 volt reference uses a range divider and a Kelvin-Varley attenuator to make the output of a well regulated 500 volt DC power supply adjustable. Refer to the functional schematic following Section VI for more detail. This schematic is designed to aid in the understanding of circuit theory and troubleshooting. The signal flow is from left to right and the components are laid out in a functionally logical manner.

b. The overall operation of the voltmeter may be summarized as follows. To measure the approximate value of a DC voltage, the unknown voltage is connected directly across the DC vtvm input attenuator. This attenuator is set in such a way that the maximum voltage for each range is reduced to a signal of 1 millivolt. The 1 mv signal is applied to the null detector and causes 100 microamperes to flow through the meter for full scale deflection. To accurately measure a DC voltage, the unknown voltage is connected across the series combination of the vtvm and the 0 to 500 reference. The reference voltage is then adjusted with the five voltage readout dials until it matches the unknown voltage as indicated by the vtvm.

c. In order to provide for a more complete understanding of the 825A voltmeter, the following paragraphs describe each section of the circuit in detail.

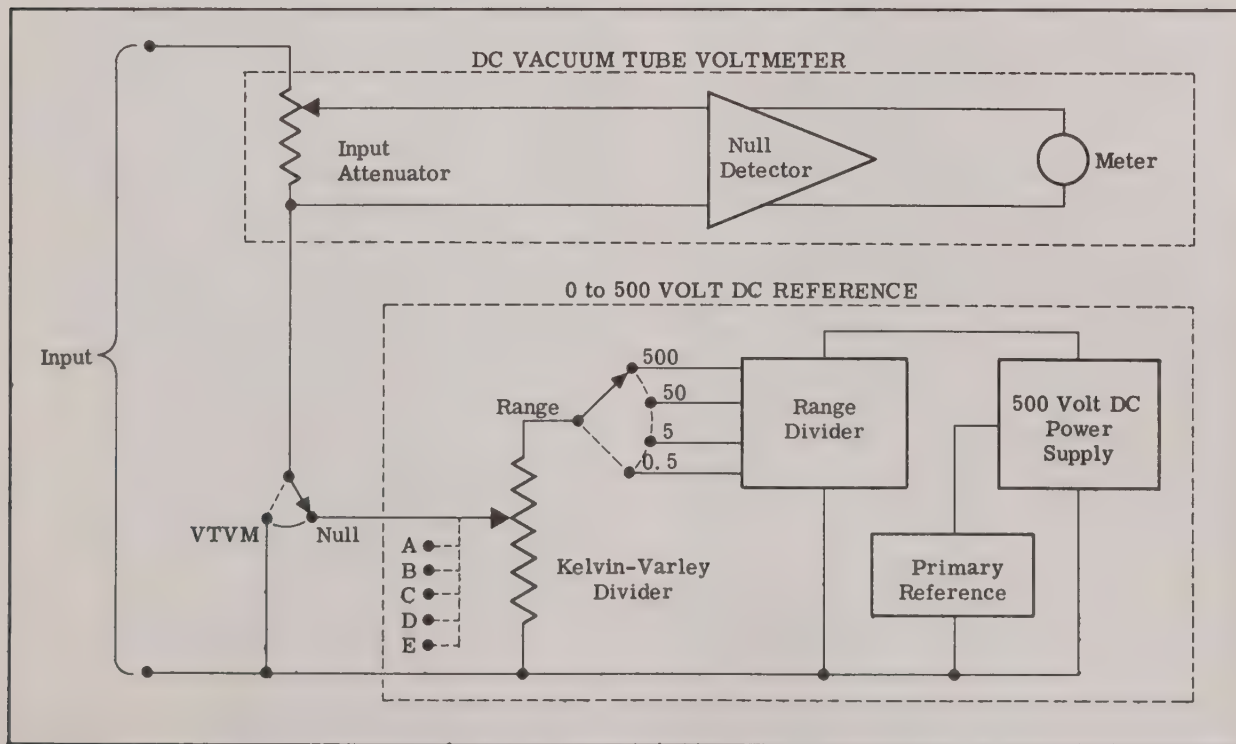


Figure 3-1. 825A DIFFERENTIAL VOLTMETER BLOCK DIAGRAM

3-2. DC VACUUM TUBE VOLTMETER

a. GENERAL. The DC vtm is composed of an attenuator, a null detector, and meter. The heart of the DC vtm is the null detector in which the DC signal is modulated, amplified, rectified, and finally filtered to produce a DC output. The null detector has a high amount of negative current feedback. This makes the output current approximately equal to the signal voltage divided by the impedance of the feedback network, regardless of the amplifier characteristics. The high negative feedback also makes the amplifier relatively insensitive to the gain changes in individual stages due to aging and replacement. The output current from the null detector is indicated on a meter that has tautband suspension. This suspension does away with all friction associated with meter pivot stickiness. Thus, any tendency for the meter pointer to stick at one point of the scale and then jump to another point is eliminated. The attenuator is used to reduce the voltage span of each range to a common range usable by the null detector to produce proper meter deflection.

b. NULL DETECTOR FOR 825A & 825A/AG SERIAL NOS. 123 TO 1705 AND 825AR & 825AR/AG SERIAL NOS. 123 TO 628. At the input to the null detector, R201, C201, R202, and C202 form a double section low pass filter that reduces any AC component present on the DC voltage being measured. The difference between the voltage appearing at the output of the filter and the voltage developed across the feedback network is converted to an alternating voltage by G1, an 83 cycle electro mechanical chopper. This chopped voltage is amplified by V202A, V202B, and V203A before passing through cathode follower V203B. During half the chopper cycle the output of the amplifier is clamped to approximate null detector common potential by G1 while during the other half the output is filtered by C212 to provide a DC current for the meter. The voltage developed across feedback network R220, R221, and R222 is proportional to the meter (output) current. When the chopper provides connection between contacts 1 and 9, this feedback voltage effectively reduces the magnitude of the voltage that is chopped and applied to the input of the amplifier. The impedance of the feedback network (R220, R221, and R222) is adjustable between 8.82 and 9.83 ohms. Since the output current is approximately equal to the signal voltage divided by the impedance of the feedback network, a 1 mv signal voltage indicates an output current of 101.7 to 113.4 ua. However, there is a loss due to finite amplifier gain and filtering that leaves the output current around 100 ua which can be set accurately by means of the feedback network. Thus, current feedback makes the output current essentially proportional to the signal voltage. For full scale deflection, a 1 mv signal voltage will cause 100 ua to flow through the meter.

c. NULL DETECTOR FOR 825A & 825A/AG SERIAL NUMBERS 1706 & ON, 825AR & 825AR/AG SERIAL NUMBERS 629 & ON. At the input to the null detector, R201, C201, R202, and C202 form a double section low pass filter that reduces any AC component present on the DC voltage being measured. The difference between the voltage appearing at the output of the filter and the voltage developed across the feedback network

is converted to an alternating voltage by V201 and V202, a series-shunt photochopper. The photochoppers are driven by an astable multivibrator operating at 84 cycles to prevent interference from line frequency pickup. The chopped voltage is amplified by solid state amplifier Q201 through Q205 before being delivered to demodulator photocell V203. During half the chopper cycle, the output of the amplifier is clamped close to null detector common potential by V203 while during the other half the output is filtered by R221 and C211 to provide a DC output. To prevent loading of the chopper amplifier, especially at high temperatures, the filtered output is fed to unity gain amplifier Q206 and Q207 which supplies the necessary meter current. The voltage developed across feedback network R203, R204, and R205 is proportional to the meter (output) current. When DS202 illuminates V202, its resistance drops from about 50M to 5K and the amplifier input is equal to the feedback voltage. When DS203 illuminates V201, its resistance drops from about 50M to 5K and the amplifier input is equal to the output voltage of the input filter. The impedance of the feedback network (R203, R204, and R205) is adjustable between 9.28 and 10.5 ohms. Since the output current is approximately equal to the signal voltage divided by the impedance of the feedback network, a 1 mv signal voltage indicates an output current of 95.1 to 108 ua. The output current is adjusted to 100 ua during calibration by means of the feedback network. Thus, current feedback makes the output current essentially proportional to the signal voltage. For full scale deflection, a 1 mv signal voltage will cause 100 ua to flow through the meter.

d. INPUT ATTENUATOR. In the vtm mode, four positions on the vtm attenuator selected by range switch section S2C provide the necessary reduction of the 500, 50, 5, and 0.5 volt ranges for proper null detector input. For this mode, the resistance of the attenuator and thus the input resistance of the 825A is 50 megohms (R301 through R310). In the differential mode, the voltage difference (unknown voltage minus reference voltage) is reduced by four positions on the vtm attenuator selected by null switch section S3C and S3D to give full scale deflections corresponding to inputs of 10, 1, 0.1, and 0.01 volts. For full scale deflection corresponding to 0.001 volt, the voltage across the attenuator is fed directly to the null detector. Although the resistance of the vtm attenuator is 10 megohms (R305 through R310) for the 10, 1, 0.1, and 0.01 volt null ranges and the one megohm (R306 through R310) for the 0.001 volt null range; this is not the input resistance of the 825A. The input resistance is determined by dividing the unknown terminal voltage by the current drawn from the unknown. The current drawn from the unknown is equal to the difference between the unknown terminal voltage and the internally known voltage divided by the resistance of the input attenuator. The equation for input resistance can therefore be written as:

$$R_{in} = \frac{E_u}{I_u} = \frac{E_u R_a}{|E_u - E|} = \frac{E_s (R_a + R_s)}{|E_s - E|} - R_s$$

where:

R_{in} = input resistance of voltmeter

E_u = $E_s - I_u R_s$ = terminal voltage of unknown

- I_u = current drawn from unknown
 E_s = source voltage of unknown
 R_s = source resistance of unknown
 R_a = resistance of input attenuator
 E = voltage indicated by voltage readout dials
 $| |$ = absolute value (magnitude only)

Since the reference voltage (E) is equal to the unknown voltage (E_u) and the source voltage (E_s) at null, no current is drawn from the unknown and the input resistance is therefore infinite.

e. **NULL DETECTOR POWER SUPPLY FOR 825A & 825A/AG SERIAL NOS. 123 TO 1705, 825AR & 825AR/AG SERIAL NUMBERS 123 TO 628.** The B+ supply for the null detector is obtained from a half-wave rectifier consisting of diode CR201 and a filter network (C213A, R227, and C213B) that is regulated by an OA2 tube (V204) and series dropping resistor R230. Divider resistors R228, R229, R231, and R232 and diode CR202 provide a compensating voltage for the purpose of adjusting the null detector to zero with R232 when there is no signal input. Diode CR202 keeps one side of R232 at approximately -0.6 volts DC with respect to the null detector common.

f. The filament of V202 and the chopper drive unit require a stable supply. This is obtained by using a filtered half-wave rectifier (CR203 and C214) that drives a Darlington connection of Q201 and Q202. A divider string R234 and R235 uses the B+ supply to obtain approximately 11.8 volts for pin-5 of V202 while pin-4 is maintained approximately 0 volts through the emitter-base junctions of Q201 and Q202. Any change in the half-wave rectifier voltage causes a corresponding change in the voltage across the emitter-collector junction of Q201 so that the filament and chopper voltage remain stable. The filament supply for V203 is obtained from an ordinary 6.3 volt AC winding.

g. **NULL DETECTOR POWER SUPPLY FOR 825A & 825A/AG SERIAL NOS. 1706 AND ON AND 825AR & 825AR/AG SERIAL NOS. 629 AND ON.** The +18 volt and -18 volt supply for the null detector is obtained from a center tapped voltage doubler consisting of R229, CR202, CR203, C213, and C214.

h. **EFFECT OF AC COMPONENTS.** The only AC voltage component that will reduce the accuracy of the 825A is one that either saturates the null detector or one that beats with the chopper frequency. Since the voltage required for saturation is greater than that required for beating, the null detector is most sensitive to an AC component with a frequency that is a sub-multiple or a low multiple of the chopper frequency. However, this is easy to detect because the meter will beat at the difference frequency. The low pass filter at the input of the chopper-amplifier will attenuate any AC component. The magnitude of the AC voltage appearing at the output of the filter depends on both its amplitude and frequency before filtering. For all practical purposes, one should never encounter any trouble above

a hundred cycles. Below this, the filter may not attenuate the AC component enough. However, this is not as bad as it appears. A 60 cycle AC voltage that is 1% of the input voltage will cause an error of approximately 0.001% which is well within specifications. If AC components that affect accuracy are ever encountered, additional filtering as set forth in paragraph 2-9 will eliminate the problem.

i. **GAIN AND ZERO ADJUSTMENTS.** For 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628, variable resistor R232 in the null detector power supply provides a means of adjusting the output current of the amplifier to zero when there is no input signal. For later instruments, variable resistor R212 provides a means of adjusting the output current of the amplifier to zero when there is no input signal by utilizing the negative bias voltage on the emitter of Q201 and the positive bias voltage on the emitter of Q205. The gain of the amplifier is adjusted by means of R205 (R222 for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628) in the feedback circuit.

j. **RECORDER OUTPUT.** The recorder output is picked off divider string R224, R1, and R225 (R225, R1, and R226 for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628). Output level control R1 provides a means of adjusting the output voltage up to a maximum of at least 18 millivolts at full scale deflection. The voltage at the output terminals is proportional to the meter reading.

3-3. 0 to 500 VOLT REFERENCE

a. **GENERAL.** When the 825A is used for differential voltage measurements, an internal voltage is nulled or matched against the unknown voltage. An extremely accurate reference voltage is therefore required. This is obtained from the 0 to 500 volt reference. The 0 to 500 volt reference is composed of a well regulated 500 volt power supply, a range divider, and a Kelvin-Varley five decade attenuator. The output of the 500 volt power supply is applied directly to the Kelvin-Varley attenuator for the 500 volt DC range. In the 50, 5, and 0.5 volt DC ranges, the range divider reduces the voltage to 50, 5, and 0.5 volts before it is applied to the Kelvin-Varley attenuator. The Kelvin-Varley attenuator divides its input voltage (500, 50, 5, or 0.5 volts) into 50,000 equal increments any number of which may be selected by setting the five decades with the voltage readout dials. The output of the Kelvin-Varley attenuator, therefore, provides an extremely accurate reference voltage.

b. **500 VOLT POWER SUPPLY.** The 500 volt power supply uses three diodes (CR101, CR102, and CR103) and a filter network (R105, R106, C101, and C102) to supply unregulated DC voltage to series passing tube V102. The voltage is regulated by comparing a sample of the output voltage tapped off a divider string (R119, R120, R121, and R2) with the voltage from reference tube V104 in differential amplifier V105. The output of V105 is fed to differential amplifier V106 which drives the grid of series passing tube V102. The control action of the differential amplifiers continuously adjusts the voltage drop across the series passing tube so as to keep the sample voltage equal to the voltage of the reference

tube. Any difference in voltage, the error, is amplified by V105 and V106 and thus changes the voltage drop across V102 to maintain the output at 500 volts.

c. For proper operation a highly stable and accurate balance of amplification must be maintained between the two halves of differential amplifier V105. The filament supply for V105 must be regulated to maintain this balance. A filtered half-wave rectifier (CR104 and C106) drives a Darlington connection of Q101 and Q102. A divider string, R101 and R102, uses the plate of V104 to maintain approximately 6.3 volts on pin-9 of V105 while pin-4 and pin-5 are maintained at approximately 0 volts through the emitter-base junctions of Q101 and Q102. Thus any change in the half-wave rectifier voltage causes a corresponding change in the voltage across the emitter-collector junction of Q101 so that the filament voltage of V105 remains stable.

d. RANGE DIVIDER. In the 500 volt range the output of the 500 volt supply is passed directly to the Kelvin-Varley attenuator by range section S2F. In the 50, 5, and 0.5 volt positions, range resistors (R320 through R330) selected by section S2E divide the reference voltage to 50, 5, and 0.5 volts before it is switched to the Kelvin-Varley attenuator by section S2F.

e. KELVIN-VARLEY ATTENUATOR. The five Kelvin-Varley decade resistor strings R401 through R455 and associated voltage dials A through E (S6 through S10) provide a means of making the four precision voltages (500, 50, 5, and 0.5) adjustable. Note that each string, with the exception of the first, parallels two resistors of the preceding string. Between the two wipers of S6 (voltage dial A) then, there is a total resistance of 40K (80K paralleled by 80K). With the range switch in the 500 volt positions, a total voltage of 100 volts will appear across these two wipers. Also, there will be 10, 1, and 0.1 volts across the wipers of S7, S8, and S9, respectively. Voltage dial E (S10) picks increments of 0.01 volt from the last decade. These voltages are reduced by a factor of 10 for each lower voltage range. The Kelvin-Varley resistors are matched for both temperature coefficient and tolerance thus providing an overall

attenuator accuracy of 0.005% absolute. With the null switch in any null range, the output of the Kelvin-Varley attenuator is connected in series with the vtvm attenuator thus providing the accurate 0 to 500 volts reference required.

f. ADJUSTMENTS. Variable resistor R121 is used during calibration to set the 500 volt supply to 500 volts with calibrate control R2 set at its center of rotation. This allows the reference supply to be adjusted to 500 volts by means of the calibrate control at any time deemed necessary. With the operate-calibrate switch held at calibrate, a fixed percentage of the 500 volt supply is compared to the precise potential of an internal standard cell or Zener diode (in the /AG models). Any difference in potential is fed to the null detector to give an indication on the meter so that the reference supply can be set with the calibrate control. The fixed percentage of the reference supply is set accurately during calibration by means of R318. The 50, 5, and 0.5 volt range resistor networks are set accurately during calibration by means of R323, R326, and R329.

3-4. POLARITY SWITCH

Because of the polarity switch S5, upper input post J1 should never be electrically connected to the 825A chassis, either at the 825A or at the source under measurement. As seen in figure 3-2, the polarity switch does not reverse the input posts. It reverses the meter and the internal reference supply. If the instrument did not contain a polarity switch, the grounded side of any unknown voltage that is negative with respect to ground would have to be connected to the upper input binding post. This would ground the upper post and effectively place C1 (a 0.47 uf capacitor) across the input terminals. Even if C1 was disconnected, there would still be considerable capacitance across the input due to transformer winding capacitance and stray wiring capacitance. With this capacitance across the circuit being measured several problems would arise. The polarity switch provides equal convenience in measuring positive or negative voltages without the occurrence of these problems.

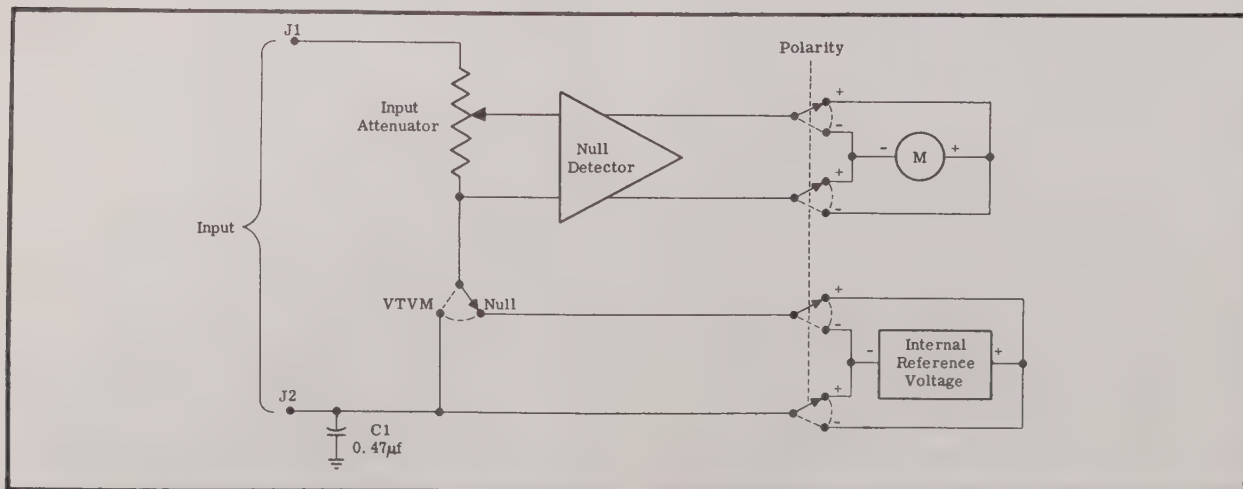


Figure 3-2. FUNCTION OF POLARITY SWITCH

SECTION IV

MAINTENANCE

4-1. GENERAL

The 825A Differential DC Voltmeter seldom requires any maintenance. Without extreme abuse, all that should be required is occasional cleaning, tube replacement, and calibration. Preventive maintenance consists only of preventing contamination of the chopper contacts (for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628) and any leakage as discussed in paragraph 4-2. A discussion of troubleshooting along with a troubleshooting chart, component location diagrams, and a tube voltage chart are provided in paragraph 4-3. Paragraph 4-4 delineates the equipment and procedures necessary to calibrate the instrument.

4-2. PREVENTATIVE MAINTENANCE

a. **LEAKAGE PREVENTION.** The accuracy of the 825A is adversely affected by excessive electrical leakage from the input of the null detector to either ground or the 500 volt reference supply. Special care has been taken to prevent leakage across certain critical switch wafers and areas of some printed circuit boards due to moisture from condensation. The printed circuit boards have been coated with Humi-Seal 1B12. The RANGE, NULL, OPERATE-CALIBRATE, and polarity switches have been dipped in Dow Corning silicone oil. Accumulations of dust and foreign matter will cause internal leakage, and should be removed as often as necessary, depending on environmental operating conditions.

b. To check for excessive electrical leakage, proceed as follows:

(1) Perform preliminary operation procedure as stated in paragraph 2-3.

(2) Set switches on 825A as follows:

RANGE	500
NULL	0.1
voltage readout dials	490.00

(3) Remove test leads from input posts.

(4) Excessive leakage is indicated if the meter deflects more than one-tenth of full scale.

c. To prevent excessive electrical leakage, proceed as follows:

(1) Blow the instrument out with low-pressure, clean, dry air to remove most accumulations of dust and foreign matter. Pay particular attention to the binding posts, binding post wiring, critical switches (NULL, RANGE, OPERATE-CALIBRATE, and polarity switches), and for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628, the two glass epoxy strips which insulate the null detector chassis from the main chassis.

(2) Clean the glass epoxy strips, binding posts,

insulators, and front panel with a rag saturated in anhydrous denatured ethyl alcohol.

(3) When necessary, wash all exposed dielectric surfaces of the NULL, RANGE, OPERATE-CALIBRATE, and polarity switches with denatured alcohol using a small, stiff-bristled brush.

CAUTION

Do not use Metriclene, acetone, lacquer thinner, or any other methyl ethyl ketones, since they will react with the Lexan rotor on the CTS plastic switches.

(4) After washing, recoat the exposed switch insulating material with a solution of Dow Corning 200 having a viscosity between 5 and 20 centistokes. This prevents leakage due to moisture on these surfaces.

d. **CHOPPER CLEANING (FOR 825A & 825A/AG SERIAL NUMBERS 123 TO 1705 AND 825AR & 825AR/AG SERIAL NUMBERS 123 TO 628).** All electromechanical choppers accumulate some foreign matter on the contacts over a period of time. This contact contamination only presents a problem in low level amplifiers of the type used in the 825A. It can cause the zero to shift to such an extent that the null detector can no longer be zeroed with VTVM ZERO ADJ control R232. To clean the chopper contacts, proceed as follows:

(1) On cabinet models, remove screws at back of cabinet and slide instrument out of case. On rack models, remove screws holding cover to instrument and set cover aside.



Figure 4-1. CHOPPER CLEANING

(2) Remove chopper from null detector chassis assembly and unplug chopper drive unit.

(3) Remove two screws at top of chopper and slide cover off.

CAUTION

Never touch the chopper contacts. It is also good practice not to handle any interior parts.

(4) Immerse chopper in clean denatured alcohol until the contacts are just under the surface (figure 4-1) and then agitate the chopper for about a minute.

(5) After chopper is thoroughly dry, replace chopper cover and install in instrument.

NOTE

If the chopper drive unit is unplugged while the instrument is on, the chopper drive unit will not operate when reassembled. However, the chopper drive unit will operate if the instrument is turned off and then turned back on.

(6) Adjust VTVM ZERO ADJ control R323 for zero meter deflection after a 20 minute warmup period.

4-3. TROUBLESHOOTING

a. **GENERAL.** To assist in localizing most trouble which might occur, a troubleshooting chart (figure 4-2)

SYMPTOM	PROBABLE CAUSE	REMEDY
Drift of the 500 volt DC reference supply evidenced by the continual need for resetting with the CALIBRATE control.	V104, V105, or V106 defective. One of the sampling string resistors (R119, R120, R121) is changing value rapidly as the instrument warms up. Drifting standard cell EMF possibly caused by previous shorting or inverting of the cell (825A and 825AR only).	Check V104, V105, and V106 by replacement. Locate faulty resistor by heating slightly with a soldering iron held near the resistor while observing the 500 volt DC calibration. Allow time for the standard cell to stabilize. Several hours should be sufficient.
Cannot calibrate 500 volt DC reference supply. Meter cannot be brought to zero with CALIBRATE control.	Excessive aging of V104. Out of calibration. One or more resistors in 500 volt DC sampling string has shifted in value. Standard cell EMF has shifted (825A and 825AR only).	Check V104 by replacement. Recalibrate per paragraph 4-4. Recalibrate per paragraph 4-4 and observe stability for 48 hours. If 500 volt DC reference supply remains stable replacement of resistor is unnecessary. Recalibrate instrument and observe stability of reference supply. Replacement of the standard cell may be necessary.
Measurements are out of tolerance on one range other than the 500 volt range.	A reference supply output range resistor on the range resistor printed circuit board is out of tolerance.	If the trouble occurs in the 50 volt range, R324 has shifted; in the 5 volt range, R325 or R327 has shifted; in the 0.5 volt range, R328 or R330 has shifted. It may be possible to correct by recalibration. If not, replace faulty resistor.
Measurements are out of tolerance on all ranges other than the 500 volt range.	R320 or R321 has shifted in value.	It may be possible to correct all range voltages by recalibration. If not, replace faulty resistor.

Figure 4-2. TROUBLESHOOTING (Sheet 1 of 2)

SYMPTOM	PROBABLE CAUSE	REMEDY
Measurements are out of tolerance on any range when the Kelvin-Varley divider is dialed to any setting other than <u>499910</u> .	One of the Kelvin-Varley divider resistors is out of tolerance.	Measure the voltage drop across each Kelvin-Varley resistor with another John Fluke Differential Voltmeter. Begin by setting RANGE switch to 500 volts and the voltage readout dials to 499.910. Reference to the schematic diagram will show that there should be 100, 10, 1, 0.1, and 0.01 volts respectively across each resistor of the A, B, C, D, and E decades, except for the two resistors of each decade that are paralleled by the following decade. Across these two resistors, there should be 50, 0.5, and 0.05 volts, respectively. Voltage measurements should be within 0.01% of each other. Remember that if one resistor in a decade has increased or decreased appreciably, the voltage drop across all other resistors in the decade will be slightly affected also.
Instrument is out of specifications on all ranges.	Resistors R306, R307, R308 or R309 out of tolerance.	Check and replace faulty resistor.
Meter rattle, drift, or error is observed on all null ranges.	V202, V203, or V204 faulty. Chopper G1 faulty. 825A & A/AG 123 to 1705 825AR & AR/AG 123 to 628 Moisture or dirt on printed circuit boards or switches.	Check V202, V203, and V204 by replacement. Clean or replace chopper. Clean instrument.

Figure 4-2. TROUBLESHOOTING (Sheet 2 of 2)

lists the causes and remedies for a number of symptoms. Since failure of the 825A is usually due to tube failure, it is recommended that tube substitution be tried before any other tests are made. However, the 825A is conservatively designed and should require very infrequent tube replacement. At certain times, a check of the operating level voltages of the tubes (figure 4-3) and transistors (figure 4-4) is also useful. As an aid to troubleshooting, all components may be located by referring to the figures shown in Section V. An understanding of the theory of operation (Section III) and frequent reference to the functional schematic will be of great value in troubleshooting.

WARNING

Use extreme care when working inside the instrument while it is on. The null detector assembly and all components thereon will be at a voltage close to that indicated by the voltage readout dials.

b. **TUBE REPLACEMENT.** Many differential amplifier circuits are critical with respect to the balance between halves of differential amplifier tubes. This is especially true of the first stage of amplification. However, the 825A is designed with the ability to use any 12AX7 for V104 and V105 that meets standard EIA

(Electronics Industries Association) characteristics. Some output voltage drift of the 500 volt reference supply may be noted for the first few hours of operation. This drift will, in most cases, decrease to a small value after the tube has aged a bit. Occasionally a tube with a contaminated grid or extremely poor balance between halves will be found. This tube should be discarded. When replacing reference tube V104, the new tube should be aged at least 150 hours to realize the high order of stability inherent in the 825A. A tube that has been aged may be obtained by ordering an OG3-2 (116616) from Fluke.

c. Replacement of tubes will not normally necessitate complete recalibration of the 825A. If V202 or V203 is replaced for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628, calibrate the null detector as set forth in paragraphs 4-4b and 4-4c. Replacement of V102, V104, V105, or V106 will necessitate calibration of the reference supply per paragraphs 4-4b and 4-4d.

d. **COMPONENT REPLACEMENT.** Should it ever become necessary to replace a component on a printed circuit board (or on the null detector chassis for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628), proceed as follows:

(1) Clean soldered area around component with Methyl Ethyl Keytone.

(2) Remove part and install new component.

(3) Remove flux with du Pont Freon PC.

(4) Allow to dry for 10 minutes. When it is cool or humid, it may be necessary to place area under a lamp to ensure thorough drying.

(5) Coat any uncoated areas around R301 through R310 on the Range Resistor Printed Circuit Board and on 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628 around the input to the null detector chassis (tube V202, 5751, and chopper) with Humi-Seal 1B12.

(6) If a component at the input to the transistorized null detector (825A & 825A/AG serial numbers 1706 and on and 825AR & 825AR/AG serial numbers 629 and on) is replaced, make sure that all leads at the input wire - R201 junction, the R201 - R202 - DS201 - C201 junction, and the R202 - C202 - V201 junction are in physical contact with each other. Otherwise, thermal voltages may result that will degrade the performance of the instrument.

e. KELVIN-VARLEY RESISTOR REPLACEMENT. All the resistors of the first three decades (R401 to R406, R407 to R417, and R418 to R428) are matched and these three decades are matched for each instrument. If it becomes necessary to replace a Kelvin-Varley resistor, the instrument model and serial number as marked on the name plate and all information stamped on the resistor must be sent to Fluke along with the purchase order for the particular resistor needed. This ensures that a resistor compatible with the matched resistor group within the instrument is used. The Kelvin-Varley resistors are very stable and precise; resistance is clearly defined; therefore, they must be handled with care. This is especially true of the varnished-dipped-card resistors.

CAUTION

Pick up card resistors between ends of card. Never touch the wire on the cards as damage to the resistor could possibly result.

f. STANDARD CELL PROBLEMS. The standard cell in the Model 825A and 825AR deserves special consideration if it is suspected of being faulty:

(1) The standard cell used is a miniature unsaturated cell which has excellent long term stability and negligible temperature-voltage hysteresis. (Temperature-voltage hysteresis is the erratic behavior of the voltage while the cell is coming to equilibrium following a change in temperature). Under normal conditions this cell should last from 8 to 15 years. In rare instances, failure has occurred in less than 2 years. End of life is usually marked by an increase in temperature-voltage hysteresis effect. That is, reading errors in excess of 0.01% will result when the same voltage is read with the 825A hot and cold. The emf of different cells may vary as much as 0.05% and each instrument is calibrated to its own particular standard cell. Thus, when the standard cell is replaced, the 825A reference supply must be recalibrated as in paragraph 4-4d.

(2) Failure of the standard cell may occur if subjected to below freezing temperature. The electrolyte will start to freeze at about 5°F and operation below 32°F is definitely not recommended. The life of the cell will also be greater if the 825A is not operated at elevated temperature. The 8 to 15 year figure holds for operation of the instrument at normal room temperature, 72(±3)°F.

(3) The emf of the standard cell will change if the cell has been inverted, or if the cell has been inadvertently short-circuited. If the emf has changed, the 825A will naturally be out of calibration on all ranges. In either case, the cell will return to its original emf.

Symbol & Type	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V102, 6BQ5	No Conn.	495	500 (±3%)	Heater voltage 6.3 volts ac		No Conn.	680 to 730	No Conn.	680 to 730
V104, OG3	85 (±3%)	0	Int. Conn.	0	85 (±3%)	Int. Conn.	0	No Pin	No Pin
V105, 12AX7	217	84	86	Heater voltage 6.0 volts dc		217	84	86	See Pin 4 & 5
V106, 12AX7	495	217	220	Heater voltage 6.3 volts ac		500	217	220	
V202, 5751	60	-	0	Heater voltage 12 volts dc		100	-	1.5	No Conn.
V203, 6AW8	47	45	140	Heater voltage 6.3 volts ac		0.7	-	25	50
V204, OA2	150	0	Int. Conn.	0	150	Int. Conn.	0	No Pin	No Pin

This chart is to be used under the following conditions: (a) RANGE switch set to 500; (b) NULL switch set to VTVM; (c) all voltage readout dials set to zero; (d) line voltage at 115/230 volts, 50 - 440 cycles; and (e) all measurements made with a VTVM from negative binding post to specified terminal; (f) all voltages may vary by 20% unless otherwise indicated.

Figure 4-3. TUBE VOLTAGE CHART

TRANSISTOR	Q1	Q2	Q3	Q201	Q202	Q203	Q204	Q205	Q206	Q207
E	3.0	9.3	9.7	-0.45	-0.45	-0.45	0	0.58	-0.54	17.2
B	3.5	9.2	9.3	0	0	0	0.51	0.98	0	16.5
C	9.2	5.8	5.8	0	0	9.2	0.98	7.5	16.5	0

This chart is to be used under the following conditions: (a) voltages for transistors Q201 to Q207 apply to 825A & 825A/AG serial numbers 1706 and on and 825AR & 825AR/AG serial numbers 629 and on; (b) RANGE switch set to 500; (c) NULL switch set to VTVM; (d) all voltage readout dials set to zero; (e) polarity switch set to +; (f) line voltage at 115/230 volts, 50-440 cycles; (g) all measurements made with vtvm from negative binding post to specified terminal; and (h) all voltages may vary by 20% unless otherwise indicated.

Figure 4-4. TRANSISTOR VOLTAGE CHART

If the cell were inverted or shorted for only a few seconds, the 825A should be able to measure voltages within specifications after several hours recovery time.

g. DECIMAL LAMP REPLACEMENT. The decimal lamps are normal 6.3 volt pilot bulbs. To prolong their life these bulbs are operated from a 5 volt transformer winding. However, these bulbs do occasionally fail. To replace, proceed as follows:

(1) On cabinet models, remove screws at back of cabinet and slide instrument out of case.

(2) Remove four screws that hold front panel assembly to chassis.

(3) Being careful to avoid wiring damage, gently lift front panel assembly from instrument and set face down in front of instrument.

(4) Remove screws holding range resistor printed circuit board and Kelvin-Varley printed circuit board to front panel assembly.

(5) Push these printed circuit boards aside enough to allow access to pilot light holders.

(6) Remove pilot light holder from bracket by applying pressure to each side of holder.

(7) Remove cardboard light shield and replace pilot light.

(8) On rack models, remove screws holding cover to instrument and set cover aside.

(9) Remove pilot light holder from bracket by applying pressure to each side of holder.

(10) Remove cardboard light shield and replace pilot light.

h. CHOPPER DRIVE FREQUENCY ADJUSTMENT FOR 825A & 825A/AG SERIAL NUMBERS 1706 AND ON, 825AR & 825AR/AG SERIAL NUMBERS 629 AND ON. The chopper drive frequency needs to be adjusted only a few times during the life of the instrument. As neon lamps DS202 and DS203 age, their voltage will change slightly and cause the frequency to shift. This is especially true during the early life of the instrument. However, the chopper drive frequency needs to be adjusted only if a beating effect appears on the meter due to line frequency interference. Proceed as follows:

(1) Set controls on voltmeter as follows:

POLARITY	+ (positive)
NULL	.001
all voltage readout dials	0 (zero)

(2) Connect an oscillator to input of voltmeter through a capacitor of about 0.1 microfarads.

(3) Set oscillator for an output of 84 cycles.

(4) Adjust R226 until meter begins to beat and then adjust for zero beat.

4-4. CALIBRATION

a. GENERAL. The 825A can be calibrated as often as deemed necessary. However, it is recommended that the instrument be calibrated every 6 months. For special applications where extreme accuracy is required, it may be desired to calibrate the instrument more frequently. Calibration should be accomplished in a draft-free area with ambient temperature of 72 (± 3)° for maximum accuracy under typical laboratory operating conditions. Figure 4-5 lists the type of test equipment required for calibration along with the applicable specifications and recommended instruments. All controls may be located with the aid of figure 4-6.

b. PRELIMINARY CALIBRATION PROCEDURES

(1) Set 825A meter to zero with mechanical zero control

(2) Set switches on 825A as follows:

RANGE	500
NULL	VTVM
polarity	+ (positive)
all voltage readout dials	0 (zero)

(3) Set power switch to ON and allow 825A to warmup to equilibrium temperature (about 1/2 hour) inside its case. Meanwhile, proceed with step (4).

(4) Set up necessary equipment to provide DC voltages of 500, 50, 5, and 0.5 volts DC with an accuracy of 0.005%. Proceed as follows: turn on all test equipment and allow it to warm to equilibrium temperature (about 1/2 hour); set proper standard cell voltage on divider; apply 500 volts DC into divider from power supply; set divider to 500 and zero galvanometer by varying output of power supply; voltages of 500, 50, 5, and 0.5 volts DC are made available at output posts by merely changing position of voltage selector switch on voltage divider.

(5) Connect chassis ground binding post to line ground.

RECOMMENDED EQUIPMENT	SPECIFICATIONS REQUIRED
DC CALIBRATION: Fluke 301C or 301E Power Supply Saturated standard cell bank with an accuracy of $\pm 0.0025\%$ Voltage reference divider having division ratios of 1, 10, 100, and 1000 with an accuracy of $\pm 0.0025\%$ Galvanometer suitable for use with above voltage reference divider	The equipment used must provide 500, 50, 5, and 0.5 volts with accuracy of 0.005%.

Figure 4-5. CALIBRATION EQUIPMENT

c. NULL DETECTOR CALIBRATION

(1) Perform preliminary calibration procedure as stated in paragraph 4-4b.

(2) Adjust null detector ZERO ADJ control R212 (R232 for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628) until meter indicates zero.

(3) Apply 500 volts DC ($\pm 0.005\%$) to voltmeter.

(4) Adjust VTVM GAIN ADJ control R205 (R222 for 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628) for full scale deflection.

d. 500 VDC REFERENCE SUPPLY CALIBRATION

(1) Perform preliminary calibration procedure as stated in paragraph 4-4b.

(2) Center CALIBRATE control at its center of rotation.

(3) Set NULL switch to 10 and voltage readout dials to 499.910.

(4) Apply 500 volts DC ($\pm 0.005\%$) to voltmeter.

(5) Adjust 500V ADJ control R121 for a null.

(6) Set NULL switch to 0.1 volt.

(7) Null meter by adjusting CALIBRATE control.

(8) Advance OPERATE-CALIBRATE switch against spring tension to CALIBRATE and null meter by adjusting REF CAL ADJ control R318.

e. RANGE DIVIDER CALIBRATION

(1) Perform preliminary calibration procedure as stated in paragraph 4-4b.

(2) Set switches on 825A as follows:

RANGE	50
NULL	0.01
voltage readout dials	49.9910

(3) Apply 50 volts DC ($\pm 0.005\%$) to voltmeter.

(4) Null 825A meter by adjusting 50V DC ADJ control R323.

(5) Set RANGE switch to 5 volts.

(6) Apply 5 volts DC ($\pm 0.005\%$) to voltmeter.

(7) Null 825A meter by adjusting 5V DC ADJ control R326.

(8) Set RANGE switch to 0.5 volts.

(9) Apply 0.5 volts DC ($\pm 0.005\%$) to voltmeter.

(10) Null 825A meter by adjusting 0.5V DC ADJ control R329.

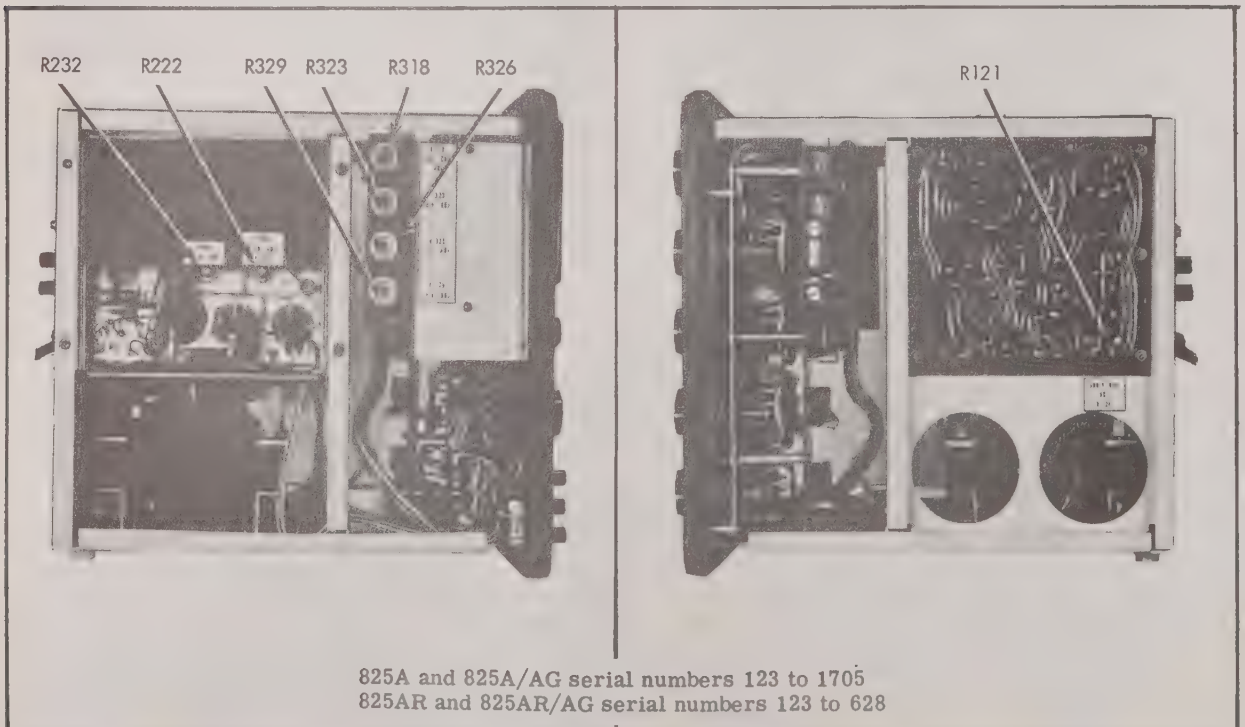


Figure 4-6. ADJUSTMENT LOCATIONS (sheet 1 of 2)

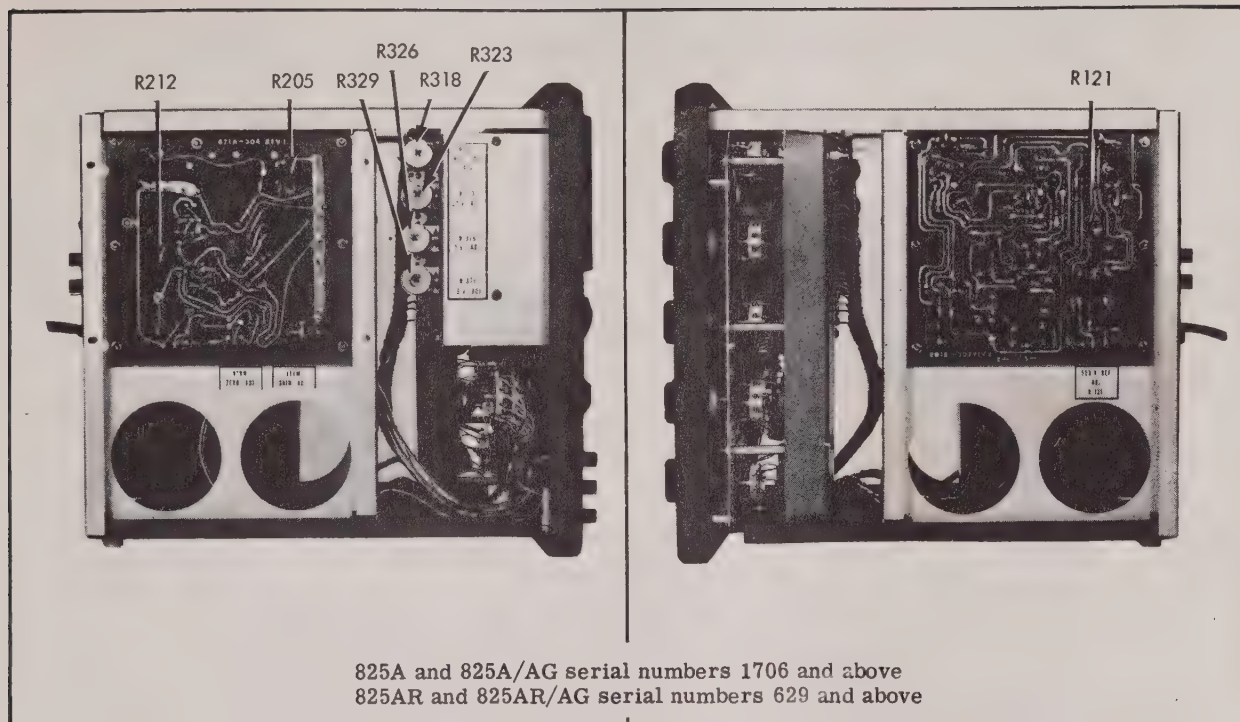


Figure 4-6. ADJUSTMENT LOCATIONS (sheet 2 of 2)

SECTION V

LIST OF REPLACEABLE PARTS

5-1. GENERAL

a. The following six assembly lists describe all normally replaceable parts of the Model 825A, 825AR, 825A/AG, and 825AR/AG Differential DC Voltmeters. Each list has a corresponding illustration on which the parts for that list are pointed out. Parts are called out on both lists and illustrations by reference designations from the schematic diagram. Those parts (mechanical) which have no reference designation are shown on the illustrations by Fluke stock number.

b. A Use Code column is provided to identify certain parts that have been added, deleted, or modified during production of the 825A. Each part for which a use code has been assigned may be identified with a particular instrument serial number by consulting the Use Code Effectivity List at the end of this section.

5-2. HOW TO OBTAIN PARTS

a. Standard components have been used whenever possible. Thus, most parts may be obtained locally. However, special components are used in some instances. All parts manufactured or altered by Fluke and all parts for which Fluke controls the design are designated by an asterisk preceding the Fluke stock number. All structural parts and special parts should be purchased from your local Fluke representative or from the factory.

b. When ordering parts always include:

(1) Reference designation, description, and Fluke stock number.

(2) Instrument model and serial number.

(3) Most structural parts are not listed. In this case, give complete description, function, and location for the part.

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Final Assembly (Cabinet model, standard cell option) (Rack model, standard cell option) (Cabinet model, zener diode option) (Rack model, zener diode option)	*825A *825AR *825A/AG *825AR/AG	
	Front Panel Assembly (See figure 5-2) Model 825A Model 825AR Model 825A/AG Model 825AR/AG	*138693 *138719 *138701 *138727	
	Reference Supply Board Assembly (See figure 5-3)	*801B-401 *135038	C D
	Null Detector Chassis Assembly (See figure 5-4)	*125229 *168807	AB AC
	Range Resistor Board Assembly (See figure 5-5) Model 825A Model 825AR Model 825A/AG Model 825AR/AG	*121145 *152876 *121202 *147074 *121152 *153494 *121228 *153502	M N M N M N M N
	Kelvin-Varley Resistor Board Assembly (See figure 5-6)	*134775	
C2	Capacitor, electrolytic, 15 uf -10/+150%, 6V	105700	E
CR1, CR2	Diode, silicon, 300 ma, 400 PIV	116111	E
F1	Fuse, 1 ampere, slow-blowing (for 115 volt operation) Fuse, 1/2 ampere, slow-blowing (for 230 volt operation)	109272 109322	
J4, J5	Binding post, black Binding post, red Binding post insulator, red (4 used) Binding post insulator, dual, black (2 used)	101204 104158 101188 135053	I J G H

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R1	Resistor, variable wirewound, 5K $\pm$ 10%, 2W	111583	
R3	Resistor, precision power (825A/AG and 825AR/AG. Optimum value is selected at factory to match Zener diode. When ordering, include information listed on Range Resistor Board decal).		
T1	Transformer, power Transformer, power Line cord, 3 wire Rubber foot Case Assembly (Cabinet model) Handle, flexible black vinyl, 5-1/2" (Cabinet model)	*801B-651 *135012 *161216 102822 101253 *134940 407-101	C AD AC

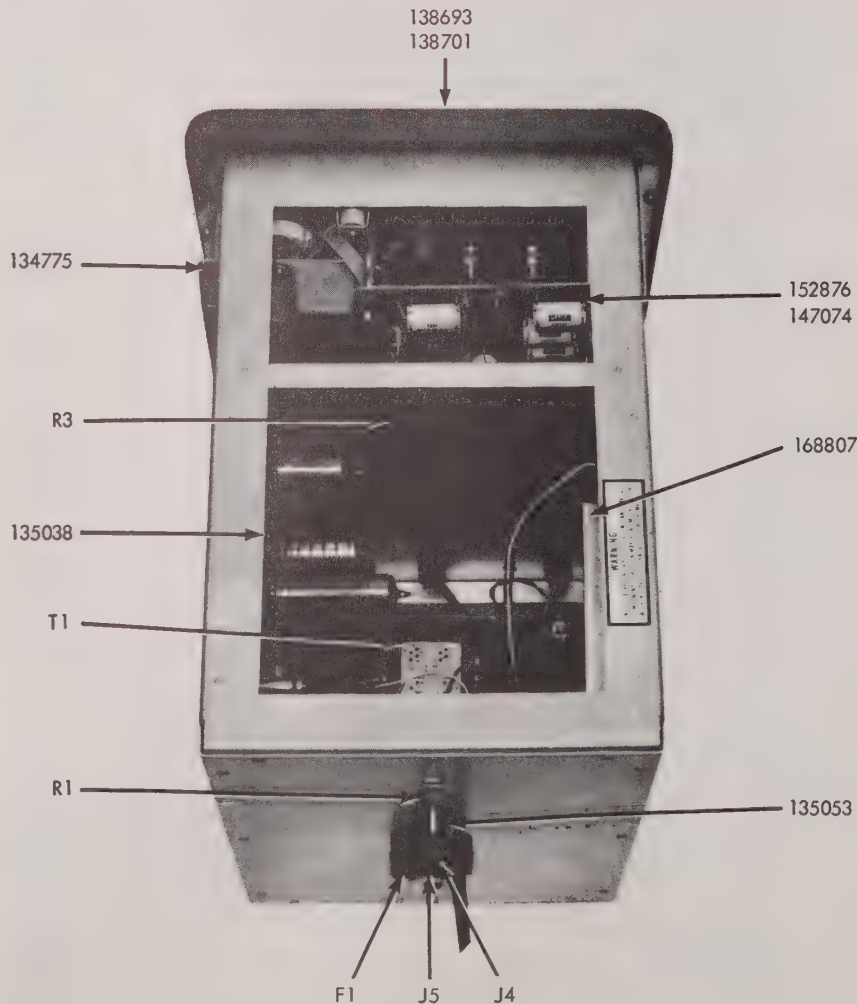


Figure 5-1. FINAL ASSEMBLY

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Front Panel Assembly		
	Model 825A	*138693	
	Model 825AR	*138719	
	Model 825A/AG	*138701	
	Model 825AR/AG	*138727	
B1	Standard cell (825A and 825AR)	135160	
C1	Capacitor, plastic, 0.47 uf $\pm 10\%$, 600V	105494	
DS1, DS2	Lamps, decimal	102855	
DS3, DS4	Light holder	100131	
	Light shield	101428	
	Light lens	103440	
J1, J2, J3	Binding post, black	101204	G
J2	Binding post, black	101204	H
J1, J3	Binding post, red	104158	H
	Binding post, insulator, red (4 used)	101188	G
	Binding post insulator, dual, black (2 used)	135053	H
	Binding post spacer	101212	
M1	Meter, 100-0-100 microamp (M32, M49, and 111211 are interchangeable)	*M32, M49, or 111211	
R2	Resistor, variable, dual section wirewound 1K and 100 ohm $\pm 10\%$, 2W	112714	
S1	Switch, power	114850	
S2	Switch, range	*801B-804 *120642	A B
S3	Switch, null	*825A-801 *121293	A B
S4	Switch, operate-calibrate	*801B-807 *134973	A B
S5	Switch, polarity	*801B-806 *134965	A B
S6	Switch, voltage dial A	*801B-801 *134817	A B
S7, S8, S9	Switch, voltage dials B, C, and D	*801B-802 *134841	A B
S10	Switch, voltage dial E	*801B-803 *134825	A B
	Knob	101287	AE
		188524	AF
	Knob	101121	AE
		171660	AF
	Knob	101311	AE
		188524	AF
	Knob	103044	AE
		170068	AF
	Voltage dial plates (cabinet model)	107029	
	(rack model)	107011	

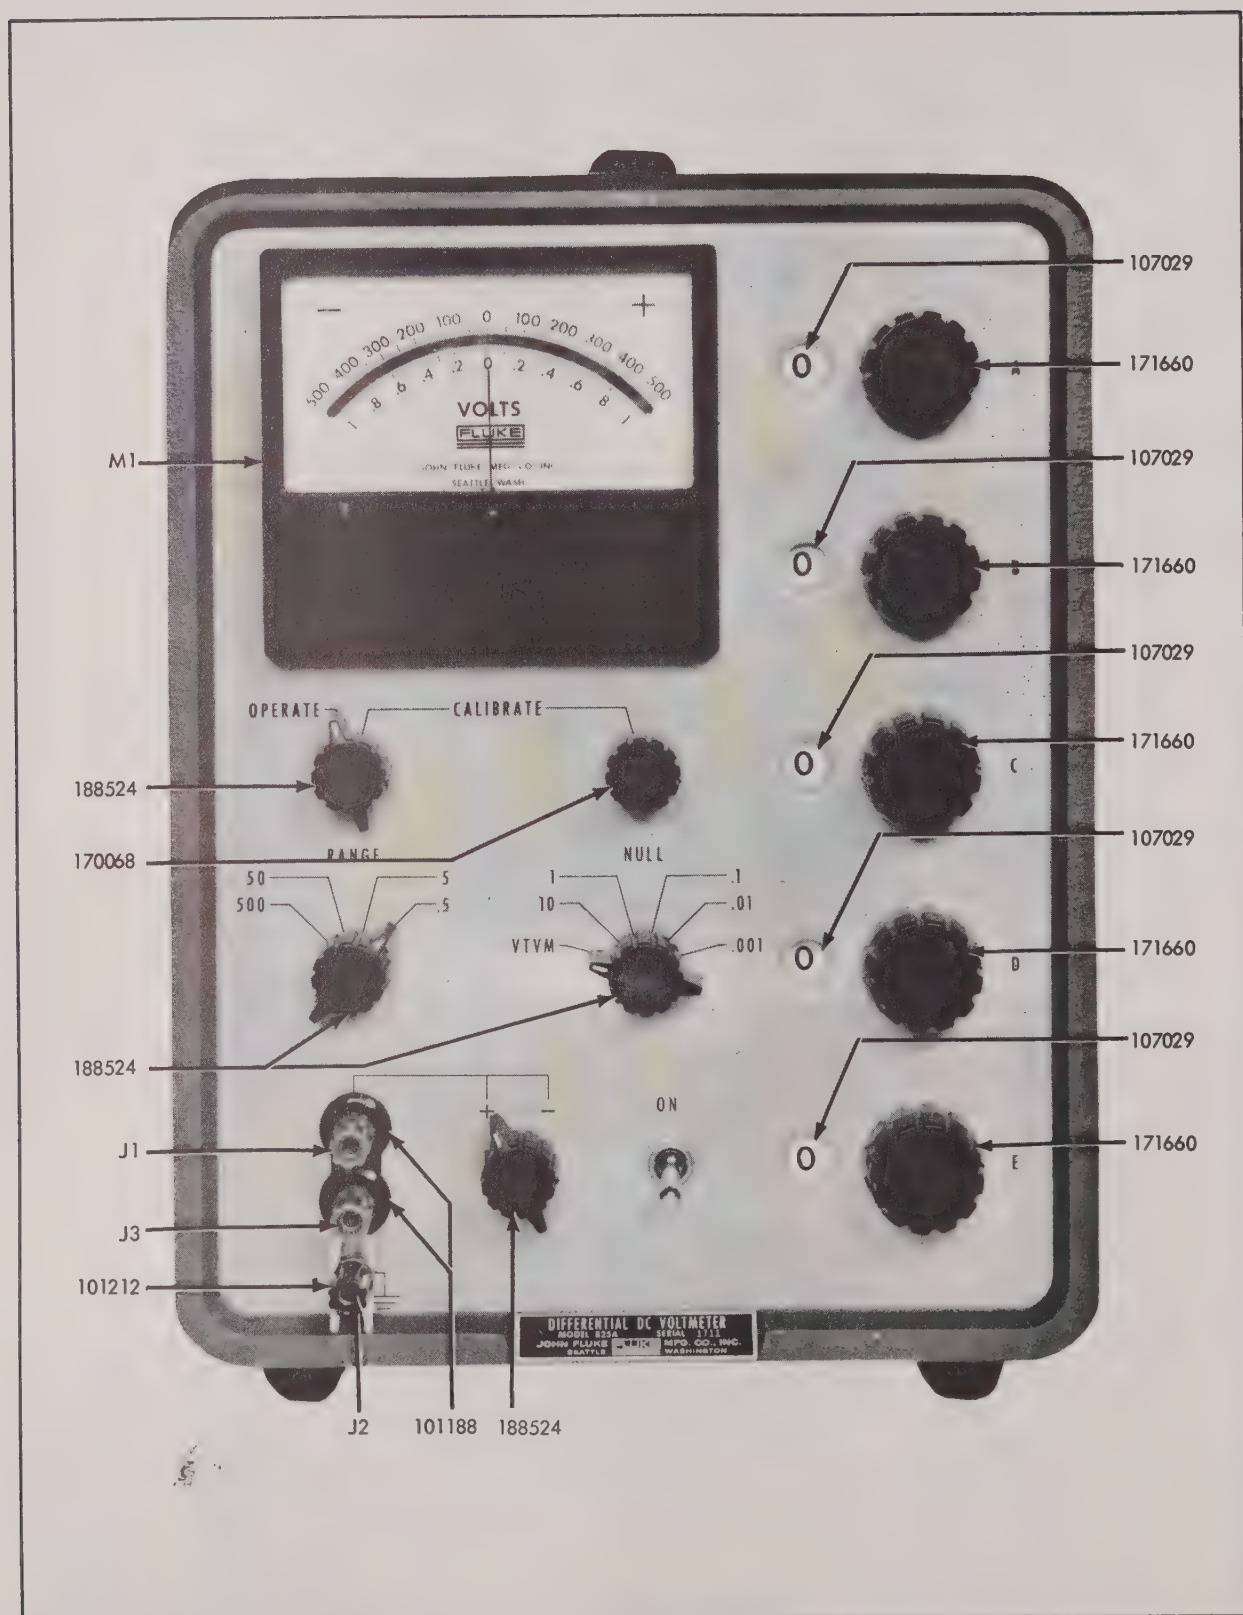


Figure 5-2. FRONT PANEL ASSEMBLY. (Sheet 1 of 2)

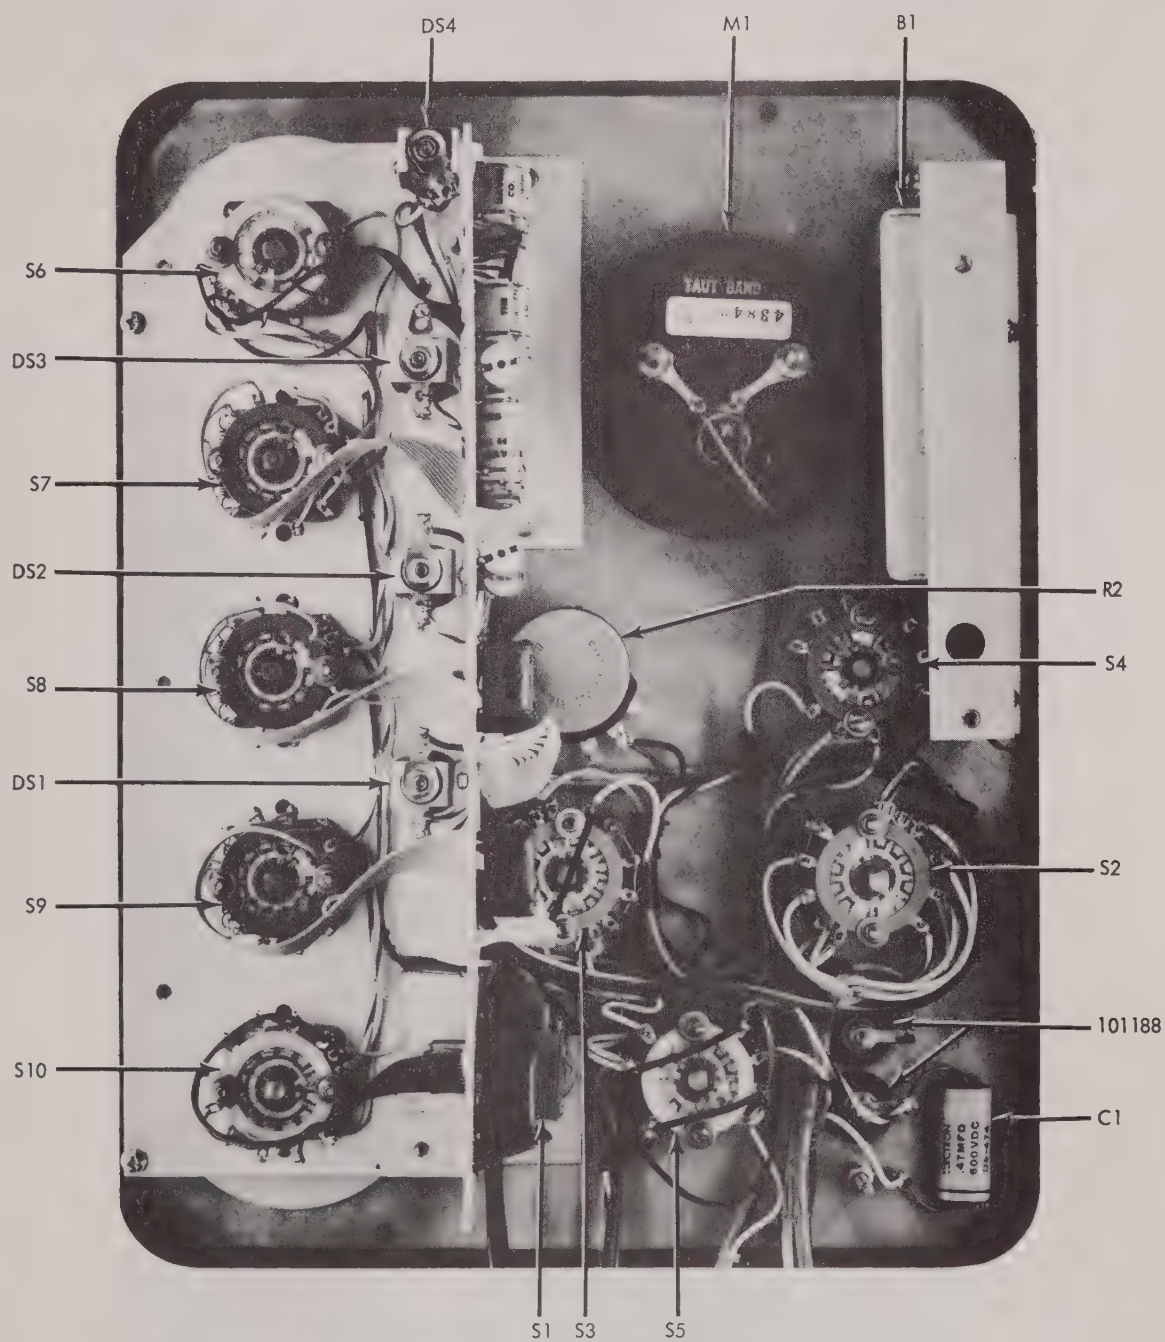


Figure 5-2. FRONT PANEL ASSEMBLY. (Sheet 2 of 2)

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Reference Supply Board Assembly without Tubes	*801B-401 *135038	C D
C101, C102	Capacitor, electrolytic, 20 uf -10/+100%, 500V	105932	
C103	Capacitor, paper, 0.1 uf $\pm 20\%$, 400 V	105312	
C104	Capacitor, plastic, 0.033 uf $\pm 20\%$, 600V	105916	
C105	Capacitor, plastic, 0.1 uf $\pm 20\%$, 600V	105833	
C106	Capacitor, electrolytic, 1500 uf -10/+150%, 16V	106666	D
CR101 thru CR103	Diode, silicon, 0.750 Amp, 600 PIV	112680	C
CR101 thru CR104	Diode, silicon, 0.750 Amp, 600 PIV Diode, silicon, 0.750 Amp, 600 PIV	112680 112383	Y V
Q101	Transistor, germanium, PNP,	*116707	D
Q102	Transistor, germanium, PNP, 2N1372	116129	D
R101	Resistor, wirewound, 10 Ω , $\pm 5\%$, 10W Resistor, deposited carbon, 5K $\pm 1\%$, 1/2W	112300 107110	C D
R102	Resistor, composition, 1 Meg $\pm 10\%$, 1/2W Resistor, deposited carbon, 62K $\pm 1\%$, 1/2W	108134 107722	C D
R103	Resistor, composition, 1 Meg $\pm 10\%$, 1/2W	108134	
R104	Resistor, composition, 220K $\pm 10\%$, 1/2W	108217	
R105, R106	Resistor, composition, 270K $\pm 10\%$, 1W	109512	
R107	Resistor, composition, 22 Meg $\pm 10\%$, 1/2W	108233	
R108	Resistor, composition, 15 Meg $\pm 10\%$, 1/2W	108647	
R109	Resistor, composition, 10 Meg $\pm 10\%$, 1/2W	108142	
R110	Resistor, composition, 100K $\pm 10\%$, 1W	109397	
R111	Resistor, wirewound, 140K $\pm 3\%$, 10W	112417	
R112	Resistor, composition, 100K $\pm 10\%$, 1/2W	108126	
R113	Resistor, composition, 560K $\pm 10\%$, 1W	109678	
R114	Resistor, composition, 220K $\pm 10\%$, 1/2W	108217	
R115	Resistor, composition, 330 Ω $\pm 10\%$, 1/2W	108589	
R116	Resistor, composition, 220K $\pm 10\%$, 1W	109652	
R117	Resistor, composition, 82K $\pm 10\%$, 1/2W	108498	
R118	Resistor, composition, 560K $\pm 10\%$, 1W	109678	
R119	Resistor, wirewound, 386K $\pm 0.5\%$, 1W	112482	

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R120	Resistor, wirewound, 76K $\pm 0.5\%$, 1/2W	111948	C
R121	Resistor, variable, wirewound, 5K $\pm 20\%$, 1-1/4W	111609	
V101	Vacuum tube, filament regulator, 9-7	116608	
V102	Vacuum tube, pentode, EL84/6BQ5	116616	
V103	Lamp, neon glow, NE2E	100347	Z AA
V103	Lamp, neon glow, NE83	170167	
V104	Vacuum tube, voltage reference, OG3-2	*116749	
V105, V106	Vacuum tube, duo triode, 12AX7	115956	

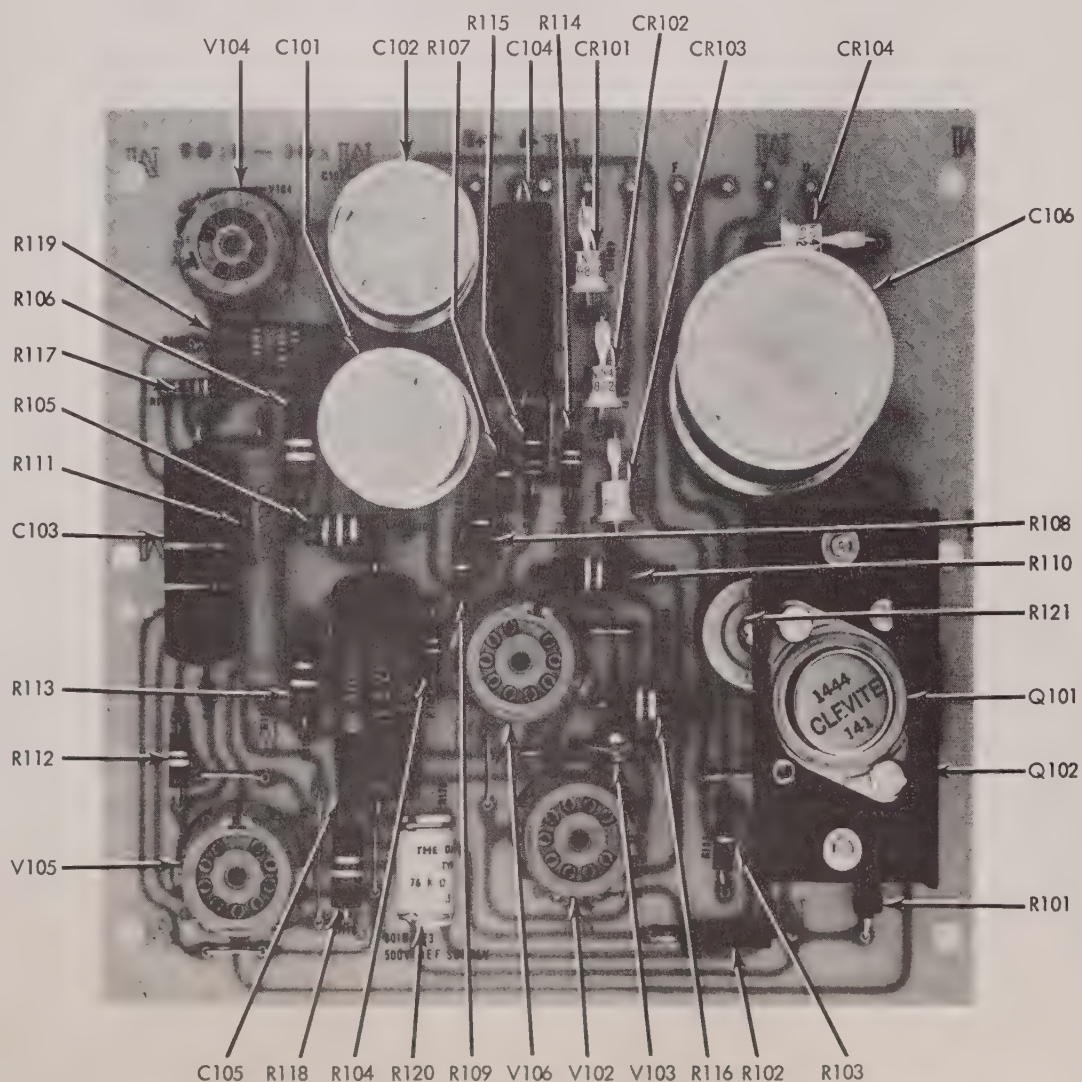


Figure 5-3. REFERENCE SUPPLY PRINTED CIRCUIT BOARD ASSEMBLY

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	NOTE: This assembly applies to 825A & 825A/AG serial numbers 123 to 1705 and 825AR & 825AR/AG serial numbers 123 to 628.		
	Null Detector Chassis Assembly without tubes	*121160	
C201, C202	Capacitor, plastic, 0.1 uf $\pm 20\%$, 100V	106526	
C203	Capacitor, paper, 0.047 uf $\pm 20\%$, 400V	105718	
C204 ABC	Capacitor, electrolytic, 40-20-20 uf -10/+100%, 250V	106542	
C205	Capacitor, plastic, 0.1 uf $\pm 20\%$, 200V	106310	K
	Capacitor, plastic, 0.1 uf $\pm 20\%$, 200V	106435	L
C206	Capacitor, electrolytic, 100 uf -10/+100%, 3V	106534	
C207	Capacitor, ceramic, 0.005 uf $\pm 20\%$, 500V	105650	
C208	Capacitor, plastic, 0.1 uf $\pm 20\%$, 200V	106310	K
	Capacitor, plastic, 0.1 uf $\pm 20\%$, 200V	106435	L
C209	Capacitor, plastic, 0.47 uf $\pm 20\%$, 200V	106419	
C210	Capacitor, plastic, 0.1 uf $\pm 20\%$, 200V	106310	K
	Capacitor, plastic, 0.1 uf $\pm 20\%$, 200V	106435	L
C211	Capacitor, electrolytic, 5 uf -10/+100%, 50V	106500	
C212	Capacitor, electrolytic, 500 uf -10/+100%, 3V	106328	
C213 AB	Capacitor, electrolytic, 20-20 uf -10/+50%, 450V	105064	
C214	Capacitor, electrolytic, 2000 uf -10/+100%, 25V	105171	
C215	Capacitor, electrolytic, 30 uf -10/+100%, 15V	106492	
C216	Capacitor, electrolytic, 15 uf -10/+150%, 6V	105700	F
CR201	Diode, silicon, 0.75 Amp, 600 PIV	112680	U
	Diode, silicon, 0.75 Amp, 600 PIV	112383	V
CR202	Diode, silicon, type 2E4, 300 ma, 400 PIV	116111	
CR203	Diode, silicon, 0.75 Amp, 600 PIV	112680	U
	Diode, silicon, 0.75 Amp, 600 PIV	112383	V
CR204, CR205	Diode, silicon, 1 Amp, 100 PIV	116111	F
G1	Chopper, electromechanical, 94 cycle, SPDT	103176	
	Chopper drive unit, 96 cycle	103184	
Q201	Transistor, germanium PNP, special purpose 2N301W	*116707	
Q202	Transistor, germanium PNP, 2N1372	116129	
R201 thru R203	Resistor, composition, 820K $\pm 10\%$, 1/2W	108357	
R204	Resistor, composition, 2.2 Meg $\pm 10\%$, 1/2W	108225	
R205	Resistor, composition, 22K $\pm 10\%$, 1/2W	108209	
R206	Resistor, composition, 150K $\pm 10\%$, 1/2W	108167	

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R207	Resistor, composition, 4.7K $\pm 10\%$, 1/2W	108381	
R208	Resistor, composition, 10 Meg $\pm 10\%$, 1/2W	108142	
R209	Resistor, composition, 10 K $\pm 10\%$, 1/2W	108118	
R210	Resistor, composition, 220K $\pm 10\%$, 1/2W	108217	
R211, R212	Resistor, composition, 1 Meg $\pm 10\%$, 1/2W	108134	
R213	Resistor, composition, 180 K $\pm 10\%$, 1/2W	108431	
R214	Resistor, composition, 1 K $\pm 10\%$, 1/2W	108563	
R215	Resistor, composition, 3.3 Meg $\pm 10\%$, 1/2W	108282	
R216	Resistor, composition, 1.5 Meg $\pm 10\%$, 1/2W	108175	
R217	Resistor, composition, 4.7K $\pm 10\%$, 1/2W	108381	
R218	Resistor, composition, 22 K $\pm 10\%$, 1/2W	108209	
R219	Resistor, composition, 220 Ω $\pm 10\%$, 1/2W	108191	
R220	Resistor, carbon film, 10 Ω $\pm 1\%$, 1/2W	107789	
R221	Resistor, carbon film, 75 Ω $\pm 1\%$, 1/2W	107045	
R222	Resistor, variable wirewound, 500 Ω $\pm 10\%$, 2W	111773	
R223, R224	Resistor, composition, 1.8 K $\pm 10\%$, 1/2W	108860	
R225, R226	Resistor, composition, 47 K $\pm 10\%$, 2W	110015	
R227	Resistor, composition, 2.2 K $\pm 10\%$, 2W (This resistor replaces 2.7K resistor, HB2721, used in earlier models. If replacement is required, use HB2221.)	109967	
R228	Resistor, composition, 560K $\pm 10\%$, 1/2W	108795	
R229	Resistor, composition, 560 Ω $\pm 10\%$, 1/2W	108316	
R230	Resistor, composition, 2.2 K $\pm 10\%$, 2W (This resistor replaces 2.7 K resistor, HB2721, used in earlier models. If replacement is required, use HB2221.)	109967	
R231	Resistor, composition, 180 K $\pm 10\%$, 1/2W	108431	
R232	Resistor, variable wirewound, 10 K $\pm 20\%$, 2W	111617	
R233	Resistor, composition, 100 K $\pm 10\%$, 1/2W	108126	
R234	Resistor, carbon film, 2.7 K $\pm 1\%$, 1/2W	107276	
R235	Resistor, carbon film, 31.6 K $\pm 1\%$, 1W	107797	
R236	Resistor, composition, 22 K $\pm 10\%$, 1/2W (may be omitted)	108209	
V201	Lamp, neon glow, type NE2E, 1/10W	100347	
V202	Vacuum tube, duo triode, 5751	116657	
V203	Vacuum tube, triode-pentode, 6AW8A	116434	
V204	Vacuum tube, voltage reference, OA2	115873	
	Vacuum tube shield	101808	
	Vacuum tube clamp, 2 inches high	102178	

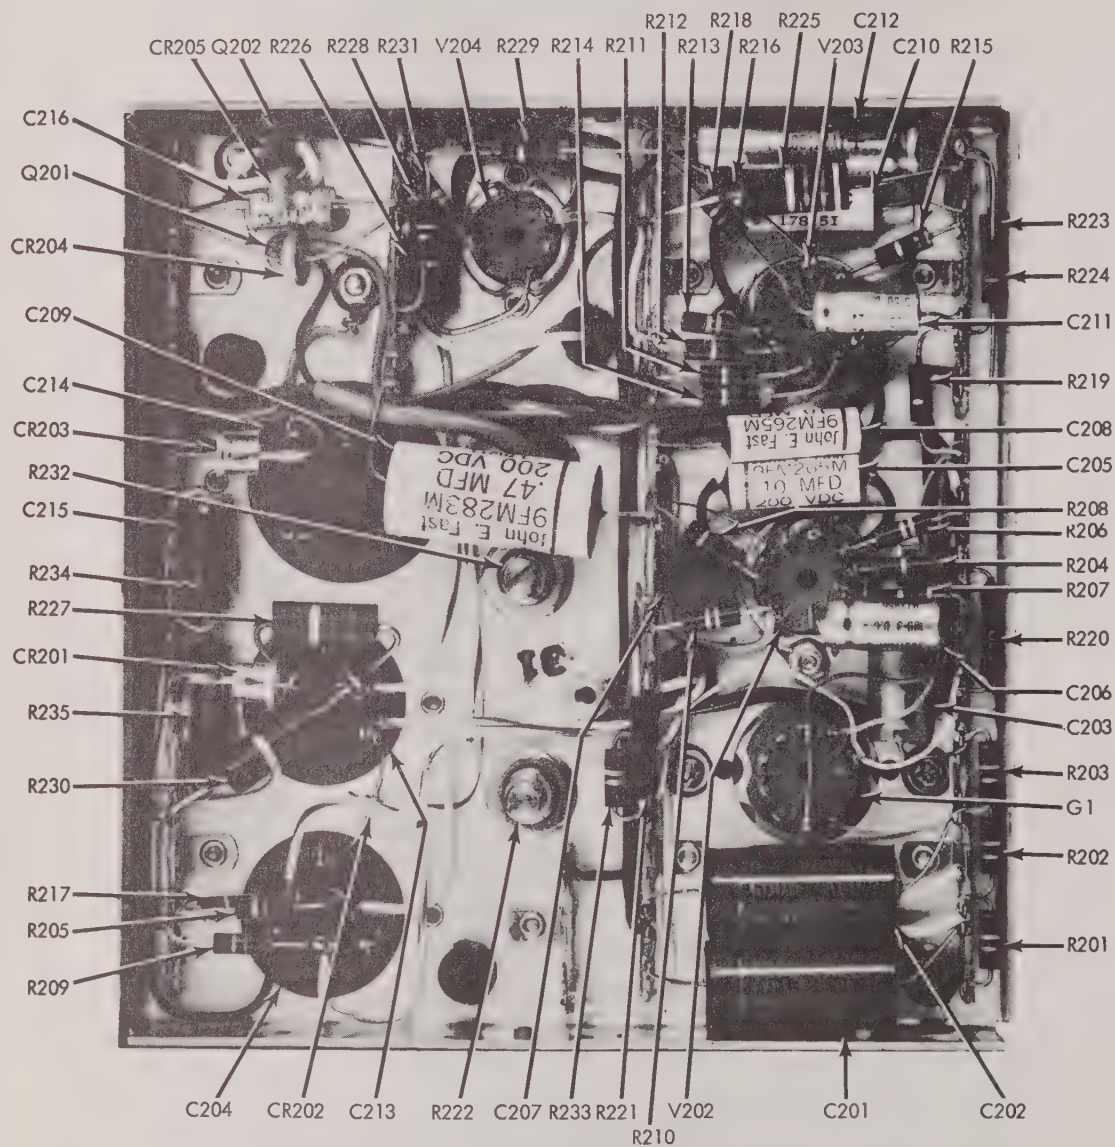


Figure 5-4. NULL DETECTOR ASSEMBLY (Sheet 1 of 2)

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	NOTE: This assembly applies to 825A & 825A/AG serial numbers 1706 and on and 825AR & 825AR/AG serial numbers 629 and on.		
	Null Detector Board Assembly	168807	
	Chopper Drive Assembly	168815	
C212	Capacitor, plastic, 0.047 uf $\pm 20\%$, 100V	106096	
DS202, DS203	Lamp, neon glow, type NE2U	162602	
R226	Resistor, variable composition, 100K $\pm 30\%$, 3/10W	163402	
R227, R228	Resistor, composition, 390K $\pm 10\%$, 1/2W	108993	
C201, C202	Capacitor, electrolytic, 0.22 uf $\pm 20\%$, 100V coated with epoxy resin	167452	
C203	Capacitor, plastic, 0.047 uf $\pm 20\%$, 100V (Use 162008)	106096	AG AH
	Capacitor, plastic, 0.047 uf $\pm 20\%$, 250V	162008	
C204	Capacitor, ceramic, 180 pf $\pm 10\%$, 500V	105890	
C205	Capacitor, electrolytic, 1250 uf -10/+50%, 4V	166330	
C206	Capacitor, electrolytic, 400 uf -10/+50%, 25V	168153	
C207	Capacitor, plastic, 0.1 uf $\pm 10\%$, 200V	106013	
C208	Capacitor, plastic, 0.0047 uf $\pm 20\%$, 200V	106054	
C209	Capacitor, electrolytic, 5 uf -10/+75%, 25V	152009	
C210	Capacitor, electrolytic, 1250 uf -10/+50%, 4V	166330	
C211	Capacitor, electrolytic, 10 uf -10/+50%, 25V	170266	
C213, C214	Capacitor, electrolytic, 400 uf -10/+50%, 25V	168153	
CR201 thru CR203	Diode, silicon, 1 Amp, 100 PIV	116111	
DS201	Lamp, neon glow, type NE2U coated with epoxy resin	*162776	
Q201	Transistor, silicon, NPN, Type S7563 (Use 177105)	168716	AG AH
	Transistor, silicon, NPN Type 2N3565	177105	
Q202 to Q206	Transistor, silicon, NPN, Type 2N3391	168708	
Q207	Transistor, silicon, PNP, Type 2N3638	169375	
R201	Resistor, composition, 270K $\pm 10\%$, 1W (Use 110023)	109512	AG AH
	Resistor, composition, 270K $\pm 10\%$, 2W	110023	
R202	Resistor, composition, 470K $\pm 10\%$, 1/2W	108290	
R203	Resistor, metal film, 10.7 Ω $\pm 1\%$, 1/2W	168740	
R204	Resistor, composition, 68 Ω $\pm 10\%$, 1/2W	108464	

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R205	Resistor, variable wirewound, $500\Omega \pm 10\%$, 1-1/4W	112433	
R206	Resistor, composition, $10K \pm 10\%$, 1/2W	108118	
R207	Resistor, composition, $1M \pm 10\%$, 1/2W	108134	
R208	Resistor, composition, $10M \pm 10\%$, 1/2W	108142	
R209	Resistor, composition, $100K \pm 10\%$, 1/2W	108126	
R210	Resistor, composition, $2.2M \pm 10\%$, 1/2W	108225	
R211	Resistor, composition, $270K \pm 10\%$, 1/2W	108258	
R212	Resistor, variable composition, $100K \pm 20\%$, 1/4W	163873	
R213	Resistor, composition, $10\Omega \pm 10\%$, 1/2W	108092	
R214	Resistor, composition, $180K \pm 10\%$, 1/2W	108431	
R215	Resistor, composition, $10K \pm 10\%$, 1/2W	108118	
R216	Resistor, composition, $180K \pm 10\%$, 1/2W	108431	
R217	Resistor, composition, $100K \pm 10\%$, 1/2W	108126	
R218	Resistor, composition, $27K \pm 10\%$, 1/2W	108878	
R219	Resistor, composition, $47K \pm 10\%$, 1/2W	108480	
R220	Resistor, composition, $100\Omega \pm 10\%$, 1/2W	108100	AI
R221	Resistor, composition, $220\Omega \pm 10\%$, 1/2W	108191	AJ
R221	Resistor, composition, $270K \pm 10\%$, 1/2W	108258	
R222	Resistor, composition, $18K \pm 10\%$, 1/2W	108183	
R223	Resistor, composition, $2.2K \pm 10\%$, 1/2W	108605	
R224, R225	Resistor, composition, $47K \pm 10\%$, 1/2W	108480	
R229	Resistor, composition, $100\Omega \pm 10\%$, 1/2W	108100	
R230	Resistor, composition, $47K \pm 10\%$, 1/2W	108480	
V201, V202	Photoelectric cell	167940	
V203	Photoelectric cell	167940	AI
	Photoelectric cell	200261	AJ

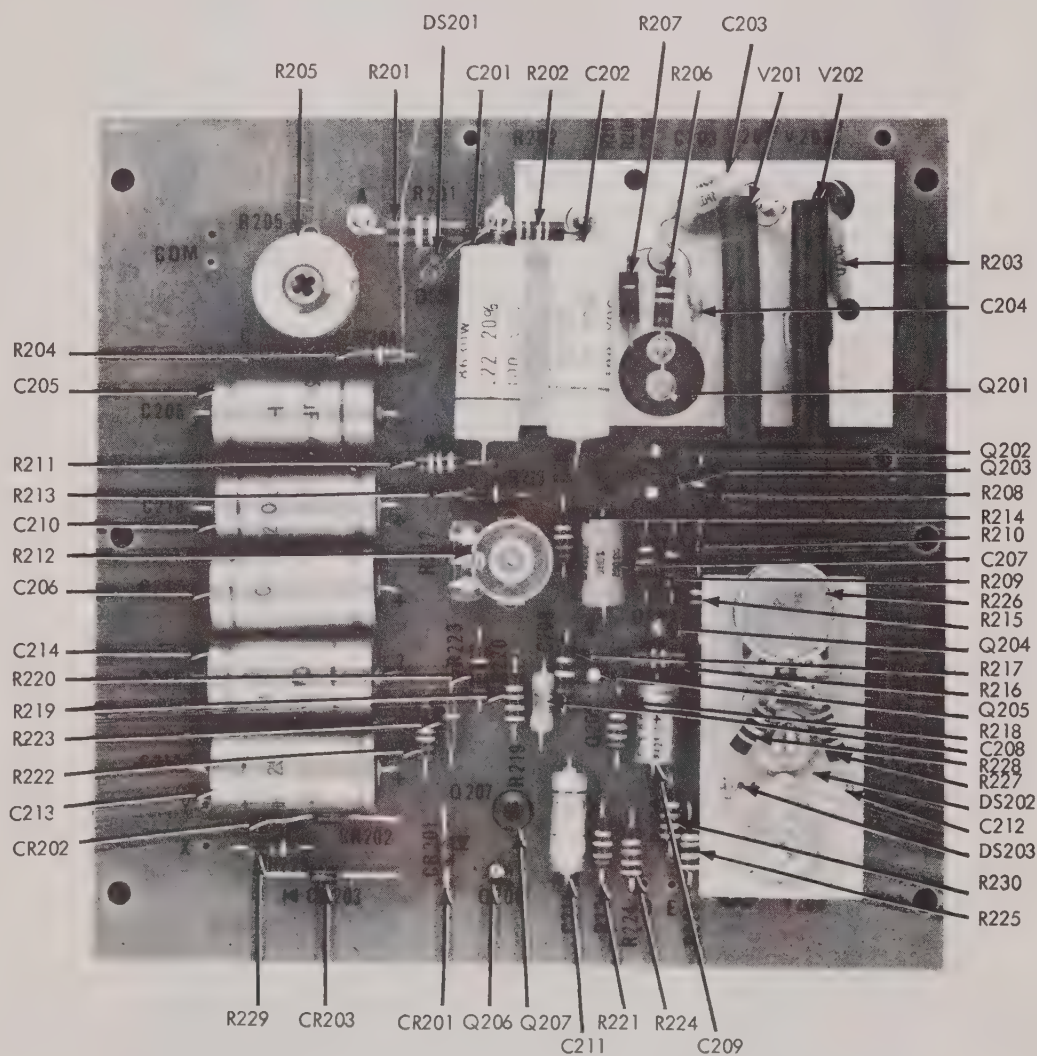


Figure 5-4. NULL DETECTOR ASSEMBLY (sheet 2 of 2)

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
	Range Resistor Printed Circuit Board Assembly Model 825A	*121145	M
		*152876	N
	Model 825AR	*121202	M
		*147074	N
	Model 825A/AG	*121152	M
		*153494	N
	Model 825AR/AG	*121228	M
		*153502	N
C301	Capacitor, plastic, 1 uf $\pm 20\%$, 600V	105924	
C302	Capacitor, plastic, 2 uf $\pm 20\%$, 200V	106443	
CR301	Zener diode (825A/AG and 825AR/AG. If replacement is required, CR301, R3, and R319 must be replaced with one of the Zener-resistor sets listed below. An adhesive label included must be attached to Range Resistor Board to give future ordering data for R3 and R319.) Zener-resistor set 825A/G-426 (Replace with 158824) Zener-resistor set 825A/G-404 or 825A/G-408 (These two sets are completely interchangeable.)	158824	O P
R301 thru R304	Resistor, carbon film, 10 Meg, matched set of four	200626	
R305	Resistor, carbon film, 9 Meg $\pm 1\%$, 1W	107557	
R306	Resistor, carbon film, 900 K $\pm 1\%$, 1/2W	107391	
R307	Resistor, carbon film, 90 K $\pm 1\%$, 1/2W	107292	
R308	Resistor, carbon film, 9 K $\pm 1\%$, 1/2W	107250	
R309	Resistor, deposited carbon, 900 Ω $\pm 1\%$, 1/2W	107771	
R310	Resistor, deposited carbon, 100 Ω $\pm 1\%$, 1/2W	107730	
R311 thru R315	Resistor, composition, 22 Meg $\pm 10\%$, 1/2W	108233	
R316, R317	Resistor, wirewound, 125K $\pm 0.1\%$, 1W Resistor, wirewound, 112.375 K $\pm 0.05\%$, 1W	112102 112110	O P
R318	Resistor, variable wirewound, 1 K $\pm 20\%$, 1-1/4W Resistor, variable wirewound, 3 K $\pm 20\%$, 1-1/4W Resistor, variable wirewound, 1 K $\pm 20\%$, 1-1/4W	111575 112458 113266	Q R N
R319	Resistor, wirewound, 511.7 Ω $\pm 0.1\%$, 1/2W Resistor, wirewound, 459.8 Ω $\pm 0.025\%$, 1/8W (825A and 825AR) Resistor, wirewound (825A/AG and 825AR/AG. Optimum value is selected at factory to match Zener diode. When ordering, include information listed on Range Resistor Board decal.)	112706 *132001	S T
R320, R321	Resistor, wirewound, 112.375 K $\pm 0.05\%$, 1W	112110	
R322	Resistor, composition, 27 K $\pm 10\%$, 1W	109504	
R323	Resistor, variable wirewound, 500 Ω $\pm 10\%$, 1-1/4W Resistor, variable wirewound, 500 Ω $\pm 10\%$, 1-1/4W	112433 113258	M N
R324	Resistor, wirewound, 28.571 K $\pm 0.05\%$, 1/2W	112060	
R325	Resistor, wirewound, 22.5 K $\pm 0.1\%$, 1/2W	112045	
R326	Resistor, variable wirewound, 500 Ω $\pm 10\%$, 1-1/4W Resistor, variable wirewound, 500 Ω $\pm 10\%$, 1-1/4W	112433 113258	M N
R327	Resistor, wirewound, 2531.7 Ω $\pm 0.05\%$, 1/2W	111906	
R328	Resistor, wirewound, 24.75 K $\pm 0.1\%$, 1/2W	112052	

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R329	Resistor, variable wirewound, $500\Omega \pm 10\%$, 1-1/4W	112433	M
	Resistor, variable wirewound, $500\Omega \pm 10\%$, 1-1/4W	113258	N
R330	Resistor, wirewound, $250.31\Omega \pm 0.05\%$, 1/2W	112011	
R331	Resistor, composition, $270\Omega \pm 10\%$, 1/2W	108241	
R332	Resistor, composition, $100K \pm 10\%$, 1/2W	108126	W
	Resistor, composition, $4.7K \pm 10\%$, 1/2W located on OPERATE-CALIBRATE switch (825A/AG and 825AR/AG).	108381	X
R333	Resistor, composition, $820K \pm 10\%$, 1/2W	108357	W
	Resistor, composition (Optimum value selected at factory to match Zener diode. If replacement is required, replace with a resistor of same value as determined by color code. If color code is unreadable, include information listed on Range Resistor Board decal when ordering.) Located on OPERATE-CALIBRATE switch (825A/AG and 825AR/AG).		X

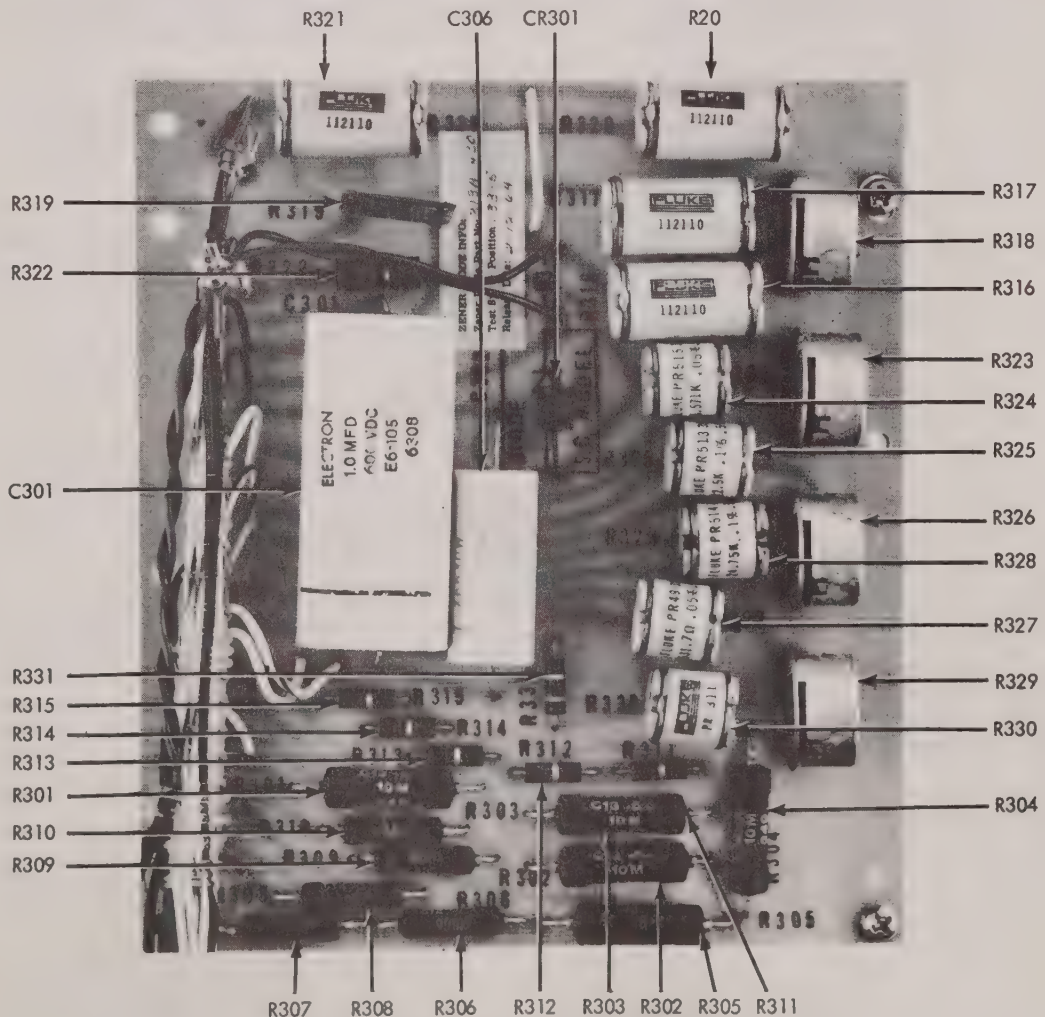


Figure 5-5. RANGE RESISTOR BOARD ASSEMBLY

REFERENCE DESIGNATION	DESCRIPTION	FLUKE STOCK NO.	USE CODE
R401 thru R406**	Kelvin-Varley Resistor Board Assembly Resistor, wirewound, 40K $\pm 0.02\%$, 1/2W	*134775 *146530	
R407 thru R417**	Resistor, wirewound, 8K $\pm 0.005\%$, 1/2W	*131946	
R418 thru R428**	Resistor, wirewound, 1.6K $\pm 0.01\%$, 1/8W	*131953	
R429 thru R439	Resistor, wirewound, 320 Ω $\pm 0.02\%$, 1/8W	*146159	
R440 thru R449	Resistor, wirewound, 64 Ω $\pm 0.1\%$, 1/8W	*146167	

**These resistors are factory matched for each instrument.
When ordering, specify instrument model and serial number
and all information stamped on resistor.

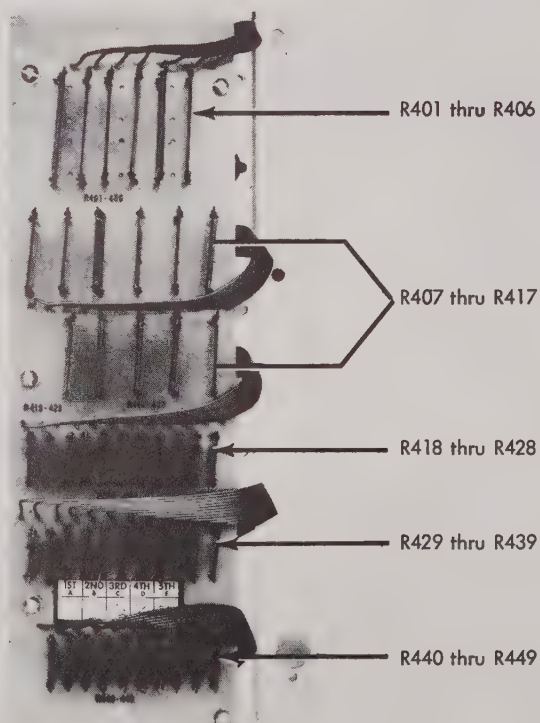


Figure 5-6. KELVIN-VARLEY RESISTOR BOARD ASSEMBLY

USE CODE EFFECTIVITY

The following list of use codes is intended to allow the customer to determine the effectivity of all replaceable parts. All parts with no code are used on all instruments with serial numbers above 123. New codes will be added as necessary on forthcoming instruments.

USE CODE	EFFECTIVITY		
No Code	Model 825A serial number 123 and on Model 825AR serial number 123 and on Model 825A/AG serial number 123 and on Model 825AR/AG serial number 123 and on	K	Model 825A serial number 123 thru 1129 Model 825AR serial number 123 thru 463 Model 825A/AG serial number 123 thru 1129 Model 825AR/AG serial number 123 thru 463
A	Model 825A serial number 123 thru 309 Model 825AR serial number 123 thru 213 Model 825A/AG serial number 123 thru 309 Model 825AR/AG serial number 123 thru 213	L	Model 825A serial number 1130 and on Model 825AR serial number 464 and on Model 825A/AG serial number 1130 and on Model 825AR/AG serial number 464 and on
B	Model 825A serial number 310 and on Model 825AR serial number 214 and on Model 825A/AG serial number 310 and on Model 825AR/AG serial number 214 and on	M	Model 825A serial number 123 thru 1220 Model 825AR serial number 123 thru 477 Model 825A/AG serial number 123 thru 1220 Model 825AR/AG serial number 123 thru 477
C	Model 825A serial number 123 thru 379 Model 825AR serial number 123 thru 233 Model 825A/AG serial number 123 thru 379 Model 825AR/AG serial number 134 thru 233	N	Model 825A serial number 1221 and on Model 825AR serial number 478 and on Model 825A/AG serial number 1221 and on Model 825AR/AG serial number 478 and on
D	Model 825A serial number 123 and on Model 825AR serial number 123 and on Model 825A/AG serial number 123 and on Model 825AR/AG serial number 123 and on	O	Model 825A serial number 123 thru 1220 Model 825AR serial number 123 thru 492 Model 825A/AG serial number 123 thru 1220 Model 825AR/AG serial number 123 thru 492
E	Model 825A serial number 123 thru 352 Model 825AR serial number 123 thru 223 Model 825A/AG serial number 123 thru 352 Model 825AR/AG serial number 123 thru 223	P	Model 825A serial number 1221 and on Model 825AR serial number 493 and on Model 825A/AG serial number 1221 and on Model 825AR/AG serial number 493 and on
F	Model 825A serial number 353 and on Model 825AR serial number 224 and on Model 825A/AG serial number 353 and on Model 825AR/AG serial number 224 and on	Q	Model 825A serial number 123 thru 1220 Model 825AR serial number 123 thru 477
G	Model 825A serial number 123 thru 669 Model 825AR serial number 123 thru 308 Model 825A/AG serial number 123 thru 669 Model 825AR/AG serial number 123 thru 308	R	Model 825A/AG serial number 123 thru 1220 Model 825AR/AG serial number 123 thru 477
H	Model 825A serial number 670 and on Model 825AR serial number 309 and on Model 825A/AG serial number 670 and on Model 825AR/AG serial number 309 and on	S	Model 825A serial number 123 thru 1220 Model 825AR serial number 123 thru 492
I	Model 825A serial number 123 thru 909 Model 825AR serial number 123 thru 373 Model 825A/AG serial number 123 thru 909 Model 825AR/AG serial number 123 thru 373	T	Model 825A serial number 1221 and on Model 825AR serial number 493 and on
J	Model 825A serial number 910 and on Model 825AR serial number 374 and on Model 825A/AG serial number 910 and on Model 825AR/AG serial number 374 and on	U	Model 825A serial number 123 thru 1239 Model 825AR serial number 123 thru 513 Model 825A/AG serial number 123 thru 1239 Model 825AR/AG serial number 123 thru 513
		V	Model 825A serial number 1240 and on Model 825AR serial number 514 and on Model 825A/AG serial number 1240 and on Model 825AR/AG serial number 514 and on
		W	Model 825A/AG serial number 123 thru 1364 Model 825AR/AG serial number 123 thru 573
		X	Model 825A/AG serial number 1365 and on Model 825AR/AG serial number 574 and on
		Y	Model 825A serial number 380 thru 1239 Model 825AR serial number 234 thru 513 Model 825A/AG serial number 380 thru 1239 Model 825AR/AG serial number 123 thru 513

USE CODE

- Z** Model 825A serial number 123 thru 1694
 Model 825AR serial number 123 thru 622
 Model 825AR/AG serial number 123 thru 1694
 Model 825A/AG serial number 123 thru 622
- AA** Model 825A serial number 1695 and on
 Model 825AR serial number 623 and on
 Model 825A/AG serial number 1695 and on
 Model 825AR/AG serial number 623 and on
- AB** Model 825A serial number 123 thru 1705
 Model 825AR serial number 123 thru 628
 Model 825A/AG serial number 123 thru 1705
 Model 825AR/AG serial number 123 thru 628
- AC** Model 825A serial number 1706 and on
 Model 825AR serial number 629 and on
 Model 825A/AG serial number 1706 and on
 Model 825AR/AG serial number 629 and on
- AD** Model 825A serial number 380 thru 1705
 Model 825AR serial number 234 thru 628
 Model 825A/AG serial number 380 thru 1705
 Model 825AR/AG serial number 234 thru 628
- AE** Model 825A serial number 123 thru 1705
 Model 825AR serial number 123 thru 629
 Model 825A/AG serial number 123 thru 1705
 Model 825AR/AG serial number 123 thru 629
- AF** Model 825A serial number 1706 and on
 Model 825AR serial number 630 and on
 Model 825A/AG serial number 1706 and on
 Model 825AR/AG serial number 630 and on
- AG** Model 825A serial number 123 thru 1911
 Model 825AR serial number 123 thru 629
 Model 825A/AG serial number 123 thru 1911
 Model 825AR/AG serial number 123 thru 629
- AH** Model 825A serial number 1912 and on
 Model 825AR serial number 630 and on
 Model 825A/AG serial number 1912 and on
 Model 825AR/AG serial number 630 and on
- AI** Model 825 and 825A/AG serial number 1706
 thru 2211
 Model 825AR and 825AR/AG serial number
 629 thru 644
- AJ** Model 825A and 825A/AG serial number 2212
 and on
 Model 825AR and 825AR/AG serial number
 645 and on

Section 7

General Information

7-1. This section of the manual contains generalized user information as well as supplemental information to the List of Replaceable Parts contained in Section 5.

List of Abbreviations and Symbols

A or amp	ampere	hf	high frequency	(+) or pos	positive
ac	alternating current	Hz	hertz	pot	potentiometer
af	audio frequency	IC	integrated circuit	p-p	peak-to-peak
a/d	analog-to-digital	if	intermediate frequency	ppm	parts per million
assy	assembly	in	inch(es)	PROM	programmable read-only memory
AWG	american wire gauge	intl	internal	psi	pound-force per square inch
B	bel	I/O	input/output	RAM	random-access memory
bcd	binary coded decimal	k	kilo (10^3)	rf	radio frequency
°C	Celsius	kHz	kilohertz	rms	root mean square
cap	capacitor	kΩ	kilohm(s)	ROM	read-only memory
ccw	counterclockwise	kV	kilovolt(s)	s or sec	second (time)
cer	ceramic	lf	low frequency	scope	oscilloscope
cermet	ceramic to metal(seal)	LED	light-emitting diode	SH	shield
ckt	circuit	LSB	least significant bit	Si	silicon
cm	centimeter	LSD	least significant digit	serno	serial number
cmrr	common mode rejection ratio	M	mega (10^6)	sr	shift register
comp	composition	m	milli (10^{-3})	Ta	tantalum
cont	continue	mA	milliampere(s)	tb	terminal board
crt	cathode-ray tube	max	maximum	tc	temperature coefficient or temperature compensating
cw	clockwise	mf	metal film	tcxo	temperature compensated crystal oscillator
d/a	digital-to-analog	MHz	megahertz	tp	test point
dac	digital-to-analog converter	min	minimum	u or μ	micro (10^{-6})
dB	decibel	mm	millimeter	uhf	ultra high frequency
dc	direct current	ms	millisecond	us or μs	microsecond(s) (10^{-6})
dmm	digital multimeter	MSB	most significant bit	uut	unit under test
dvm	digital voltmeter	MSD	most significant digit	V	volt
elect	electrolytic	MTBF	mean time between failures	v	voltage
ext	external	MTTR	mean time to repair	var	variable
F	farad	mV	millivolt(s)	vco	voltage controlled oscillator
°F	Fahrenheit	mv	multivibrator	vhf	very high frequency
FET	Field-effect transistor	MΩ	megohm(s)	vlf	very low frequency
ff	flip-flop	n	nano (10^{-9})	W	watt(s)
freq	frequency	na	not applicable	ww	wire wound
FSN	federal stock number	NC	normally closed	xfmr	transformer
g	gram	(-) or neg	negative	xstr	transistor
G	giga (10^9)	NO	normally open	xtal	crystal
gd	guard	ns	nanosecond	xtlo	crystal oscillator
Ge	germanium	opnl ampl	operational amplifier	Ω	ohm(s)
GHz	gigahertz	p	pico (10^{-12})	μ	micro (10^{-6})
gmV	guaranteed minimum value	para	paragraph		
gnd	ground	pcb	printed circuit board		
H	henry	pF	picofarad		
hd	heavy duty	pn	part number		

Federal Supply Codes for Manufacturers

00213 Nytronics Comp. Group Inc. Subsidiary of Nytronics Inc. Formerly Sage Electronics Rochester, New York	02660 Bunker Ramo Corp., Conn Div. Formerly Amphenol-Borg Electric Corp. Broadview, Illinois	04946 Standard Wire & Cable Los Angeles, California	06751 Components, Inc. Semcor Div. Phoenix, Arizona
00327 Welwyn International, Inc. Westlake, Ohio	02799 Areo Capacitors, Inc. Chatsworth, California	05082 Replaced by 94988	06860 Gould Automotive Div. City of Industry, California
00656 Aerovox Corp. New Bedford, Massachusetts	03508 General Electric Co. Semiconductor Products Syracuse, New York	05236 Jonathan Mfg. Co. Fullerton, California	06961 Vernitron Corp., Piezo Electric Div. Formerly Clevite Corp., Piezo Electric Div. Bedford, Ohio
00686 Film Capacitors, Inc. Passaic, New Jersey	03614 Replaced by 71400	05245 Components Corp. now Corcom, Inc. Chicago, Illinois	06980 Eimac Div. Varian Associates San Carlos, California
00779 AMP Inc. Harrisburg, Pennsylvania	03651 Replaced by 44655	05277 Westinghouse Electric Corp. Semiconductor Div. Youngwood, Pennsylvania	07047 The Ross Milton Co. South Hampton, Pennsylvania
01121 Allen-Bradley Co. Milwaukee, Wisconsin	03797 Eldema Div. Genisco Technology Corp. Compton, California	05278 Replaced by 43543	07115 Replaced by 14674
01281 TRW Electronic Comp. Semiconductor Operations Lawndale, California	03877 Transistron Electronic Corp. Wakefield, Massachusetts	05279 Southwest Machine & Plastic Co. Glendora, California	07138 Westinghouse Electric Corp., Electronic Tube Div. Horsehead, New York
01295 Texas Instruments, Inc. Semiconductor Group Dallas, Texas	03888 KDI Pyrofilm Corp. Whippany, New Jersey	05397 Union Carbide Corp. Materials Systems Div. New York, New York	07233 TRW Electronic Components Cinch Graphic City of Industry, California
01537 Motorola Communications & Electronics Inc. Franklin Park, Illinois	03911 Clairex Electronics Div. Clairex Corp. Mt. Vernon, New York	05571 Use 56289 Sprague Electric Co. Pacific Div. Los Angeles, California	07256 Silicon Transistor Corp. Div. of BBF Group Inc. Chelmsford, Massachusetts
01686 RCL Electronics Inc. Manchester, New Hampshire	03980 Muirhead Inc. Mountainside, New Jersey	05574 Viking Industries Chatsworth, California	07261 Aumet Corp. Culver City, California
01730 Replaced by 73586	04009 Arrow Hart Inc. Hartford, Connecticut	05704 Replaced by 16258	07263 Fairchild Semiconductor Div. of Fairchild Camera & Instrument Corp. Mountain View, California
01884 Use 56289 Sprague Electric Co. Dearborn Electronic Div. Lockwood, Florida	04062 Replaced by 72136	05820 Wakefield Engineering Inc. Wakefield, Massachusetts	07344 Bircher Co., Inc. Rochester, New York
02114 Ferroxcube Corp. Saugerties, New York	04202 Replaced by 81312	06001 General Electric Co. Electronic Capacitor & Battery Products Dept. Columbia, South Carolina	07597 Burndy Corp. Tape/Cable Div. Rochester, New York
02131 General Instrument Corp. Harris ASW Div. Westwood, Maine	04217 Essex International Inc. Wire & Cable Div. Anaheim, California	06136 Replaced by 63743	07792 Lerma Engineering Corp. Northampton, Massachusetts
02395 Rason Mfg. Co. Brooklyn, New York	04221 Aemco, Div. of Midtex Inc. Mankato, Minnesota	06383 Panduit Corp. Tinley Park, Illinois	07910 Teledyne Semiconductor Formerly Continental Device Hawthorne, California
02533 Snelgrove, C.R. Co., Ltd. Don Mills, Ontario, Canada M3B 1M2	04222 AVX Ceramics Div. AVX Corp. Myrtle Beach, Florida	06473 Bunker Ramo Corp. Amphenol SAMS Div. Chatsworth, California	07933 Use 49956 Raytheon Co. Semiconductor Div. HQ Mountain View, California
02606 Fenwal Labs Div. of Travenal Labs. Morton Grove, Illinois	04423 Telonic Industries Laguna Beach, California	06555 Beede Electrical Instrument Co. Penacook, New Hampshire	08225 Industro Transistor Corp. Long Island City, New York
	04645 Replaced by 75376	06739 Electron Corp. Littleton, Colorado	
	04713 Motorola Inc. Semiconductor Products Phoenix, Arizona	06743 Clevite Corp. Cleveland, Ohio	

Federal Supply Codes for Manufacturers (cont)

08261 Spectra Strip Corp. Garden Grove, California	11726 Qualidyne Corp. Santa Clara, California	13606 Use 56289 Sprague Electric Co. Transistor Div. Concord, New Hampshire	16299 Corning Glass Electronic Components Div. Raleigh, North Carolina
08530 Reliance Mica Corp. Brooklyn, New York	12014 Chicago Rivet & Machine Co. Bellwood, Illinois	13839 Replaced by 23732	16332 Replaced by 28478
08806 General Electric Co. Miniature Lamp Products Dept Cleveland, Ohio	12040 National Semiconductor Corp. Danbury, Connecticut	14099 Semtech Corp. Newbury Park, California	16473 Cambridge Scientific Ind. Div. of Chemed Corporation Cambridge, Maryland
08863 Nylomatic Corp. Norrisville, Pennsylvania	12060 Diodes, Inc. Chatsworth, California	14140 Edison Electronic Div. Mc Gray-Edison Co. Manchester, New Hampshire	16742 Paramount Plastics Fabricators, Inc. Downey, California
08988 Use 53085 Skottie Electronics Inc. Archbald, Pennsylvania	12136 Philadelphia Handle Co. Camden, New Jersey	14193 Cal-R-Inc. formerly California Resistor, Corp. Santa Monica, California	16758 Delco Electronics Div. of General Motors Corp. Kokomo, Indiana
09214 G.E. Co. Semi-Conductor Products Dept. Power Semi-Conductor Products OPN Sec. Auburn, New York	12300 Potter-Brumfield Div. AMF Canada LTD. Guelph, Ontario, Canada	14298 American Components, Inc. an Insilco Co. Conshohocken, Pennsylvania	17001 Replaced by 71468
09353 C and K Components Watertown, Massachusetts	12323 Presin Co., Inc. Shelton, Connecticut	14655 Cornell-Dublier Electronics Division of Federal Pacific Electric Co. Govt. Control Dept. Newark, New Jersey	17069 Circuit Structures Lab. Burbank, California
09423 Scientific Components, Inc. Santa Barbara, California	12327 Freeway Corp. formerly Freeway Washer & Stamping Co. Cleveland, Ohio	14752 Electro Cube Inc. San Gabriel, California	17338 High Pressure Eng. Co., Inc. Oklahoma City, Oklahoma
09922 Burndy Corp. Norwalk, Connecticut	12443 The Budd Co. Polychem Products Plastic Products Div. Bridgeport, Pennsylvania	14869 Replaced by 96853	17545 Atlantic Semiconductors, Inc. Asbury Park, New Jersey
09969 Dale Electronics Inc. Yankton, S. Dakota	12615 U.S. Terminals Inc. Cincinnati, Ohio	14936 General Instrument Corp. Semi Conductor Products Group Hicksville, New York	17856 Siliconix, Inc. Santa Clara, California
10059 Barker Engineering Corp. Formerly Amerace, Amerace ESNA Corp. Kenilworth, New Jersey	12617 Hamlin Inc. Lake Mills, Wisconsin	15636 Elec-Trol Inc. Saugus, California	17870 Replaced by 14140
11236 CTS of Berne Berne, Indiana	12697 Clarostat Mfg. Co. Dover, New Hampshire	15801 Fenwal Electronics Inc. Div. of Kidde Walter and Co., Inc. Framingham, Massachusetts	18178 Vactec Inc. Maryland Heights, Missouri
11237 CTS Keene Inc. Paso Robles, California	12749 James Electronics Chicago, Illinois	15818 Teledyne Semiconductors, formerly Amelco Semiconductor Mountain View, California	18324 Signetics Corp. Sunnyvale, California
11358 CBS Electronic Div. Columbia Broadcasting System Newburyport, Minnesota	12856 Micrometals Sierra Madre, California	15849 Litton Systems Inc. Useco Div. formerly Useco Inc. Van Nuys, California	18612 Vishay Resistor Products Div. Vishay Intertechnology Inc. Malvern, Pennsylvania
11403 Best Products Co. Chicago, Illinois	12954 Dickson Electronics Corp. Scottsdale, Arizona	15898 International Business Machines Corp. Essex Junction, Vermont	18736 Voltronics Corp. Hanover, New Jersey
11503 Keystone Columbia Inc. Warren, Michigan	12969 Unitrode Corp. Watertown, Massachusetts	15909 Replaced by 14140	18927 GTE Sylvania Inc. Precision Material Group Parts Division Titusville, Pennsylvania
11532 Teledyne Relays Hawthorne, California	13103 Thermalloy Co., Inc. Dallas, Texas	16258 Space-Lok Inc. Burbank, California	19451 Perine Machinery & Supply Co. Seattle, Washington
11711 General Instrument Corp. Rectifier Division Hicksville, New York	13327 Solitron Devices Inc. Tappan, New York	16299 Corning Glass Electronic Components Div. Raleigh, North Carolina	19701 Electro-Midland Corp. Mepco-Electra Inc. Mineral Wells, Texas
	13511 Amphenol Cadre Div. Bunker-Ramo Corp. Los Gatos, California		20584 Enochs Mfg. Inc. Indianapolis, Indiana

Federal Supply Codes for Manufacturers (cont)

20891 Self-Organizing Systems, Inc. Dallas, Texas	28480 Hewlett Packard Co. Corporate HQ Palo Alto, California	43543 Nytronics Inc. Transformer Co. Div. Geneva, New York	70903 Belden Corp. Geneva, Illinois
21604 Bucheys Stamping Co. Columbus, Ohio	28520 Heyman Mfg. Co. Kenilworth, New Jersey	44655 Ohmite Mfg. Co. Skokie, Illinois	71002 Birnbach Radio Co., Inc. Freeport, New York
21845 Solitron Devices Inc. Transistor Division Riviera Beach, Florida	29083 Monsanto, Co., Inc. Santa Clara, California	49671 RCA Corp. New York, New York	71400 Bussmann Mfg. Div. of McGraw-Edison Co. Saint Louis, Missouri
22767 ITT Semiconductors Palo Alto, California	29604 Stackpole Components Co. Raleigh, North Carolina	49956 Raytheon Company Lexington, Massachusetts	71450 CTS Corp. Elkhart, Indiana
23050 Product Comp. Corp. Mount Vernon, New York	30148 AB Enterprise Inc. Ahoskie, North Carolina	50088 Mostek Corp. Carrollton, Texas	71468 ITT Cannon Electric Inc. Santa Ana, California
23732 Tracor Inc. Rockville, Maryland	30323 Illinois Tool Works, Inc. Chicago, Illinois	50579 Litronix Inc. Cupertino, California	71482 Clare, C.P. & Co. Chicago, Illinois
23880 Stanford Applied Engrng. Santa Clara, California	31091 Optimax Inc. Colmar, Pennsylvania	51605 Scientific Components Inc. Linden, New Jersey	71590 Centrelab Electronics Div. of Globe Union Inc. Milwaukee, Wisconsin
23936 Pamotor Div., Wm. J. Purdy Co. Burlingame, California	32539 Mura Corp. Great Neck, New York	53021 Sangamo Electric Co. Springfield, Illinois	71707 Coto Coil Co., Inc. Providence, Rhode Island
24248 Replaced by 94222	32767 Griffith Plastic Corp. Burlingame, California	54294 Cutler-Hammer Inc. formerly Shallcross, A Cutter-Hammer Co. Selma, North Carolina	71744 Chicago Miniature Lamp Works Chicago, Illinois
24355 Analog Devices Inc. Norwood, Massachusetts	32879 Advanced Mechanical Components Northridge, California	55026 Simpson Electric Co. Div. of Am. Gage and Mach. Co. Elgin, Illinois	71785 TRW Electronics Components Cinch Connector Operations Div. Elk Grove Village Chicago, Illinois
24655 General Radio Concord, Massachusetts	32897 Erie Technological Products, Inc. Frequency Control Div. Carlisle, Pennsylvania	56289 Sprague Electric Co. North Adams, Massachusetts	72005 Wilber B. Driver Co. Newark, New Jersey
24759 Lenox-Fugle Electronics Inc. South Plainfield, New Jersey	32997 Bourns Inc. Trimpot Products Division Riverside, California	58474 Superior Electric Co. Bristol, Connecticut	72092 Replaced by 06980
25088 Siemen Corp. Isilen, New Jersey	33173 General Electric Co. Products Dept. Owensboro, Kentucky	60399 Torin Corp. formerly Torrington Mfg. Co. Torrington, Connecticut	72136 Electro Motive Mfg. Co. Williamantic, Connecticut
25403 Amperex Electronic Corp. Semiconductor & Micro-Circuits Div. Slatersville, Rhode Island	34333 Silicon General Westminster, California	63743 Ward Leonard Electric Co., Inc. Mount Vernon, New York	72259 Nytronics Inc. Pelham Manor, New Jersey
27014 National Semiconductor Corp. Santa Clara, California	34335 Advanced Micro Devices Sunnyvale, California	64834 West Mfg. Co. San Francisco, California	72619 Dialight Div. Amperex Electronic Corp. Brooklyn, New York
27264 Molex Products Downers Grove, Illinois	34802 Electromotive Inc. Kenilworth, New Jersey	65092 Weston Instruments Inc. Newark, New Jersey	72653 G.C. Electronics Div. of Hydrometals, Inc. Brooklyn, New York
28213 Minnesota Mining & Mfg. Co. Consumer Products Div. St. Paul, Minnesota	37942 P.R. Mallory & Co., Inc. Indianapolis, Indiana	66150 Winslow Tele-Tronics Inc. Eaton Town, New Jersey	72665 Replaced by 90303
28425 Serv.-/Link formerly Bohannon Industries Fort Worth, Texas	42498 National Radio Melrose, Massachusetts	70485 Atlantic India Rubber Works Chicago, Illinois	72794 Dzus Fastener Co., Inc. West Islip, New York
28478 Deltrol Controls Div. Deltrol Corporation Milwaukee, Wisconsin		70563 Amperite Company Union City, New Jersey	72928 Gulton Ind. Inc. Gudeman Div. Chicago, Illinois

Federal Supply Codes for Manufacturers (cont)

72982 Erie Tech. Products Inc. Erie, Pennsylvania	75382 Kulka Electric Corp. Mount Vernon, New York	80583 Hammarlund Mfg. Co., Inc. Red Bank, New Jersey	83594 Burroughs Corp. Electronic Components Div. Plainfield, New Jersey
73138 Bechman Instrument Inc. Helipot Division Fullerton, California	75915 Littlefuse Inc. Des Plaines, Illinois	80640 Arnold Stevens, Inc. South Boston, Massachusetts	83740 Union Carbide Corp. Battery Products Div. formerly Consumer Products Div. New York, New York
73293 Hughes Aircraft Co. Electron Dynamics Div. Torrance, California	76854 Oak Industries Inc. Switch Div. Crystal Lake, Illinois	81073 Grayhill, Inc. La Grange, Illinois	84171 Arco Electronics Great Neck, New York
73445 Amperex Electronic Corp. Hicksville, New York	77342 AMF Inc. Potter & Brumfield Div. Princeton, Indiana	81312 Winchester Electronics Div. of Litton Industries Inc. Oakville, Connecticut	84411 TRW Electronic Components TRW Capacitors Ogallala, Nebraska
73559 Carling Electric Inc. West Hartford, Connecticut	77638 General Instrument Corp. Rectifier Division Brooklyn, New York	81483 Therm-O-Disc Inc. Mansfield, Ohio	84613 Fuse Indicator Corp. Rockville, Maryland
73586 Circle F Industries Trenton, New Jersey	77969 Rubbercraft Corp. of CA. LTD. Torrance, California	81483 International Rectifier Corp. Los Angeles, California	84682 Essex International Inc. Industrial Wire Div. Peabody, Massachusetts
73734 Federal Screw Products, Inc. Chicago, Illinois	78189 Shakeproof Div. of Illinois Tool Works Inc. Elgin, Illinois	81590 Korry Mfg. Co. Seattle, Washington	86577 Precision Metal Products of Malden Inc. Stoneham, Massachusetts
73743 Fischer Special Mfg. Co. Cincinnati, Ohio	78277 Sigma Instruments, Inc. South Braintree, Massachusetts	82305 Palmer Electronics Corp. South Gate, California	86684 Radio Corp. of America Electronic Components Div. Harrison, New Jersey
73899 JFD Electronics Co. Components Corp. Brooklyn, New York	78488 Stackpole Carbon Co. Saint Marys, Pennsylvania	82389 Switchcraft Inc. Chicago, Illinois	86928 Seastrom Mfg. Co., Inc. Glendale, California
73949 Guardian Electric Mfg. Co. Chicago, Illinois	78553 Eaton Corp. Engineered Fastener Div. Tinnerman Plant Cleveland, Ohio	82415 North American Phillips Controls Corp. Frederick, Maryland	87034 Illuminated Products Inc. Subsidiary of Oak Industries Inc. Anahiem, California
74199 Quan Nichols Co. Chicago, Illinois	79136 Waldes Kohinoor Inc. Long Island City, New York	82872 Roanwell Corp. New York, New York	88219 Gould Inc. Industrial Div. Trenton, New Jersey
74217 Radio Switch Corp. Marlboro, New Jersey	79497 Western Rubber Company Goshen, Indiana	82877 Rotron Inc. Woodstock, New York	88245 Litton Systems Inc. Useco Div. Van Nuys, California
74276 Signalite Div. General Instrument Corp. Neptune, New Jersey	79963 Zierick Mfg. Corp. Mt. Kisko, New York	82879 ITT Royal Electric Div. Pawtucket, Rhode Island	88419 Cornell-Dubilier Electronic Div. Federal Pacific Co. Fuquay-Varian, North Carolina
74306 Piezo Crystal Co. Carlisle, Pennsylvania	80031 Electro-Midland Corp. Mepco Div. A North American Phillips Co. Norristown, New Jersey	83003 Varo Inc. Garland, Texas	88486 Plastic Wire & Cable Jewitt City, Connecticut
74542 Hoyt Elect. Instr. Works Penacook, New Hampshire	80145 LFE Corp., Process Control Div. formerly API Instrument Co. Chesterland, Ohio	83058 The Carr Co., United Can Div. of TRW Cambridge, Massachusetts	88690 Replaced by 04217
74970 Johnson E.F., Co. Waseca, Minnesota	80183 Use 56289 Sprague Products North Adams, Massachusetts	83298 Bendix Corp. Electric Power Div. Eatontown, New Jersey	89536 John Fluke Mfg. Co., Inc. Seattle, Washington
75042 TRW Electronics Components IRC Fixed Resistors Philadelphia, Pennsylvania	80294 Bourns Inc., Instrument Div. Riverside, California	83330 Herman H. Smith, Inc. Brooklyn, New York	89730 G.E. Co., Newark Lamp Works Newark, New Jersey
75376 Kurz-Kasch Inc. Dayton, Ohio		83478 Rubbercraft Corp. of America, Inc. West Haven, Connecticut	
75378 CTS Knights Inc. Sandwich, Illinois			

Federal Supply Codes for Manufacturers (cont)

90201 Mallory Capacitor Co. Div. of P.R. Mallory Co., Inc. Indianapolis, Indiana	91836 King's Electronics Co., Inc. Tuckahoe, New York	95354 Methode Mfg. Corp. Rolling Meadows, Illinois	98291 Sealectro Corp. Mamaroneck, New York
90211 Use 56365 Square D Co. Chicago, Illinois	91929 Honeywell Inc. Micro Switch Div. Freeport, Illinois	95712 Bendix Corp. Electrical Components Div. Microwave Devices Plant Franklin, Indiana	98388 Royal Industries Products Div. San Diego, California
90215 Best Stamp & Mfg. Co. Kansas City, Missouri	91934 Miller Electric Co., Inc. Div. of Aunet Woonsocket, Rhode Island	95987 Weckesser Co. Inc. Chicago, Illinois	98743 Replaced by 12749
90303 Mallory Battery Co. Div. of Mallory Co., Inc. Tarrytown, New York	92194 Alpha Wire Corp. Elizabeth, New Jersey	96733 San Fernando Electric Mfg. Co. San Fernando, California	98925 Replaced by 14433
91094 Essex International Inc. Suglex/IWP Div. Newmarket, New Hampshire	93332 Sylvania Electric Products Semiconductor Products Div. Woburn, Massachusetts	96853 Gulton Industries Inc. Measurement and Controls Div. formerly Rustrak Instruments Co. Manchester, New Hampshire	99120 Plastic Capacitors, Inc. Chicago, Illinois
91293 Johanson Mfg. Co. Boonton, New Jersey	94145 Replaced by 49956	96881 Thomson Industries, Inc. Manhasset, New York	99217 Bell Industries Elect. Comp. Div. formerly Southern Elect. Div. Burbank, California
91407 Replaced by 58474	94154 Use 94988 Wagner Electric Corp. Tung-Sol Div. Newark, New Jersey	97540 Master Mobile Mounts, Div. of Whitehall Electronics Corp. Ft. Meyers, Florida	99392 STM Oakland, California
91502 Associated Machine Santa Clara, California	94222 Southco Inc. formerly South Chester Corp. Lester, Pennsylvania	97913 Industrial Electronic Hardware Corp. New York, New York	99515 ITT Jennings Monrovia Plant Div. of ITT Jennings formerly Marshall Industries Capacitor Div. Monrovia, California
91506 Augat Inc. Attleboro, Massachusetts	95146 Alco Electronic Products Inc. Lawrence, Massachusetts	97945 Penwalt Corp. SS White Industrial Products Div. Piscataway, New Jersey	99779 Use 29587 Bunker-Ramo Corp. Barnes Div. Landsdowne, Pennsylvania
91637 Dale Electronics Inc. Columbus, Nebraska	95263 Leecraft Mfg. Co. Long Island City, New York	97966 Replaced by 11358	99800 American Precision Industries Inc. Delevan Division East Aurora, New York
91662 Elco Corp. Willow Grove, Pennsylvania	95264 Replaced by 98278	98094 Replaced by 49956	99942 Centrelab Semiconductor Centrelab Electronics Div. of Globe-Union Inc. El Monte, California
91737 Use 71468 Gremar Mfg. Co., Inc. ITT Cannon/Gremar Santa Ana, California	95275 Vitramon Inc. Bridgeport, Connecticut	98159 Rubber-Teck, Inc. Gardena, California	Toyo Electronics (R-Ohm Corp.) Irvine, California
91802 Industrial Devices, Inc. Edgewater, New Jersey	95303 RCA Corp. Receiving Tube Div. Cincinnati, Ohio	98278 Malco A Microdot Co., Inc. Connector & Cable Div. Pasadena, California	National Connector Minneapolis, Minnesota
91833 Keystone Electronics Corp. New York, New York	95348 Gordo's Corp. Bloomfield, New Jersey		

Kenya •

ADCOM Ltd
P.O. Box 30070
Nairobi, Kenya, East Africa
Tel: 331955, TLX: 22639

Korea •

Electro-Science Korea Co.
C.P.O. Box 8446
Room 403, Boondo Bldg
56-12 Jangchung-Ika
Jung-ku
Seoul, Korea
Tel: 261-7702, TLX: K25381

Kuwait ■

Al-Bahar Int. Group
P.O. Box 26672 Safat
Kuwait, Arabian Gulf
Tel: 4501087, TLX: 44822

Lebanon and Jordan ■

Mabek (Electronic Division)
P.O. Box 11-3823
Beirut, Lebanon
Tel: 812523, TLX: (923) 22889

Libya ■

Fluke (Holland) B.V.
P.O. Box 5053, 5004 EB Tilburg
Zevenheuvelenweg 53, 5048 AN Tilburg
The Netherlands
Tel: (013) 673973, TLX: 52237

Malaysia •

Mecomb Malasia SDN BHD
Lot 2, Lorong 13/6A
Petaling Jaya, Malaysia
Tel: 573455, TLX: MA37605

Mexico •

Electronica y Tecnologia
Avanzada S.A. de C.V.
Pafnucio Padilla 53
Circuito Comercial Satellite
Naucalpan Edo. De Mexico
Tel: 393 0902
TLX (383) 017 2697

Nepal •

Associated Enterprises
GPO Box 790, Pyaphal Tole
Kathmandu, Nepal
Tel: 13868

Netherlands ■

Fluke (Nederland) B.V.
Gasthuisring 14
5041 DS Tilburg
The Netherlands

P.O. Box 115
5000 AC Tilburg
The Netherlands
Tel: (013) 352455, TLX: 52683

New Zealand •

McLean Information Technology, Ltd
P.O. Box 9464, Newmarket
Auckland 1, New Zealand
Tel: 501-801, TLX: (791) NZ 215 70

McLean Information Technology, Ltd
P.O. Box 496
Wellington, New Zealand
Tel: 851-450 or 844-424

Nigeria •

Mofat Engineering Co., Ltd
P.O. Box 6369
Lagos, Nigeria
Tel: 960744, TLX: 21353

Norway ■

Morgensterne & Co A/S
Konghellegate 3
P.O. Box 6688, Rodelokka
Oslo 5, Norway
Tel: (2) 356110, TLX: (856) 71719

Oman ■

OHI Communications
P.O. Box 889
Muscat
Sultanate of Oman
Tel: 702666 or 703862
TLX: 3168

Pakistan •

Pak International Operations
505 Muhammadi House
I.I. Chundrigar Road
P.O. Box 5323, Karachi, Pakistan
Tel: 221127, TLX: (952) 24494

PDR Yemen ■

Fluke (Holland) B.V.
P.O. Box 5053, 5004 EB Tilburg
Zevenheuvelenweg 53, 5048 AN Tilburg
The Netherlands
Tel: (013) 673973, TLX: 52237

Peru •

Importaciones Y Representaciones
Electronicas S.A.
Avda. Franklin D. Roosevelt 105
Lima 1, Peru
Tel: 288650, TLX: (394) 25663

Philippines •

Spark Radio & Electronics, Corp
1044 Ongpin St., Sta. Cruz
Manila, Philippines
Tel: 47-11-94, TLX: 27901

Spark Radio & Electronics Corp
Greenhills P.O. Box 610
San Juan, Metro-Manila
Philippines Zip 3113
Tel: 77-51-92

Poland ■

Amtest Associates Ltd
Clarence House, 31, Clarence St
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: 928855

Portugal ■

Decada-Equipamentos de
Electronica, Lda
Rue Pedro Nunes, 47-C
1000 Lisboa, Portugal
P.O. Box 1128, 1003 Lisboa Codex
Tel: (19) 574984, TLX: (832) 18469

Qatar ■

Technology Organisation
P.O. Box 5549, Doha, Qatar
Tel: 321431, TLX: (957) 4581

Romania ■

Amtest Associates Ltd
Clarence House, 31, Clarence St
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: 928855

Saudi Arabia ■

Electronic Equipment Marketing Co
P.O. Box 3750
Riyadh, Saudi Arabia
Tel: (1) 477-165001
TLX: (928) 201120

Singapore •

Rank O'Connor's (PTE) Limited
98 Pasir Panjang Road
Singapore 0511

Republic of Singapore
Tel: 637944
TLX: RS21023

Somalia ■

Fluke (Holland) B.V.
P.O. Box 5053, 5004 EB Tilburg
Zevenheuvelenweg 53, 5048 AN Tilburg
The Netherlands
Tel: (013) 673973, TLX: 52237

South Africa •

Fluke S.A. (Pty) Ltd
P.O. Box 39797, Bramley 2018
Republic of South Africa
Tel: (011) 786-3170, TLX: 424328

Spain ■

Hispano Electronics S.A.
Poligono Industrial Urtina
Apartado de Correos 48
Alcorcon (Madrid), Spain
Tel: (1) 6194108
TLX: (831) 22404

Sri Lanka •

Jay-Es Electronics
160 Poorvarama Mawatha
Colombo 5, Sri Lanka
Tel: 073-2393

Sweden ■

Teleinstrument AB
P.O. Box 4490
162 04 Vallingby, Sweden
Tel: (8) 380370, TLX: (854) 15770

Switzerland ■

Traco Electronic AG
Jenatschstrasse 1
8002 Zurich, Switzerland
Tel: (1) 2010711, TLX: (845) 54318

Syria ■

Mabek (Electronic Division)
P.O. Box 4238
Damascus, Syria

Taiwan •

Schmidt Scientific Far East Ltd
906, Chia Hsin Bldg
96, Chung Shan N. Rd., Sec. 2
Taipei, Taiwan
Tel: 5414600, TLX: 11111

Thailand •

Measuretronix Ltd.
1899/10 Ramkamhaeng Rd
Huamark, Bangkok 24, Thailand
Tel: 3143369, TLX: 81143

Tunisia ■

Selep S.A.R.L.
6, Rue de Sparte
Tunis - 1000 RP, Tunisia
Tel: (1) 248093, TLX: (934) 13030

Turkey ■

Erkman Elektronik Aletler
Ticaret Anonim Sirketi
Necatibey Cad 92/3
Karakoy, Istanbul, Turkey
Tel: 441546
TLX: (821) 23353

United Arab Emirates ■

Al Sanani Trad. Est
P.O. Box 7187
Abu-Dhabi, United Arab Emirates
Tel: 821370 or 821371
TLX: 23966

United Kingdom ■

Fluke (Great Britain) Ltd
Colonial Way
Watford, Herts, WD2 4TT
United Kingdom
Tel: (0923) 40511, TLX: 934583
Rapifax. (0923) 25067

Uruguay •

Coasin Uruguay S.A.
Casilla de Correos 1400
Libertad 2529
Montevideo, Uruguay
Tel: 78-90-15, TLX: UY6571

U.S.S.R. ■

Amtest Associates Ltd
Clarence House, 31, Clarence St.
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: 928855

Venezuela •

Coasin, C.A.
Calle 9 Con Calle 4, Edif. Edinurbi
Apartado De Correos
NR-70 136 Los Ruices
Caracas 1070A, Venezuela
Tel: 239-0967, TLX: (395) 21027

Yemen ■

Fluke (Holland) B.V.
P.O. Box 5053, 5004 EB Tilburg
Zevenheuvelenweg 53, 5048 AN Tilburg
The Netherlands
Tel: (013) 673973, TLX: 52237

Yugoslavia ■


Amtest Associates Ltd
Clarence House 31, Clarence St.
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: 928855

■ Supplied and Supported by —

Fluke (Holland) B.V.
P.O. Box 5053, 5004 EB Tilburg
Zevenheuvelenweg 53, 5048 AN Tilburg
The Netherlands
Tel: (013) 673973, TLX: 52237

● Supplied and Supported by —

Fluke International Corporation
P.O. Box C9090
Everett, WA 98206 U.S.A.
Tel: (206) 356-5500
TLX: 152662 JOHN FLUKE EVT



TECHNICAL SERVICE CENTERS

U.S.A.

CA, Burbank

John Fluke Mfg. Co., Inc.
Tel: (213) 849-4641

CA, Santa Clara

John Fluke Mfg. Co., Inc.
Tel: (408) 727-8121

CO, Denver

John Fluke Mfg. Co., Inc.
Tel: (303) 750-1228

FL, Orlando

John Fluke Mfg. Co., Inc.
Tel: (305) 896-2296

IL, Rolling Meadows

John Fluke Mfg. Co., Inc.
Tel: (312) 398-5800

MA, Burlington

John Fluke Mfg. Co., Inc.
Tel: (617) 273-4678

MD, Rockville

John Fluke Mfg. Co., Inc.
Tel: (301) 770-1576

NJ, Paramus

John Fluke Mfg. Co., Inc.
Tel: (201) 262-9550

TX, Dallas

John Fluke Mfg. Co., Inc.
Tel: (214) 233-9945

WA, Everett

John Fluke Mfg. Co., Inc.
Tel: (206) 356-5560

Other Countries

Argentina, Buenos Aires

Coasin S.A.
Tel: 552-5248/3485
TLX: 122284 COASN AR

Australia, Concord

Elmeasco Instruments Pty Ltd.
Tel: (02) 736-2888
TLX: (790) 25887

Australia, Mount Waverley

Elmeasco Instruments Pty Ltd.
Tel: 03-233-4044
TLX: 36206

Australia, Brisbane

Elmeasco Instruments Pty Ltd
Tel: (07) 229-3161

Austria, Vienna

Walter Rekirsch Elektronische Gerate
GmbH & Co.
Tel: (0222) 235555
TLX: 134759

Belgium, Brussels

Fluke (Belgium) SA/NA
Tel: (02) 2164090
TLX: 26312

Brazil, Sao Paulo

Fluke Brasil-Industria E Comercio Ltda
Tel: (011) 421-3603
TLX: 01135589 FLKE BR

Canada, Calgary, AB

Allan Crawford Associates Ltd.
Tel: (403) 230-1341

Canada, Burnaby, BC

Allan Crawford Associates Ltd.
Tel: (604) 294-1326

Canada, Mississauga, ON

Allan Crawford Associates Ltd.
Tel: (416) 678-1500

Canada, St. Laurent, PQ

Allan Crawford Associates Ltd.
Tel: (514) 731-8564

Chile, Santiago

Intronica Chile Ltda.
Tel: 44940
TLX: 240301

China, Beijing

Beijing Radio Research Institute
Tel: 445612

Colombia, Bogota

Sistemas E Instrumentacion, Ltda.
Tel: 232-45-32
TLX: 45787 COASN CO

Denmark, Ballerup

Tage Olsen A/S
Tel: (02) 658111
TLX: 35293 TOAS SK

Ecuador, Quito

Edificio "Jerico"
Tel: 529684, 526759
TLX: 2865 Protec Ed

Egypt, Cairo

Electronic Engineering Liaison Office
Tel: 691588
TLX: (927) 92502

England, Watford, Herts

Fluke (Great Britain) LTD
Tel: 44-923-40511
TLX: 934583

Finland, Kaunialinen

Oy Findip AB
Tel: (0) 5052255
TLX: 123129

France, BUC

M.B. Electronique S.A.
Tel: (01) 9568131
TLX: 695414

Greece, Athens

Hellenic Scientific Representations
Tel: (01) 711140
TLX: 219330

Hong Kong, Hong Kong

Schmidt & Co. (H.K.) Ltd.
Tel: 5-455644
TLX: 74766 SCHMC HK

India, Bombay

Hinditron Services Pvt. Ltd.
Tel: 811316, 815344
TLX: 953-112326 HSPL IN

India, Bangalore

Hinditron Services Pvt. Ltd.
Tel: 33139
TLX: 0845741

India, New Delhi

Hinditron Services Pvt. Ltd.
Tel: 619118
TLX: 031 4890 SRMP IN

Indonesia, Jakarta Selatan

P.T. Dwi Tunggal Jaya Sakti
Tel: 716374
TLX: 47308 DIJS IA

Israel, Ramat Hasharon

R.D.T. Electronics Engineering Ltd.
Tel: (03) 483216
TLX: 32143

Italy, Milan

Sistrel S.p.A.
Tel: (02) 6181893
TLX: 334643

Italy, Rome

Sistrel S.p.A.
Tel: (06) 5915551
TLX: 68356

Japan, Tokyo

John Fluke Mfg. Co., Inc.
Japan Branch
Tel: (03) 434-0181
TLX: (781) 2424331 (FLUKJPJ)

Korea, Seoul

Electro-Science Korea Co.
Tel: 261-7702, 260-1908
TLX: K25381

Malaysia, Petaling Jaya

Mecomb Malaysia SDN BHD
Tel: 573455
TLX: MA37605

Mexico, Mexico D.F.

Electronica y Tecnologia
Avanzada S.A. de C.V. (ETA)
Tel: 393 09 02 or 393 57 62
TLX: 0172697 BLOSME

Netherlands, Maarssen

Fluke (Nederland) B.V.
Tel: (030) 436514
TLX: 47128

Netherlands, Tilburg

Fluke (Holland) B.V.
Tel: (013) 673973
TLX: 52237

New Zealand, Auckland

McLean Information Technology, Ltd.
Tel: 501-801, 501-219, 587-037
TLX: NZ21570 THERMAL

Norway, Oslo

Morgenstjerne & Co A/S
Tel: (02) 356110
TLX: 71719

Pakistan, Karachi

Pak International Operations
Tel: 221127, 239052
TLX: 24494 PIO PK

Peru, Lima

Importaciones Y Representaciones
Electronicas S.A.
Tel: 288650
TLX: 37425663

Philippines, Metro Manila

Spark Radio & Electronics Corp.
Tel: 78-78-16
TLX: 27901 RLA PH

Portugal, Lisboa

Decada-Equipamentos de
Electronica, Lda.
Tel: (19) 574984
TLX: 18469

Republic of Singapore, Singapore

Rank O'Connor's (PTE) Limited
Tel: 637944, 239052
TLX: OCONSIN RS21023

Republic of South Africa, Bramley

Fluke S.A. (Pty) Ltd.
Tel: (011) 786-3170
TLX: 424328

Spain, Alcorcon (Madrid)

Hispano Electronics S.A.
Tel: (01) 6194108
TLX: 22404/42634

Sweden, Vallingby

Teleinstrument AB
Tel: (08) 380370
TLX: 15770

Switzerland, Zurich

Traco Electronic AG
Tel: (01) 2010711
TLX: 54318

Taiwan, Taipei

Schmidt Scientific Far East Ltd.
Tel: 5414600
TLX: 11111 Schmidt

Thailand, Bangkok

Measuretronix Ltd.
Tel: 3143369, 3143430
TLX: 81143 DEJOBKK TH

Turkey, Istanbul

Erkman Elektronik Aletler
Tel: (01) 5461
TLX: 23353

Uruguay, Montevideo

Coasin Uruguay S.R.L.
Tel: 29-31-952
TLX: UY 6571 OROCUER

Venezuela, Caracas

Coasin, C.A.
Tel: 38-78-42, 38-78-86
TLX: 21027 EMVEN VE

West Germany, Ismaning

Fluke (Deutschland) GmbH
Tel: (089) 96050
TLX: 0522472



U.S. SALES AREAS for all Fluke products

AK, Anchorage

Harry Lang & Associates
1371 Hillcrest Drive #303
Anchorage, AK 99503
(907) 279-5741

AL, Huntsville

John Fluke Mfg. Co., Inc.
3322 S. Memorial Parkway
Suite 96
Huntsville, AL 35801
(205) 881-6220

AZ, Tempe

John Fluke Mfg. Co., Inc.
2125 S. 48th Street
Suite 104
Tempe, AZ 85282
(602) 967-8724

Tucson

(602) 790-9881

CA, Los Angeles

John Fluke Mfg. Co., Inc.
20902 South Bonita St.
Carson, CA 90746
(213) 538-3900
or (714) 761-2449

San Diego

John Fluke Mfg. Co., Inc.
9601 Aero Drive, Suite 290
San Diego, CA 92123
(714) 226-1254

Santa Clara

John Fluke Mfg. Co., Inc.
2300 Walsh Ave., Bldg. K
Santa Clara, CA 95051
(408) 727-0513

Tustin

John Fluke Mfg. Co., Inc.
15445 Red Hill Ave., Suite F
Tustin, CA 92680
(714) 838-8863

CO, Denver

John Fluke Mfg. Co., Inc.
1980 South Quebec St. #4
Denver, CO 80231
(303) 750-1222

CT, Hartford

John Fluke Mfg. Co., Inc.
Glen Locken East
41-C New London Turnpike
Glastonbury, CT 06033
(203) 659-3541

FL, Orlando

John Fluke Mfg. Co., Inc.
940 N. Fern Creek Ave.
Orlando, FL 32803
(305) 896-4881

GA, Atlanta

John Fluke Mfg. Co., Inc.
2700 Delk Rd., Suite 250
Marietta, GA 30067
(404) 953-4747

HI, Honolulu

EMC Corporation
2979 Ualena St.
Honolulu, HI 96819
(808) 836-1138

IA, Iowa City

(319) 354-2811

IL, Chicago

John Fluke Mfg. Co., Inc.
3740 Industrial Ave.
Rolling Meadows, IL 60008
(312) 398-0850

IN, Indianapolis

John Fluke Mfg. Co., Inc.
877 Purdue
Suite 101
Indianapolis, IN 46268
(317) 875-7870

KS, Kansas City

John Fluke Mfg. Co., Inc.
4550 W. 109th St., Suite 130
Shawnee Mission, KA 66211
(913) 381-9800

LA, New Orleans

(504) 455-0814

MA, Burlington

John Fluke Mfg. Co., Inc.
25 "B" Street
Burlington MA 01803
(617) 273-4674

MD, Baltimore

(301) 792-7060

Rockville

John Fluke Mfg. Co., Inc.
5640 Fishers Lane
Rockville, MD 20852
(301) 770-1570

MI, Detroit

John Fluke Mfg. Co., Inc.
13955 Farmington Rd.
Livonia, MI 48154
(313) 522-9140

MN, Bloomington

John Fluke Mfg. Co., Inc.
1801 E. 79th St., Suite 9
Bloomington, MN 55420
(612) 854-5526

MO, St. Louis

John Fluke Mfg. Co., Inc.
2029 Woodland Parkway
Suite 105
St. Louis, MO 63141
(314) 993-3805

NC, Greensboro

John Fluke Mfg. Co., Inc.
1310 Beaman Place
Greensboro, NC 27408
(919) 273-1918

NJ, Paramus

John Fluke Mfg. Co., Inc.
P.O. Box 930
West 75 Century Road
Paramus, NJ 07652
(201) 262-9550

NM, Albuquerque

John Fluke Mfg. Co., Inc.
1108 Alvarado Drive N.E.
Albuquerque, NM 87110
(505) 881-3550

NY, Rochester

John Fluke Mfg. Co., Inc.
4515 Culver Road
Rochester, NY 14622
(716) 323-1400

OH, Cleveland

John Fluke Mfg. Co., Inc.
7830 Freeway Circle
Middleburg Heights, OH 44130
(216) 234-4540

Columbus

(614) 889-5715

Dayton

John Fluke Mfg. Co., Inc.
4756 Fishburg Rd.
Dayton, OH 45424
(513) 233-2238

OR, Portland

John Fluke Mfg. Co., Inc.
18360 S.W. Springfield Lane
Aloha, OR 97007
(503) 642-1342

PA, Philadelphia

John Fluke Mfg. Co., Inc.
1010 West 8th Ave., Suite H
King of Prussia, PA 19406
(215) 265-4040

Pittsburgh

(412) 261-5171

TX, Austin

John Fluke Mfg. Co., Inc.
Creek Gardens, Suite 103
8705 Shoal Creek Blvd.
Austin, TX 78758
(512) 459-3344

Dallas

John Fluke Mfg. Co., Inc.
14400 Midway Road
Dallas, TX 75234
(214) 233-9990

Houston

John Fluke Mfg. Co., Inc.
4240 Blue Bonnet Dr.
Stafford, TX 77477
(713) 491-5995

San Antonio

John Fluke Mfg. Co., Inc.
10417 Guffdale
San Antonio, TX 78216
(512) 340-2621

UT, Salt Lake City

John Fluke Mfg. Co., Inc.
5226 So. 300 West, Suite #2
Salt Lake City, UT 84107
(801) 268-9331

WA, Seattle

John Fluke Mfg. Co., Inc.
5020 148th Ave. N.E.
Suite #110
Redmond, WA 98052
(206) 881-6966

Service Center Areas

CA, Burbank (213) 849-4641
CA, Santa Clara (408) 727-8121
CO, Denver (303) 750-1228
FL, Orlando (305) 896-2296
IL, Chicago (312) 398-5800
MA, Burlington (617) 273-4678
MD, Rockville (301) 770-1576
NJ, Paramus (201) 262-9550
TX, Dallas (214) 233-9945
WA, Everett (206) 356-5560

For more information on Fluke products or Sales Offices you may dial (800) 426-0361 toll-free in most of the U.S.A.
From Alaska, Hawaii, or Washington, phone (206) 356-5400. From Canada and other countries phone (206) 356-5500.



John Fluke Mfg. Co., Inc., P.O. Box C9090, Everett, WA 98206
Fluke (Holland) B.V., P.O. Box 5053, 5004 EB, Tilburg, The Netherlands. Phone (013) 673973
Litho in U.S.A. 1/83

INTERNATIONAL SALES OFFICES

Argentina •

Coasin, S.A.
Virrey del Pino 4071
Buenos Aires, Argentina
Tel: 552-5248, TLX: 22284

Australia •

Elmeasco Instruments Pty Ltd
P.O. Box 30, Concord, N.S.W.
Australia 2137
Tel: (2) 736-2888, TLX: (790) 25887

Elmeasco Instruments Pty Ltd
21-23 Anthony Drive
Mt. Waverley, VIC 3149
Australia
Tel: 233-4044, TLX: (790) 36206

Elmeasco Instruments Pty Ltd.
Professional Suites Bldg.
G.P.O. Box 2360
Brisbane, 4001, Australia
Tel: (07) 229-3161

Elmeasco Instruments Pty Ltd.
G.P.O. Box 1240, Adelaide
South Australia 5001
Tel: (08) 271-1839

Elmeasco Instruments Pty. Ltd.
P.O. Box 95, Gosnells
West Australia 6110
Tel: (09) 398-3362

Austria •

Walter Rekersch
Elektronische Geräte GmbH & Co.
Vertrieb KG
Obachgasse 28
Vienna, Austria
Tel: (0222) 235555, TLX: 134759

Bangladesh •

Motherland Corporation
24 Hathkolia Rd., Tikatuli
Dacca 3, Bangladesh
Tel: 257249 or 255776

Belgium •

Fluke (Belgium) S.A./N.V.
6, Rue de Geneve
1140 Brussels, Belgium
Tel: (2) 2164090, TLX: 26312

Bolivia •

Coasin Bolivia S.R.L.
Casilla 7295, La Paz, Bolivia
Tel: 40962, TLX: 3233

Brazil •

Fluke Brasil-Industria E
Comercio LTDA
Al. Amazonas 422,
Alphaville, Barueri,
CEP 06400 Sao Paulo, Brazil
Tel: (011) 421-5477, TLX: 01135589
Fluke Brasil-Industria E
Comercio LTDA
Av. Henrique Valadares, 23/401
Rio de Janeiro, Brazil
Tel: 252-1297

Brunei •

Rank O'Connor's (PTE) Limited
No. 8, BK.D
Surfiri Shop House Complex
Mile 1, Jalong Tutong
Bandar Seri Begawan, Brunei
Tel: 26680

Bulgaria •

Amtest Associates Ltd.
Clarence House, 31, Clarence St.
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: 928855

Canada •

Allan Crawford Assoc., Ltd.
#14 1935 30th Ave. N.E.
Calgary, Alberta T2E 6Z5
Tel: (403) 230-1341, TLX: 03-821186

Allan Crawford Assoc., Ltd.
P.O. Bag 3967
Postal Station "D"
Edmonton, Alberta T5L 4K1
Tel: (403) 451-4893

Allan Crawford Assoc., Ltd.
3795 William Street
Burnaby, British Columbia V5C 3H3
Tel: (604) 294-1326, TLX: 04-54247

Allan Crawford Assoc., Ltd.
881 Lady Ellen Place
Ottawa, Ontario K1Z 5L3
Tel: (613) 722-7682, TLX: 0533600

Allan Crawford Assoc., Ltd.
6503 Northam Drive
Mississauga, Ontario L4V 1J2
Tel: (416) 678-1500, TLX: 06968769

Allan Crawford Assoc., Ltd.
7918 cote de Liesse
St. Laurent, Quebec H4T 1E7
Tel: (514) 731-8564, TLX: 05824944

Chad •

Fluke (Holland) B.V.
P.O. Box 5053, 5004 EB Tilburg
Zevenheuvelenweg 53, 5048 AN Tilburg
The Netherlands
Tel: (013) 673973, TLX: 52237

Chile •

Intronica Chile Ltda.
Manuel Montt 024 - Of. D
Casilla 16228, Santiago 9, Chile
Tel: 44940, TLX: 240301
Attn: Intronica Chile

China, People's Republic of •

Fluke International Corporation
P.O. Box C9090
Everett, WA 98206, U.S.A.
Tel: (206) 356-5511
TLX: 152662 JOHN FLUKE EVT

Colombia •

Sistemas E Instrumentacion, Ltda.
Carrera 13, No. 37-43, Of. 401
Ap. Aereo 29583
Bogota DE, Colombia SA
Tel: 232-45-32, TLX: 45787

Cyprus •

Chris Radiovision Ltd.
P.O. Box 1989, Nicosia, Cyprus
Tel: 66121, TLX: 8262395

Czechoslovakia •

Amtest Associates Ltd.
Clarence House, 31, Clarence St.
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: 928855

Denmark •

Tage Olsen A/S
Ballerup Byvej 222
DK - 2750 Ballerup, Denmark
Tel: (2) 658111, TLX: (855) 35293

Ecuador •

Proteco Coasin Cia., Ltda.
Edificio "Jerico"
Ave. 12 de Octubre #2285 y
Ave. Orellana (Planta Baja)
Quito, Ecuador
Tel: 529684, TLX: (393) 2865
Proteco Coasin Cia., Ltda.
Calderon 103 y Malecon
Casilla #9733
Guayaquil, Ecuador
Tel: 526093

Egypt and Sudan •

Electronic Engineering Liaison Office
P.O. Box 2891 Horreya
Heliopolis, Cairo, Egypt
Tel: 691588, TLX: (927) 92502

England •

Fluke (Great Britain) LTD.
Colonial Way
Watford, Herts, WD2 4TT
United Kingdom
Tel: (0923) 40511, TLX: (851) 934583
Rapifax: (0923) 25067

Ethiopia •

Fluke (Holland) B.V.
P.O. Box 5053, 5004 EB Tilburg
Zevenheuvelenweg 53, 5048 AN Tilburg
The Netherlands
Tel: (013) 673973, TLX: 52237

Fiji •

AWA Fiji
47 Forster Road, Walu Bay
Suva, Fiji
Tel: 312079, TLX: FJ2347

Finland •

Oy Findip AB, Teollisuustie 7
02700 Kauniainen, Finland
Puh: (0) 5052255, TLX: (857) 123129

France •

M.B. Electronique S.A.
Rue Fourny 606, Z1 Centre
78530 BUC
B.P. No. 31
78530 BUC, France
Tel: (3) 9568131, TLX: (842) 695414

German Democratic Republic •

Amtest Associates Ltd.
Clarence House, 31, Clarence St.
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: 928855

German Federal Republic •

Fluke (Deutschland) GmbH
Max-Hueber StraBe 8
8045 Ismaning, West Germany
Tel: (089) 96050, TLX: 522472
Rapifax: (089) 9605166
Fluke (Deutschland) GmbH
Meineckestrasse 53
4000 Dusseldorf 30, West Germany
Tel: (0211) 450831, TLX: (841) 8585576

Greece •

Hellenic Scientific Representations Ltd.
11, Vrasside Street
Athens 612, Greece
Tel: (1) 711140, TLX: (863) 219330

Hong Kong •

Schmidt & Co. (H.K.) Ltd.
28th Fl. Wing on Centre
111 Connaught Road
Central Hong Kong
Tel: 5-455644
TLX: 74766

Hungary •

Amtest Associates Ltd.
Clarence House, 31, Clarence St.
Staines, Middlesex TW18 4SY
United Kingdom
Tel: (784) 63555, TLX: 928855

Iceland •

Kristjan O. Skagfjord Ltd.
P.O. Box 906
Reykjavik, Iceland
Tel: 24120, TLX: 2133

India •

Hinditron Services Pvt. Ltd
69/A.L. Jagmohandas Marg
Bombay 400 006, India
Tel: 811316, TLX: 112326

Hinditron Services Pvt. Ltd
8th Main Road
33/44-A Raj Mahal Vilas Extension
Bangalore 560 080, India
Tel: 331339, TLX: (953) 0845741

Hinditron Services Pvt. Ltd.
Shantiniketan, Office No.6
6th Floor, 8 Camac Street
Calcutta 700 017, India
Tel: 434032, 447541

Hinditron Services Pvt. Ltd.
204-206 Henkunt Tower
98 Nehru Place
New Delhi, 110019, India
Tel: 640380, TLX: (95) 314890

Hinditron Services Pvt. Ltd.
Srinath Complex, 5th Floor
1-1-58/1 to 1-1-58/11
Sarajini Devi Road
Secunderabad 500 003, India
Tel: 821117, TLX: (953) 0155 575

Indonesia •

P.T. Dwi Tunggal Jaya Sakti
Kebayoran Baru
Jakarta Selatan, Indonesia
Tel: 716374, TLX: 45305

Iraq •

Fluke (Holland) B.V.
P.O. Box 5053, 5004 EB Tilburg
Zevenheuvelenweg 53, 5048 AN Tilburg
The Netherlands
Tel: (013) 673973, TLX: 52237

Ireland •

Euro Electronics
32 Brews Hill
Naven County Meath, Ireland
Tel: (46) 23577, TLX: (851) 3182

Israel •

R.D.T. Electronics Engineering Ltd.
P.O. Box 75
46, Sokolov Street
Ramat Hasharon 47235, Israel
Tel: (3) 483216, TLX: (922) 32143

Italy •

Sistrel S.p.A.
Via Pelizza da Volpedo 59
20092 Cinisello Balsamo
Milan, Italy
Tel: (2) 6181893, TLX: (843) 334643

Sistrel S.p.A.
Via Giuseppe Armellini No. 39
00143 Rome, Italy
Tel: (6) 5915551, TLX: (843) 68356

Sistrel S.p.A.
Via Cinto
Parco S. Paolo
80126 Naples, Italy
Tel: (81) 7679700


Japan •

John Fluke Mfg. Co., Inc.
Japan Branch
Sumitomo Higashi
Shinbashi Bldg.
1-1-11 Hamamatsucho
Minato-ku, Tokyo, Japan
Tel: (03) 434-0181, TLX: 2424331



John Fluke Mfg. Co., Inc. / PO Box C9090 / Everett, WA 98206 / (206) 356 5400

Litho in U.S.A. 1/83

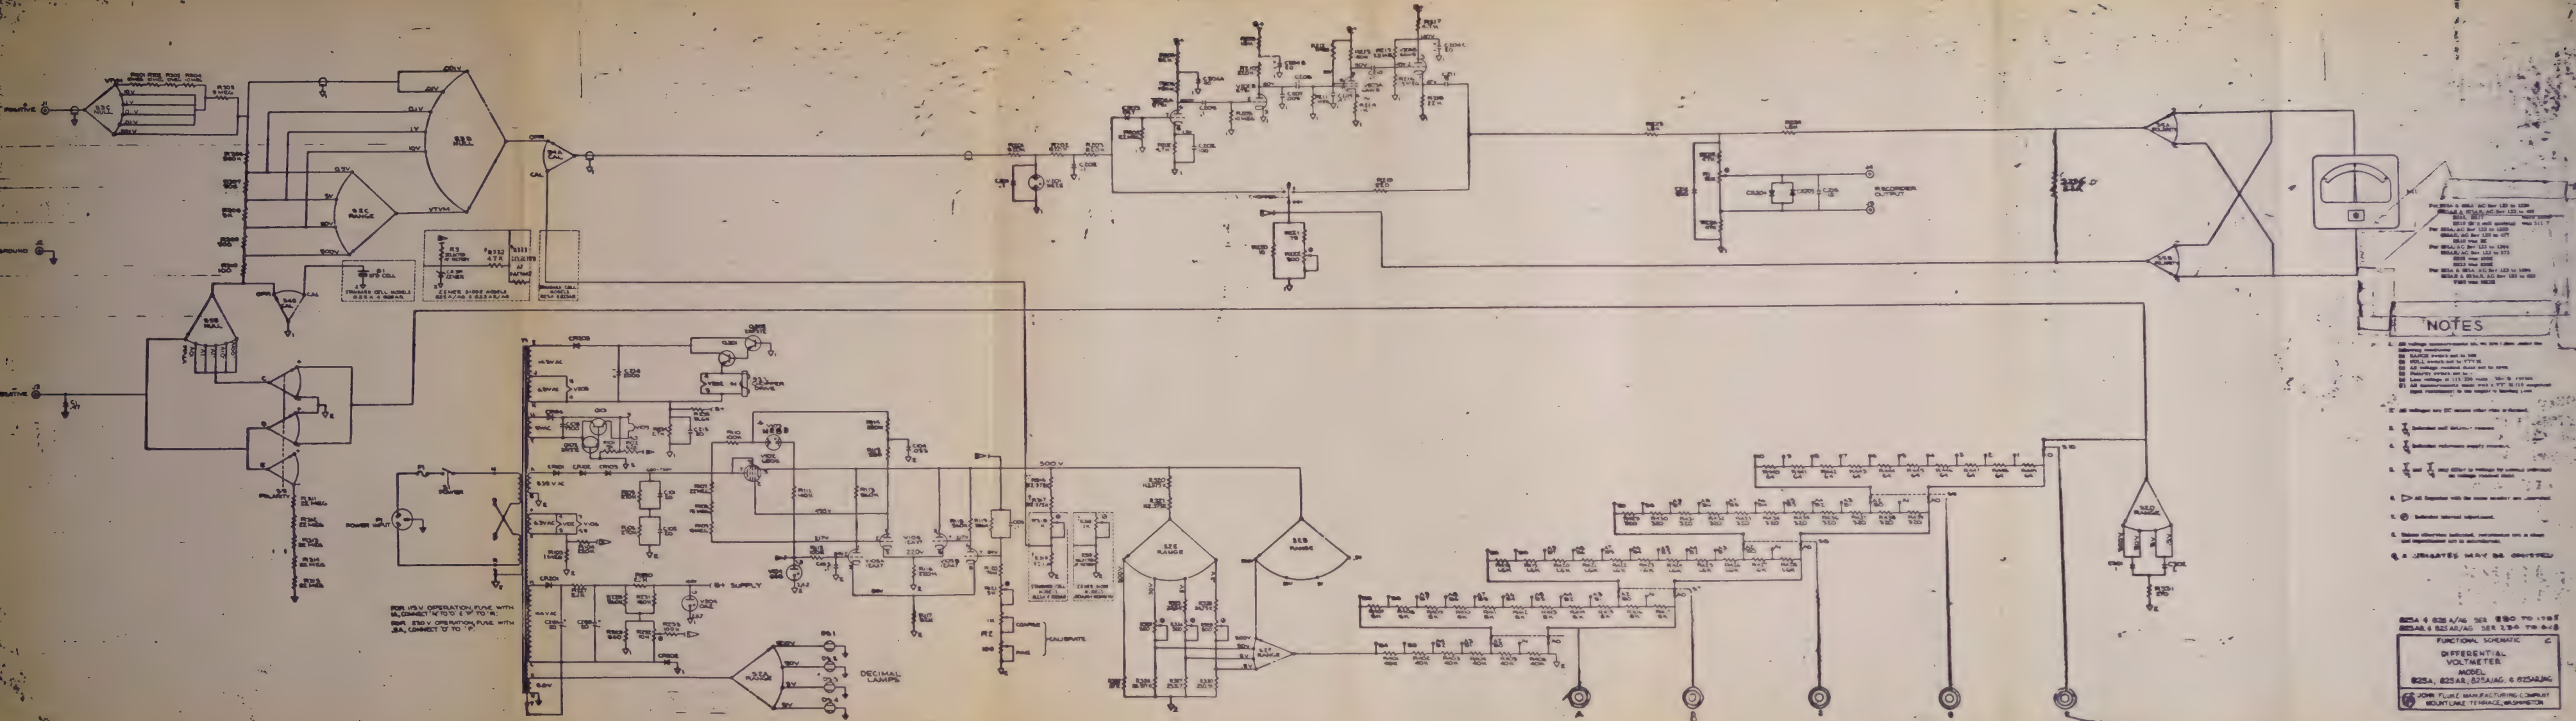

For 0035A & 0035B, AC Ser 123 to 1230
 0035A & 0035B, AC Ser 123 to 400
 0035A, 0035B
 0035B 001's only (unusable) was 311 7
 For 0035A, AC Ser 123 to 1200
 0035A, AC Ser 120 to 407
 0035B was 001
 For 0035A, AC Ser 123 to 1204
 0035A, AC Ser 123 to 573
 0035B was 0001
 0035C was 0000E
 For 0035A & 0035A, AC Ser 123 to 1004
 0035A & 0035A, AC Ser 123 to 600
 0035C was 0000E

NOTES

1. ☐ All voltage measurements shall be made 1 inch under the following conditions:
 - a. MATHC switch set to 500
 - b. MATHC switch set to 1000
 - c. All voltage readings shall be to 0.1 volts
 - d. Battery switch set to on
 2. ☐ Line voltage at 115/230 volts 100-0 volts
 3. ☐ All measurements made on a V.T. 110 suspension (agent responsibility) to the extent of testing 1 line.
 4. ☐ All voltages are DC unless other type is specified.
2. ☐ Indicator and detector - reason
 3. ☐ Indicator reference supply circuit
 4. ☐ May refer to voltage by terminal reference or voltage reading circuit
 5. ☐ All Diagrams with the same number are V.T.
 6. ☐ Indicator internal control circuit
 7. ☐ Unless otherwise indicated, measurements are in ohms and measurements are in microamps.
- ALL MEASUREMENTS MAY BE CONTINUED**

82SA, 82SA/A/AG SER 880 TO 1985
82SAR, 82SAR/AG SER 230 TO 410

FUNCTIONAL SCHEMATIC C

DIFFERENTIAL
VOLTMEETER

MODEL

82SA, 82SA/A, 82SA/AG, & 82SAR/AG

6 JOHN FLUKE MANUFACTURING COMPANY
BOUNTY LAKE, INDIANA, WASHINGTON



VOLTMETER



FEATURES

0.02% Accuracy

5 Microvolt Resolution

Infinite Input Resistance at Null
over entire 0 - 500 Volt Range

Standard Cell or
Zener Diode Primary Reference

Polarity Switch

Taut-band Suspension Meter

In-Line Readout with Automatic
Lighted Decimal

No Zero Controls



Model 825A, the new FLUKE differential voltmeter, provides $\pm 0.02\%$ accuracy and infinite input resistance at null over the entire 500 volt range.

As additional features, the Model 825A includes a polarity switch which enables the operator to make negative or positive voltage measurements with equal convenience and a 0 - 18 mv recorder output which makes the Model 825A particularly useful for monitoring the stability of virtually any DC source.

Model 825A presents the value of the unknown voltage on an in-line five decade digital readout with automatic illuminated decimal. As another important feature, unique circuit design makes the Model 825A virtually impossible to damage by accidental overload.

The basic elements of the 825A are a standard cell used as an internal reference, a stable 500 volt reference source, a precision five-dial Kelvin-Varley voltage divider, and a chopper stabilized null detector. If required, the Model 825A may be supplied with a zener reference in place of the standard cell. To further increase versatility, the 825A is designed to be used with the FLUKE Model 80 Series Precision Voltage Dividers in order to accurately measure voltages to 30 KV.

As an example of the exceptional versatility of the Model 825A, a few of its many applications are explained below:

Calibration, testing and stability measurements of regulated power supplies.

Instrument calibration.

DC voltage measurements in high resistance circuits as well as low resistance sources including photocells, standard cells, computers, power supplies, batteries, tube circuits, thermocouples, storage devices, etc. All of these measurements may be made with accuracy and without source loading error.

As a substitute for conventional potentiometers, particularly for voltages above 1.6 v where the loading effect of voltage attenuators cannot be tolerated.

AS A DIFFERENTIAL VOLTMETER:

ACCURACY

$\pm 0.02\%$ from 0.1 to 500 VDC
 $\pm 0.02\%$ + 25 μ V below 0.1 VDC

INPUT VOLTAGE RANGES

± 500 VDC
 ± 50 VDC
 ± 5 VDC
 ± 0.5 VDC

NULL VOLTAGE RANGES

10-0-10 VDC
 1-0-1 VDC
 0.1-0-0.1 VDC
 0.01-0-0.01 VDC
 0.001-0-0.001 VDC

INPUT RESISTANCE

Infinite at null from 0 to 500 VDC

MAXIMUM VOLTAGE DIAL RESOLUTION

10 microvolts

MAXIMUM METER RESOLUTION

5 microvolts

GENERAL:

INPUT RESISTANCE OF NULL DETECTOR

10 megohms on 10, 1, 0.1, and 0.01 V null ranges
 1 megohm on 0.001 V null range

REGULATION & STABILITY OF 500V REFERENCE

$\pm 0.0025\%$ for a $\pm 10\%$ line change
 $\pm 0.005\%$ per hour after 30 min. warmup

REFERENCE ELEMENT

Model 825A: Standard cell
 Model 825A/AG: Temperature-compensated
 Zener diode

OPERATING TEMPERATURE RANGE

Model 825A (Standard cell reference element)
 Within specifications from 55°F to 95°F,
 derated at 0.001%/°F outside these limits
 to 35°F and 110°F
 Model 825A/AG (Zener diode reference element)
 Within specifications from 55°F to 95°F,
 derated at 0.001%/°F outside these limits
 to 0°F and 125°F

STORAGE TEMPERATURE RANGE

Model 825A (Standard cell reference)
 10°F to 130°F
 Model 825A/AG (Zener diode reference)
 -65°F to 140°F

AS A CONVENTIONAL VTVM:

AC & DC ACCURACY

$\pm 3\%$ of range

BASIC INPUT VOLTAGE RANGES

± 500 VDC
 ± 50 VDC
 ± 5 VDC
 ± 0.5 VDC

ADDITIONAL RANGES USING NULL RANGES
WITH VOLTAGE DIALS AT ZERO

± 10 VDC
 ± 1 VDC
 ± 0.1 VDC
 ± 0.01 VDC
 ± 0.001 VDC

INPUT RESISTANCE

50 megohms on 500, 50, 5, 0.5 V ranges
 10 megohms on 10, 1, 0.1, 0.01 V ranges
 1 megohm on 0.001 V range

TERMINAL LINEARITY OF KELVIN-VARLEY
DIVIDER

$\pm 0.0005\%$ (5 ppm) from 0 to 0.1 of full scale
 $\pm 0.0005\%$ to $\pm 0.005\%$ (5 ppm to 50 ppm)
 from 0.1 full scale to full scale

RELATIVE HUMIDITY

0 to 80%

SHOCK AND VIBRATION

Meets requirements of MIL-T-945A

INPUT POWER

115/230 VAC $\pm 10\%$, 50 - 440 cps,
 70 watts (825A), 75 watts (825A/AG)

SIZE

Cabinet: 13" high x 9-3/4" wide x 14" deep
 Rack: 7" high x 19" wide x 14" deep

WEIGHT

Cabinet: Approximately 25 lbs.
 Rack: Approximately 22 lbs.

PRICE

Standard Cell Reference Element:

Cabinet Model (825A) \$590.00
 Rack Model (825AR) \$610.00

Zener Diode Reference Element

Cabinet Model (825A/AG) \$615.00
 Rack Model (825AR/AG) \$635.00



